


注意：正确操作本产品，请仔细阅读用户手册。

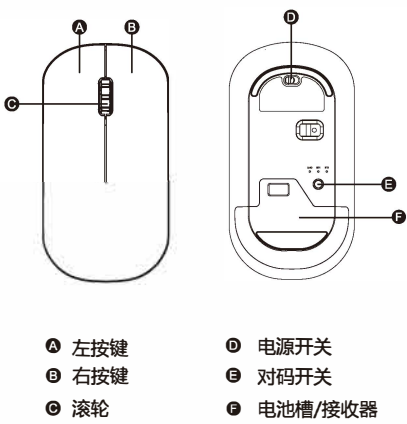

-
1. 请打开底部电源开关，装入一节5号电池，指示绿灯亮起。
2. 将接收器插入有USB口的设备上（请确保你的电脑设备USB接口可用）
3. 电脑识别后，即可以使用鼠标。

- 
- The diagram shows a BT module with two circular connectors. The left connector is labeled 'BT1' and the right one is labeled 'BT2'. A line points to the BT1 connector with the text 'BT1 蓝牙模块插孔'.
1. 请打开电源开关，短接蓝牙对码开关，切换到BT1通道，长按蓝牙对码开关3S，蓝牙指示灯闪烁进入对码状态。
2. 打开设置，打开蓝牙，点击蓝牙，进行搜索。
3. 直到发现“BT3.0 Mouse / BT5.2 Mouse”。然后点击配对连接。
4. 提示连接成功，你就可以舒适地使用你的鼠标了。

- 

The diagram shows the top of a Raspberry Pi 4 board with the BT module highlighted. Callouts point to the BT module, BT1, and BT2 pins.



The screenshot shows the Raspberry Pi desktop with various icons. The Settings icon is highlighted in the bottom left corner.

2. 打开系统偏好设置，点击蓝牙。



The screenshot shows the Bluetooth settings window. The Bluetooth icon is highlighted in the top left corner.

3. 直到发现 “BT3.0 Mouse / BT5.2 Mouse”，然后点击配对连接。



The screenshot shows the Bluetooth settings window with the BT3.0 Mouse / BT5.2 Mouse device listed. The device is highlighted in the list.

4. 提示配对成功，你就可以舒适地使用你的鼠标了。

1. 请打开电源开关，短按蓝牙开码开关，切换到BT1通道，长按蓝牙开码开关3S，蓝牙指示灯闪烁进入对码状态。

2. 在开始页面打开“设置”，然后在蓝牙。

3. 点击平板扫描，直到发现“BT3.0 Mouse / BT5.2 Mouse”然后点击连接。

4. 提示连接成功，你就可以舒适地使用你的鼠标了。

产品尺寸: 111 X 59 X 30 mm	蓝牙 工作电流: <12 mA
鼠标重量: 56 g	蓝牙 待机电流: <0.7 mA
2.4G 工作电流: <16 mA	休眠时间: 10 分钟
2.4G 待机电流: <0.7 mA	唤醒方式: 按键唤醒
按键个数: 3 键	休眠电流: 60 uA
速率: 1200	

请与售后服务人员联系

未经本公司的许可，禁止复制本用户手册的内容。

请不要打开或修理该设备，请不要在潮湿环境内使用设备，请用干布擦拭该设备。

本设备自购买之日起，提供1年保修服务。

- 1、请勿将设备暴露于液体和潮湿的环境中或使其淋雨，请勿在浴缸、水槽、桑拿房、游泳池或蒸汽房附近使用。
- 2、请勿将设备暴露于过高或过低的温度下。
- 3、请勿长时间放置在阳光直射的地方。
- 4、请勿靠近明火，如烹饪炉灶、蜡烛或者壁炉。
- 5、避免使用锋利器物刮擦产品，及时给产品进行充电以保证正常使用。

用户填写资料

公司或个人全称 _____

通讯地址 _____

电话 _____ 邮编 _____


所购产品名称及型号 _____

购买日期 _____

本有限质保不适用于以下原因导致的问题或损坏：


- (1) 意外事件、误用、操作不当或任何未授权的维修、改装或者拆卸；
- (2) 操作或维护不当，使用过程中违反反应说明或连接不适当的电源；
- (3) 或者使用并非本公司设计的消耗品（如备用电池），但适用法律禁止此类限制的情况除外。

Note: Please read the user manual carefully before you start using this product

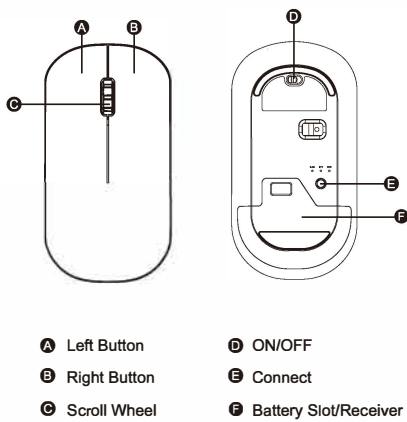

-
1. Please turn on the power switch at the bottom, install an AA battery, and indicate the green light.
- (Make sure your computer device USB interface is available)
2. Take out the receiver and plug it into the USB port.
3. After the computer is recognized you can use the mouse.

-
- The diagram shows the BT3.0 Mouse (left) and BT2.0 Mouse (right). The BT3.0 Mouse has a USB connector and a small circular button. The BT2.0 Mouse has a USB connector and a small circular button. The three screenshots show the Windows 7 Bluetooth settings interface. The first screenshot shows the 'Bluetooth' tab selected. The second screenshot shows the 'Bluetooth' tab selected, and the 'BT3.0 Mouse' and 'BT2.0 Mouse' are listed under 'Available devices'. The third screenshot shows the 'BT3.0 Mouse' and 'BT2.0 Mouse' are listed under 'Paired devices'.

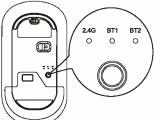- 

1. Turn on the power switch, press the Bluetooth alignment switch, switch to the BT1 channel, and hold down the Bluetooth alignment switch for 3S. The Bluetooth indicator blinks and enters the alignment state.
- 

2. Please open system preferences and click on Bluetooth.
- 

3.Until the "BT3.0 Mouse / BT5.2 Mouse" is found ,Then click on the pairing connection.
- 

4. There is a tip for connecting successfully, you can use our mouse comfortably .

1. Turn on the power switch, press the Bluetooth alignment switch, switch to the BT1 channel and hold down the Bluetooth alignment switch for 3S. The Bluetooth indicator blinks and enters the alignment state.
2. Open "Bluetooth" into search mode.
3. Until the "BT3.0 Mouse / BT5.0 Mouse" is found. Then click on the pairing connection.
4. There is a tip for connecting successfully, you can use your mouse comfortably.

Product size: 111 X 59 X 30 mm Number of keys : 3 keys
2.4G working current : <16 mA Mouse weight : 56 g
2.4G standby current : <0.7 mA DPI : 1200
Bluetooth working current : <12 mA
Bluetooth standby current : <0.7 mA
Sleep time : 10 minutes
Awaken way : Press key
Sleep current : 60 uA

Please contact the after-sales service.

It is forbidden to reproduce any part of this manual without the permission of seller.

Do not open or repair this device, Do not use the device in a damp environment. Clean the device with a dry cloth.

The device is provided with one-year limited hardware warranty from the purchase day.

1. Please keep the keyboard away from liquid or humid environment such as saunas, swimming pool, steam room and don't let the keyboard get wet in the rain.
2. Please don't expose the keyboard at too high or too low temperature condition.
3. Please don't put keyboard under sun for a long time.
4. Please don't put keyboard close to the flame, such as cooking stoves, candles or fireplace.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

User information

Company or personage full name _____

Contact address _____

TEL _____ Zip _____

The purchased product name and model NO. _____

Purchased date _____

This reason due to the product broken and damage is not include on the warranty.

- (1) accidents, misuse, improper operation, or any unauthorized maintenance, alteration, or disassembly;
- (2) Improper operation or maintenance, violation of product instructions or improper connection of power during use;
- (3) Or use consumables (such as spare batteries) that are not provided by the company but applicable laws. Except where such restrictions are prohibited.

Certification
 Inspection : _____
 Production date : _____