 
 
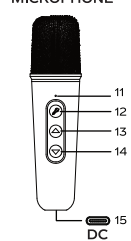 


Wireless Retro Speaker & Karaoke Mic - Instruction Manual

250 mm

 CC-KSMR Operation manual M&S Accessory Network declares that radio equipment CC-KSMR is in compliance with Directive 2014/53/EU. The EU Declaration of conformity is available at https://gabbagoods.com/pages/compliance-documents	1.Introduction Congratulations, and thank you for purchasing the Wireless Retro Speaker & Karaoke Mic! Before using you should familiarize yourself with the Karaoke Vibes mic, speaker and features addressed in this manual.  COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved. Safety Rules - Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual. - Be wary of any edges, uneven surfaces, metal parts, accessories, and its packaging to prevent any possible injury or damage. - Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty. - Do not use any diluent or volatile liquid to clean the product. - Do not use the product in a hazardous location.	2. Features & Contents Features: - Wireless Microphone - Stylish Retro Design - Up to 6 Hours of Playtime - Rechargeable Battery Contents:  Speaker Microphone  INSTRUCTION MANUAL	3. Speaker Controls & Ports TOP OF SPEAKER  - Power Button & Volume Control - Previous Track Selection - Play / Pause - Next Track Selection - Mode Button BACK OF SPEAKER PORTS  - Auxiliary Port - USB Flash Drive - Micro SD Slot - Type-C Charging Port - LED indicator light	4. Microphone Controls & Parts MICROPHONE  - LED indicator light - On / Off Button - Volume up - Volume Down - Type-C Charging Port	FCC Compliance Statements FCC ID: 2AFXXGG-KSMRM1C This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
5. Charging the Speaker & Microphone - The Karaoke Vibes Speaker and Mic are equipped with a rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied Type-C charging cable to charge the speaker and microphone. - Connect the included Type-C charging cable to the charging port of the speaker, and the USB end to a PC / Laptop or wall charger not exceeding 5Volts. The LED light will illuminate while the speaker / microphone is charging. The Battery should be fully charged the first time for up to 3 hours. - Once the battery is fully charged the LED light will turn off. - Once Fully charged, disconnect the charging cable. Your speaker / microphone is now ready for use. - When the battery is low the speaker will prompt " Battery Low " when this occurs please recharge the speaker.	6. Speaker & Microphone Pairing Pairing Speaker to a Bluetooth Enabled Device On your Smartphone / device be sure that the Bluetooth is powered on. Power on the speaker and will hear the following voice prompt " Bluetooth Pairing Mode. Open the Bluetooth connection settings on your device and make sure that the Bluetooth is turned on. Your device will start to search for the Speaker. Find " Karaoke Vibes" in your device list, click on it to connect. Once connected successfully you will hear a voice prompt, " The Bluetooth device is connected successfully. Microphone Pairing To pair the wireless microphone to the speaker, first be sure that the speaker is powered on. Then press and hold the power button on the microphone and the Blue LED light will start to flash rapidly, the Microphone will automatically connect to the speaker, once connected the LED light will remain Blue.	7. Speaker Key Function & Features Power On/Off Turn On: Press and hold down the power button (Volume Knob) for 2-3 seconds to power on the speaker. The LED indicator will start to flash blue rapidly. Power Off: Press and hold down the power button (Volume Knob) for 2-3 seconds to power off the speaker. Volume Turn Knob to the left or right to increase/decrease the volume. Pause/Play Press the Play/Pause Button To Stop or Restart the Sound. Adjusting Volume & Previous song/ Next song Short press the previous track button to return to previous track. Short press to the next track Modes Double click the Mode Button to enter into/exist TWS.In the FM mode: double click to come into auto-search	8. Microphone Key Functions & Features Power On/Off Press and hold On/Off Button for 3 seconds to turn on/off the microphone. The blue Indicator Light will flash quickly, and will stay on after the connection is successful. Volume Press and hold the volume up, there is a prompt sound at the maximum volume, and short press to switch to the next track. Long press to decrease the volume, short press to switch to Pause/Play Short press the On/Off Button to pause the microphone. The blue light flash slowly. Short press again Microphone Features: Double click the microphone button to switch between the following modes: Bluetooth Mode FM Radio Mode USB Flash Drive Micro SD Card Auxiliary Mode Click the microphone button 3 times, to change between 3 different voice modes.	Support If you have problems with your device, please consult the instructions in this manual or send an email to info@Gabbagoods.com Manufacturer Warranty We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please email us at info@Gabbagoods.com or visit us on the web at www.Gabbagoods.com CC-KSMR  Distributed by: M&S Accessory Network 10 W. 33rd Street New York, NY 10001 Designed in the U.S.A. Made in China FCC ID: 2AFXXGG-KSMR  www.GabbaGoods.com Technical Support Keep All Relevant Information for Future Reference.	FCC Radiation Exposure statement This equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

143.4 mm