



www.whipsmarttoys.com

All rights reserved. © XGEN, LLC. Horsham, PA 19044

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK.

Phone: +44 2037692960,

E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person: ArangaRanga SL, Paseo de la Castellana 194,
Madrid, 28046, Spain.

Phone: +34910054258, E-Mail:


EUresponsibleperson@arangaranga.com

whip**SMART**®

REMOTE CONTROL


ANGLE MASTER GO

With Suction Stabilizers

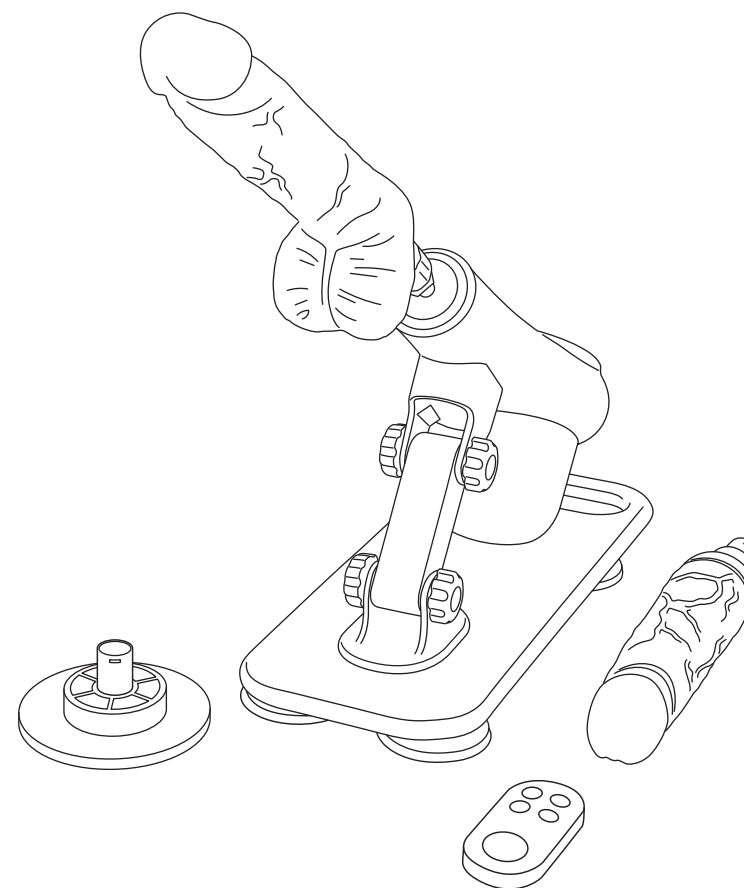

INSTRUCTION MANUAL

OVERVIEW

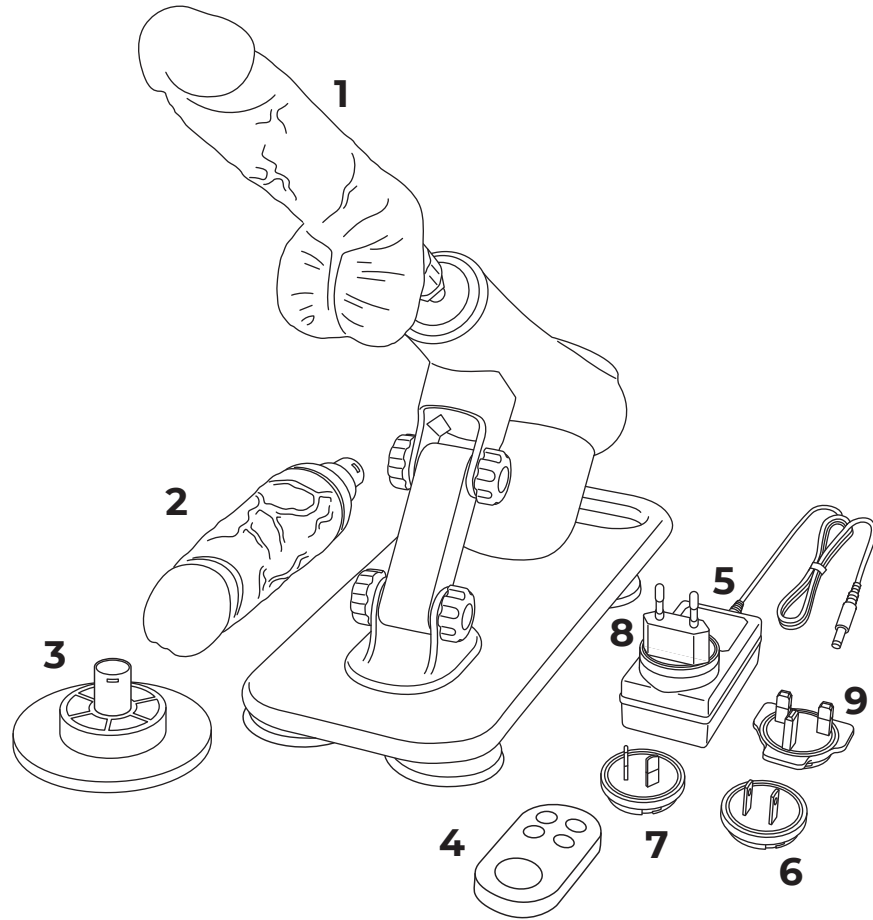

1. 8½" Dildo with Balls
2. 7" Realistic Dildo
3. Detachable Mount for suction toys
4. Remote Control
5. Power Adapter (**DC24V/1.5A**)


6. US Plug
7. AUS Plug
8. EU Plug
9. UK Plug

USER INSTRUCTIONS


1. Clean Your Attachments Before and After Use:

Wipe the main body clean with a towel that is lightly moistened with warm water and soap, or use a non-alcohol-based toy cleaner and cloth. Then, dry it with a soft towel.

2. Before Use

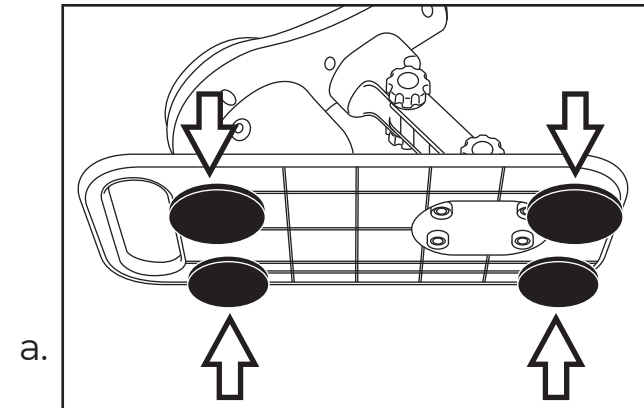

a.

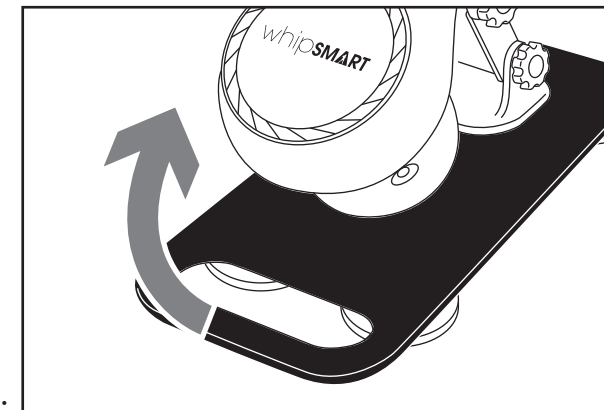


b.


- a. There are four suction cups at the bottom of the machine. Before use, please ensure that the machine is firmly attached to a smooth surface to avoid injury during use.
- b. After use, you can detach the suction cups by pulling the handle at the back of the machine base.

3. Securing Dildo Attachments


- ① 8½" Dildo with Balls ② 7" Realistic Dildo ③ Detachable Mount

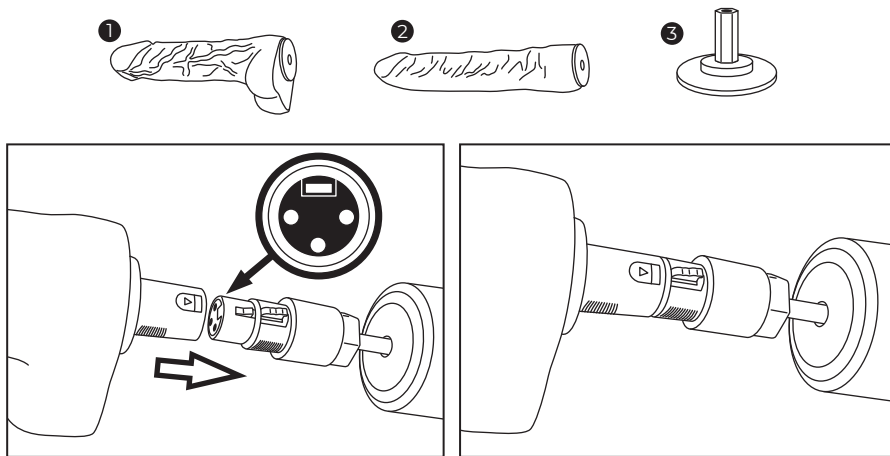


- Select one of the included dildo attachments. Align the base of the dildo with the socket of the telescopic rod and securely attach it. Ensure that the rectangular hole in the base of the dildo fits tightly onto the buckle of the telescopic rod. You will hear a "click" sound when it is securely fastened. To remove the dildo, simply press the button on the connector of the telescopic rod.
- Lube before use: It is recommended to lube yourself with a water-based personal lubricant before use for a more pleasurable and safe experience.

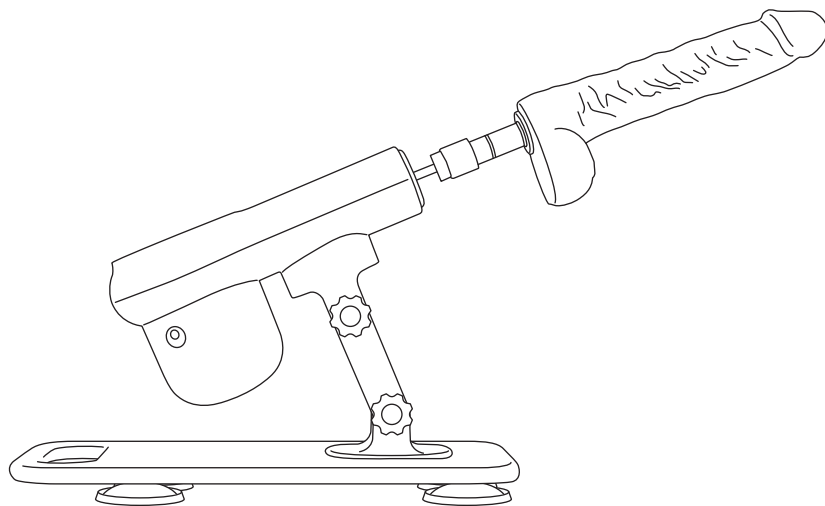

4. Using The Detachable Mount


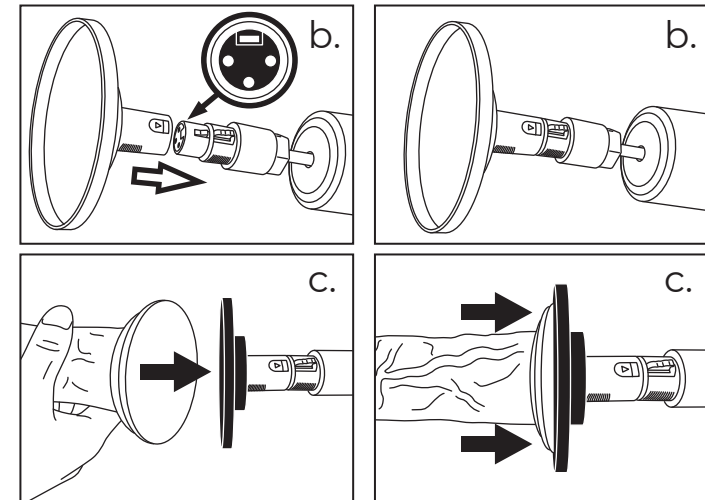


- A detachable mount with a flat base is included with your sex machine. This allows you to use the item with any suction-base toys.
- Align the base of the mount with the socket of the telescopic rod and securely attach it. Ensure that the rectangular hole in the base of the mount fits tightly onto the buckle of the telescopic rod. You will hear a "click" sound when it is securely fastened. To remove the mount, simply press the button on the connector of the telescopic rod.
- Select a toy with a suction base of your choice (not included) and attach it onto the flat side of the mount by pressing it down. Do not use excessive force.
- Please check and make sure the toy is attached securely to the mount.

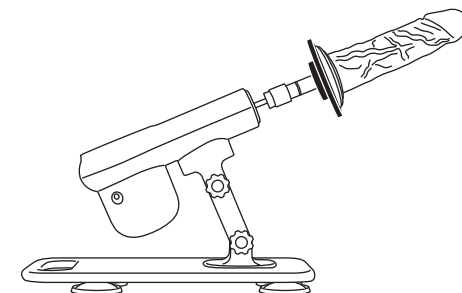


5. Adjust Angle of Sex Machine

To adjust the angle of your Premium Thruster, slowly loosen the 4 angle adjustment knobs and tilt the main body of the machine to your desired angle. Then, tighten the 4 knobs to secure the machine and avoid any mishaps during use.

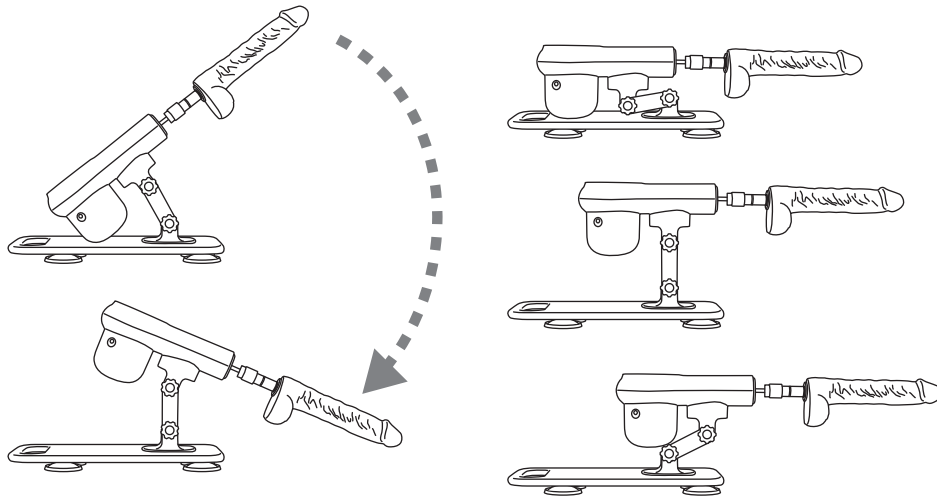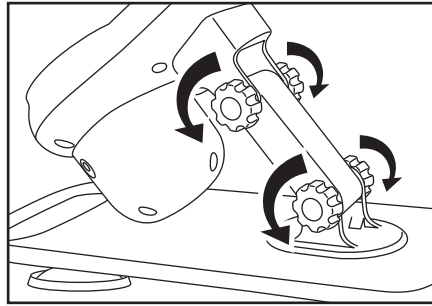


6. Installing Remote and Power

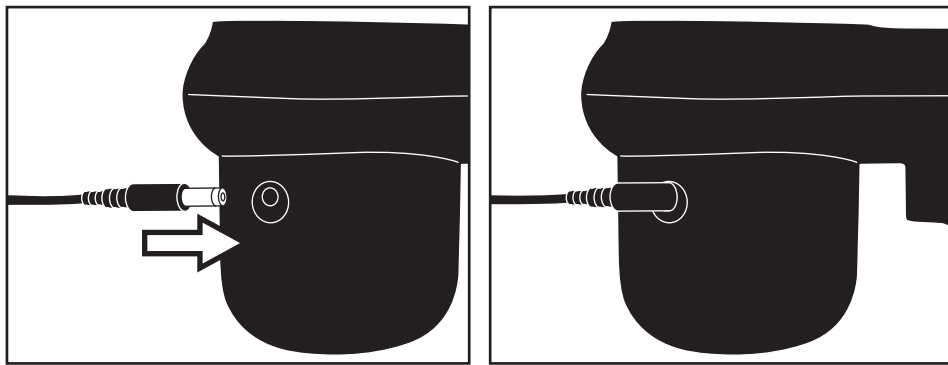


a. Connect the power adapter and plug it into a power supply as shown in the diagram above


UNIVERSAL ADAPTER INSTRUCTIONS

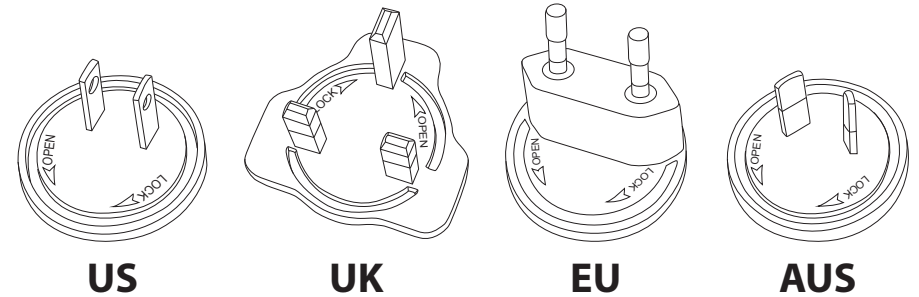

1. Choose and attach the appropriate plug adapter for your region to the power adapter.

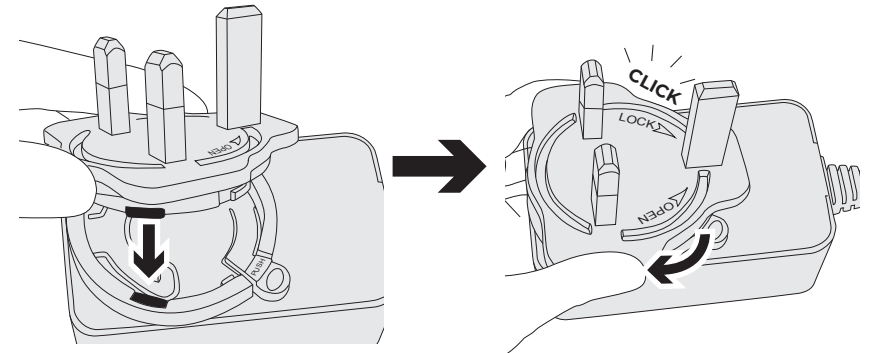


2. Insert prongs as shown and rotate clockwise to lock. Once secure you will hear the prongs "click" into place.

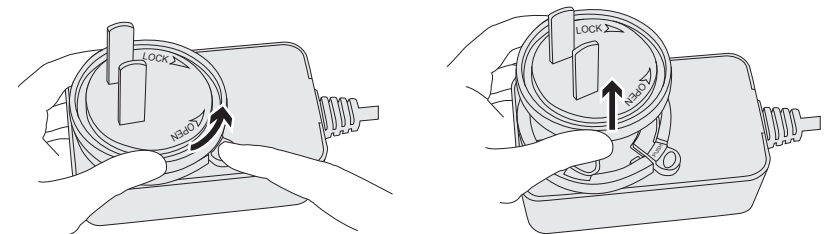

3. Rotate prongs counter-clockwise to unlock and remove.

REMOTE CONTROL

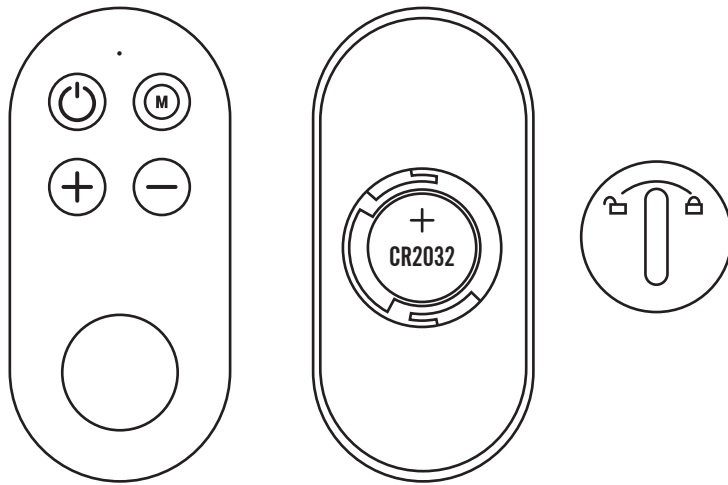

1. The remote uses 1 x CR2032 Coin Battery (included).
2. Press the  button to turn on the sex machine. Press  to pause the machine in any mode or speed. Press it again to restart the thrusting from speed level 1.
3. To adjust the thrusting speed of the machine, Press the +/- buttons to cycle through thrusting speeds.
4. Press the M button to cycle through the 20 thrusting patterns. After the 20th pattern, the machine will stop thrusting. Pressing the M button again will restart the device from pattern 1, or press  button twice to resume thrusting from pattern 1.

FCC WARNING STATEMENT:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING:

IMPORTANT: Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increase risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using massaging device designed for home use.

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Always unplug this appliance from the electrical outlet immediately after using or before cleaning.

For adult use only. For external use only. Remove all scarves, neckties, necklaces, and jewelry before using this massager.

CARE AND MAINTENANCE

Clean the machine with a soft, damp cloth. Do NOT fully submerge or clean with an alcohol or chemical-based cleaner

SPECIFICATIONS:

Style no.: WS1074

Product name:

WHIPSMART REMOTE-CONTROLLED SEX MACHINE

Materials

Machine materials:	ABS plastic, Metals
Realistic Dildos:	TPE
Telescopic distance:	3 inches
Max Telescopic Speed:	350rpm
Voltage:	100V-240V
Rated Voltage:	DC 24V/1.5A
Power:	36W
Remote:	CR2032

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



RoHS
2002/95/EC



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

Email us at sales@xgenproducts.com for any unanswered questions

Designed and Developed by **Whipsmart®**

Made in China

SOLD AS A NOVELTY ONLY. This novelty is sold without guarantees of any kind, either expressed or implied. This product is a novelty only, for novelty use only, and you assume all risk of injury, damage or other for uses. Manufacturer will assume no liability for injury occurring from use of this product. By purchasing this product, You waive any claim based on use and release manufacturer from any liability for use as this is a novelty product.

In association with the product, XGEN LLC and/or manufacturer makes no warranties of any kind, either express or implied, including but not limited to warranties of merchantability and fitness for a particular purpose, of title. Any particular use of the product by a user is at the user's risk.

NO REPRESENTATIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR A SPECIFIC PURPOSE OR OF ANY OTHER NATURE ARE MADE WITH RESPECT TO INFORMATION OR THE PRODUCT TO WHICH INFORMATION MENTIONS. IN NO CASE SHALL THE INFORMATION BE CONSIDERED A PART OF OUR TERMS AND CONDITIONS OF SALE.