

USER MANUAL

WIRELESS MINI SPEAKER

COMPONENTS INCLUDED

Mini Speaker - USB power supply cable & 3.5mm audio cable - Remote control

OPERATION GUIDE

- Activate Bluetooth mode: Turn on the speaker, you will hear a sound that indicates "Bluetooth mode"; find in your device the signal "BBQ-SPEAKER" and pair it with your device. A sound will indicate that the connection is successful (Speaker without Bluetooth no this function).
- Activate Line In mode: Turn on the speaker, press "MODE" button until you hear "Audio Input"; plug the 3.5mm audio cable into the Line In port on the speaker and into your device [Compatible with MP3, MP4, computers, mobile phones and other multimedia equipments].
- Activate MP3 player mode: Turn on the speaker and insert a USB or SD card, the speaker will automatically start playing MP3 format files.
- Activate FM Radio: Turn on the speaker, press "MODE" button until you hear "Radio Mode" and it will enter FM radio. Press **[F/I]** key to enter into automatically search and store channels; press **[K/V]** key to choose the previous channel or **[K/V]** key for the next channel.
- MODE key: press this key in order to switch to different working modes [Bluetooth Mode, Radio FM Mode, Line In Mode].

1

- To navigate between your music, press **[K/V]** key to choose the previous file and **[K/V]** key for the next file. Press for a few seconds the **[K/V]** key to decrease the sound level and press **[K/V]** key to increase the sound. Press **[P/I]** key to play and pause your music.

- Charge Mode: Insert the power cable into the DC5V port and the USB side connects to a DC5V charger or computer.

SPECIFICATIONS


- Bluetooth: Compatible Bluetooth 2.0/3.0 (Speaker without Bluetooth no this function)
- Output voltage: DC 3.3-3.7V
- Input voltage: DC 4.2-5.0V
- Power supplier: power adapter 5.0V OR computer by USB cable

SAFETY CAUTIONS

- Keep out of reach of children; in order to avoid electrical shocks or suffocation.
- Do not spill any liquid on the product and do not touch with wet hands to avoid getting shocked.
- Do not disassemble, try to repair or reconstruct the product.
- Do not place a flame source such as candles close or on top of the speaker.
- Do not locate the speaker or cord near heat sources such as radiators, heaters, air duct or direct sunlight.
- Stop using the speaker in the following situations:
high temperatures, smoke, burning smell, unusual noise or if you notice fire coming from product.

2

REMOTE CONTROL

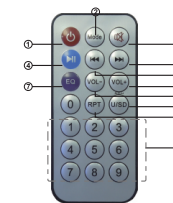

1. power on/off
2. mode change of radio, SD card, USB, audio input, Bluetooth
3. Mute
4. pause/play, automatically search and store channels under FM radio
5. previous file, previous channel under FM radio
6. next file, next channel under FM radio
7. 7 kinds of sound-effects switch
8. decrease volume
9. increase volume
10. USB, SD card switch
11. Loop choosing
12. song file choosing

3