

此页为标注说明（不印刷）

材质：铜版纸

尺寸：55*85mm

印刷：单黑色，双面印刷，风琴折

此页为标注说明（不印刷）

USER MANUAL

Specifications

Battery Capacity	4500mAh 16.2Wh
Type-C Input	5V $\overline{=}$ 2A
Type-C Output	5V $\overline{=}$ 2A
Wireless Output	5W
Dimensions	114.4 x 92.7 x 36.8mm

Package Contents



Power Bank



Charging Cable

 


Magnetic Ring



User Manual


Product Features

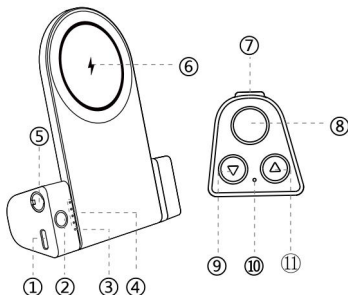

- ① Type-C Input and Output
- ② Power Button
- ③ Wireless Charging Indicator
- ④ 4-Level Power Indicators
- ⑤ Tripod Screw Hole
- ⑥ Magnetic Wireless Charger
- ⑦ Remote Control Power Button
- ⑧ Remote Shutter Button
- ⑨ Down Button
- ⑩ Remote Control Indicator
- ⑪ Up Button

Operating Instructions

 1. Charging the Power Bank



- 1). Connect the Type-C cable (included) between power bank and the wall charger or power adapter (not included). It will start charging automatically.
- 2). Fully charge the power bank before using the power bank for the first time. Recharge the power bank once every three months when not in use or seldom used.
- 3). During charging the power bank, the power indicators will flash. Each LED light indicates about 25% of the available battery capacity. When fully charged, all power indicators will always be on.

2. Charging the Devices



1). Wired charging

Press the power button, the power indicators are on. Connect the charging cable between Type-C port of the power bank and your device to start charging.

During charging the device, the power indicators are on.

 
2). Wireless charging

Place the device in the center of the wireless charging area. If your device supports MagSafe technology, The power bank will automatically hold it thanks to strong magnets.

Press the power button, the wireless charging indicator is on, which means wireless charging is in progress.

P.S., Make sure your device is fit for Qi standard receiving equipment.

3. Remote Control

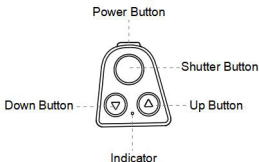

To set zoom on an Apple device:

If your device runs on Apple's operating system, you must enable Zoom to use this remote control.

Go to Settings > Accessibility > Zoom, then turn on Zoom

Charging the Remote Control:

- 1). Place the remote control in its charging dock.
- 2). Press the power bank's power button.
- 3). Remote control indicator (Red LED) shows charging status.
- 4). Remote control indicator turns off when fully charged.

Bluetooth Pairing:

1). Press and hold the remote control's power button 2-3 seconds to turn on.

2). Blue LED will blink slowly (pairing mode).

3). Enable Bluetooth on your device.

4). Select "F22" from available devices.

5). Solid blue light indicates successful pairing.

P.S.: Disconnect from previously paired device before new pairing.

Power Button:

1). Power On/Off: Long press (2-3 seconds) to turn on/off.

2). Photo or video mode: Press this button to enable autofocus.

3). Short video apps:

Single Press: Pause/play.

Double press: Like the video.

Shutter Button:

1). Photo mode.

Single Press: Take photo

Double Press: Switch between front/rear cameras(This feature is not compatible with all devices or systems).

2). Video mode.

Non-Apple devices:

First Press: Start recording

Press again: Stop recording

Apple devices:

Press & Hold: Start recording

Release: Stop recording

Up Button:

1). Short video apps:

Press for next page.

Press and hold to increase the device's volume.

2). Photo or Video Mode: Double press to zoom in.

Down Button:

1). Short video apps:

Press for previous page.

Press and hold to decrease the device's volume.

2). Photo or Video Mode: Double press to zoom out.

Troubleshooting

1. Press the power button, if the first power indicator is flashing, it means the battery is running out soon, please recharge.
2. This power bank can automatically identify equipment that need to charge, If no device is being charged, the power bank will be turned off after 30 seconds.
3. For wireless charging, your device must be equipped with a Qi wireless receiver. The device can automatically identify a Qi-compatible device placed on it. If the center point of the receiving terminal is deflected over 8mm from the center point of transmitting terminal, the power bank will turn off automatically.
4. If wired charging is not working properly, please try a different charging cable, since the connector may become loose due to wearing.
5. During charging, the device may become warm due to high currents and resistance, especially during wireless charging. To reduce temperature, avoid running intensive applications or using GPS on your mobile device when charging.

Cautions

- 1.The power bank will generate heat when charging. Always charge in a well-ventilated and open-air area.
- 2.Do not charge under pillows, blankets, clothing or on flammable surfaces. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
- 3.Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
- 4.Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
- 5.Do not short-circuit the power bank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- 6.Do not operate the power bank if it has been wet or damaged, to prevent against electric shock, explosion and/or injury.
- 7.Keep the power bank dry to avoid short circuits or other damage to electronic components.
8. Keep the power bank away from high heat and flammable liquids and gasses. Avoid using in environment temperature above 45°C or below 0°C.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.