

日期/Design Date: 2026.4.11

尺寸: 45x65mm
红色是折痕线 风琴折

正面
(front)

 
USER MANUAL

Magnetic Mini Speaker


Specifications

Model No.	M53
USB-C Input	DC 5V
Loudspeaker Output	3W
Operating Distance	≤10m
Frequency Response	20Hz-20KHz
Signal-To-Noise	≥75dB
Distortion	≤1.0%
Dimensions	63.9x47.8x36mm

Package Contents



Product Features

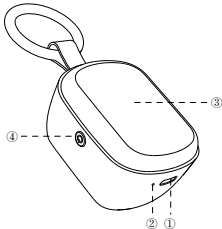

- 1. USB-C Input
 - 2. LED Indicator
 - 3. Magnetic Plate
 - 4. Power Button
- Long press to turn on/off the speaker.
Short press to play/pause the audio

Operating Instructions

- 1. Charging the Speaker**
Use the included Type-C cable to connect the speaker to a wall charger or power adapter(not included). When charging, The LED indicator will be on. Once fully charged, the charging indicator will be off.
- 2. Playing Audio Mode**
1). Turn on the speaker. There is a prompt tone, the LED indicator flashes blue slowly, and then enter Bluetooth pairing mode.
2). Turn on the Bluetooth function on your phone or other device, search for 'M53' on the list and then pair it. There is a prompt tone when the pairing is successful. Audio played through the connected device will be heard from the speaker.
P.S.: Disconnect the speaker from other Bluetooth device before pairing.

背面
(Back)

3. TWS (True Wireless Stereo) Mode

- 1). Turn on the two speakers that need to be connected to TWS mode.
- 2). Short press the power button of one speaker three times continuously to enter TWS mode. There is a prompt tone when the connection is successful.
- 3). Turn on the Bluetooth function on your phone or other device, search for 'M53' on the list and pair it. After successful pairing, both speakers will emit sound simultaneously. When playing the music on your device.
- 4). After a successful connection, The two speakers will automatically enter the TWS mode when turning on them next time.
- 5). Short press the power button of one speaker three times continuously to exit the TWS mode.

4. Selfie Mode

- Successfully pair your phone with the speaker via Bluetooth, Open the camera app on your phone.
- 1). Enter Selfie Mode: Double-press the power button of the speaker.

- 2). Take a photo: Single-press the power button of the speaker.
 - 3). Exit Selfie Mode: Double-press the power button of the speaker again.
- P.S.: The above steps apply to Apple phones, Samsung phones and other phones. Some phones do not require double-press the power button of the speaker to enter or exit selfie mode, and can take photos by pressing the button once.

Warm Tips

1. Bluetooth connection and transmission may be affected by the surrounding environment like trees, metal and some other materials, they can absorb or block the signal, so the distance of data transmission may be influenced as well.
2. Please charge the speaker fully at the first time. when the power of speaker gets lower, the sound will be not as good as the sound in normal state. Charge it right now.

3. Please do not expose the speaker into the high temperature environment.

FAQs

1. Why can not turn on the speaker?
A: Check if the battery is in low. Recharge and then try to turn on again.
2. Why can not charge the speaker?
A: Make sure the power supply or wall charger is working and the output of the power supply is DC5V. Make sure the charging cable and connectors of the cable is good.
3. Why is there no sound?
A: Make sure the speaker is paired with the right Bluetooth device. Disconnect the speaker from other Bluetooth device before pairing. Turn up the volume of the phone.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.