



 
Model: FPJ1080PS

PROJECTOR 1080P WITH SOUNDBAR BUNDLE



Fugoo Movie theater
Model # FPJ1080PS

Fugoo Movie theater soundbar
Model # FPJ1080PS-BAR

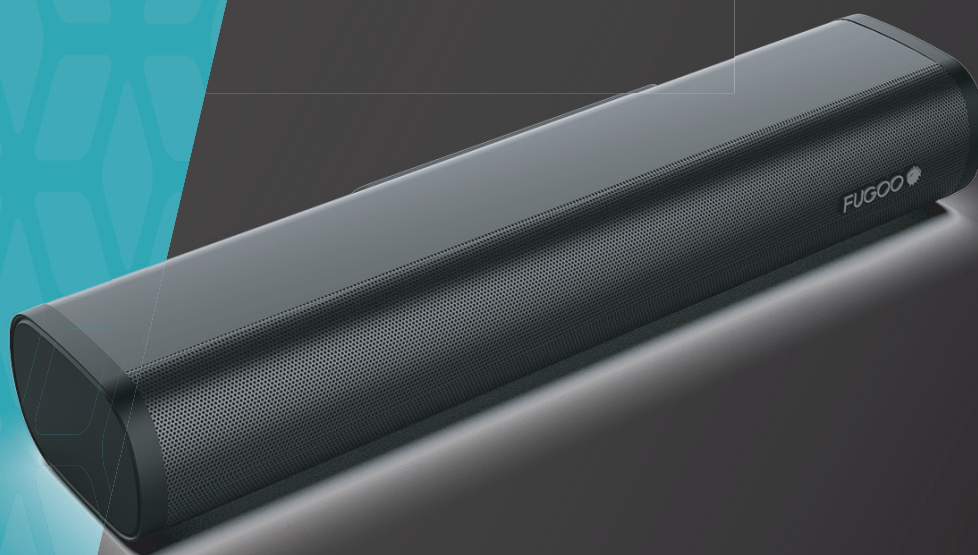

User Manual

(Note: Please read this manual carefully before use to avoid danger or damage to the product due to improper operation)

BEGINNING WORDS

First of all, thank you for your support!

You can fully understand the use and operation of this product by reading this manual. This hand-held projection equipment is small, portable and powerful, which is specially designed for household, entertainment, business and other application environments. It allows you to enjoy the fun of large screen display anytime and anywhere, and you are welcome to share the fun and ideas of using it with us.

If you have any questions about this product, welcome to contact our professional after-sales service personnel, we will provide you with cordial service.



CAUTION!

To prevent electric shock, please do not open the housing, There is no parts that can be repaired by the customer. Please ask for professional staff if repair is needed.



WARNING!

To prevent fire or electric shock, please do not expose the device into rain, water or humidity.



WARNING!

In a residential environment, running this device may cause radio jamming.



CAUTION:

Do not disassemble, impact, squeeze or put into the fire
Do not place it in the hot environment.
Do not use it after immersing.
Please use the designated charger to charge.

 


WARNING!

To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle. Where the mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

IN THE BOX

- 1 × Projector
- 1 × Projection Screen 120"
- 1 × Sound bar
- 1 × Remote Control
- 1 × USB Type-C to HDMI Cable 3ft
- 1 × 3.5mm Audio Cable 3ft
- 1 × USBType-C to USB-A charge cable 3ft
- 1 × A-Micro USB cable for Roku stick
- 1 × HDMI extender 7.87"
- 1 × AC Power cable
- 1 × Manual
- 1 × QSG
- 1 × Carrying Pouch
- 1 × Tripod
- 1 × Stone bag
- 1 x Battery

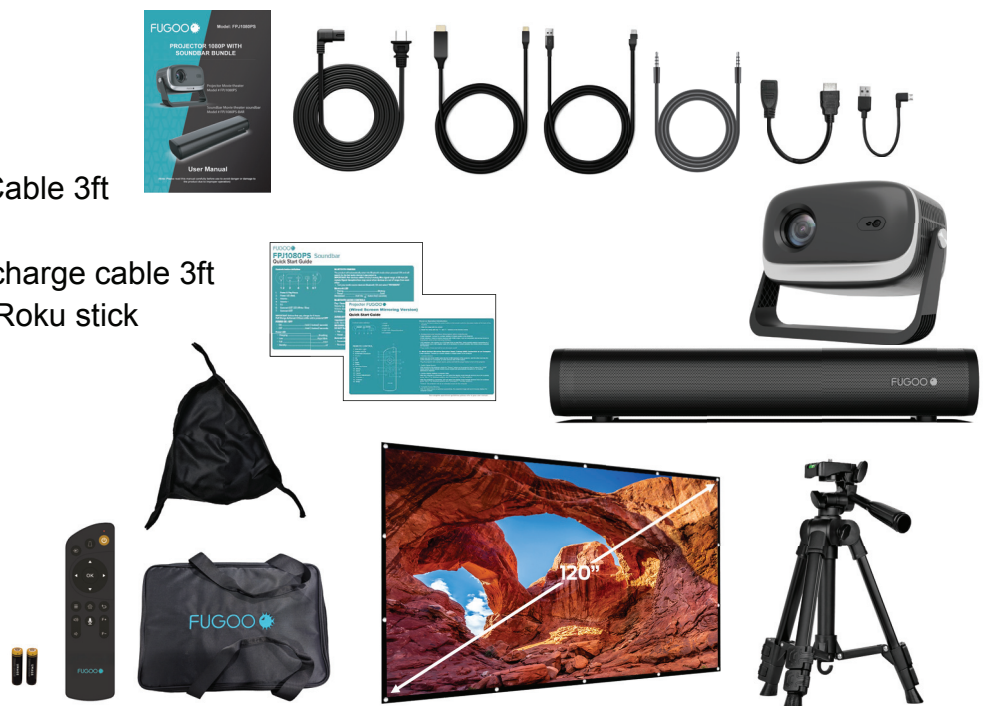

IMPORTANT SAFETY PRECAUTIONS

Important: In order to get the best viewing effect, it's suggested that you use the product in a dark room.

Warning: Following safety instructions can sustain product's lifespan and prevent it from firing or electric shock, so please read them carefully and pay attention to all warnings.

Do not install it in a place with poor ventilation.

Do not install it in a hot or damp place.

 
Do not block its ventilation holes (Intake or Exhaust).

Do not install it in a dusty or smoky place.


Do not install it near to the temperature/smoke sensor since it might take the sensor fail to work.

Do not install it in a position directly blown by air condition. Otherwise it might be malfunctioned because of the water & vapour condensation or high temperature.

Note: In order to maintain the performance and reliability of the projector, please leave at least 30cm of space around the projector.

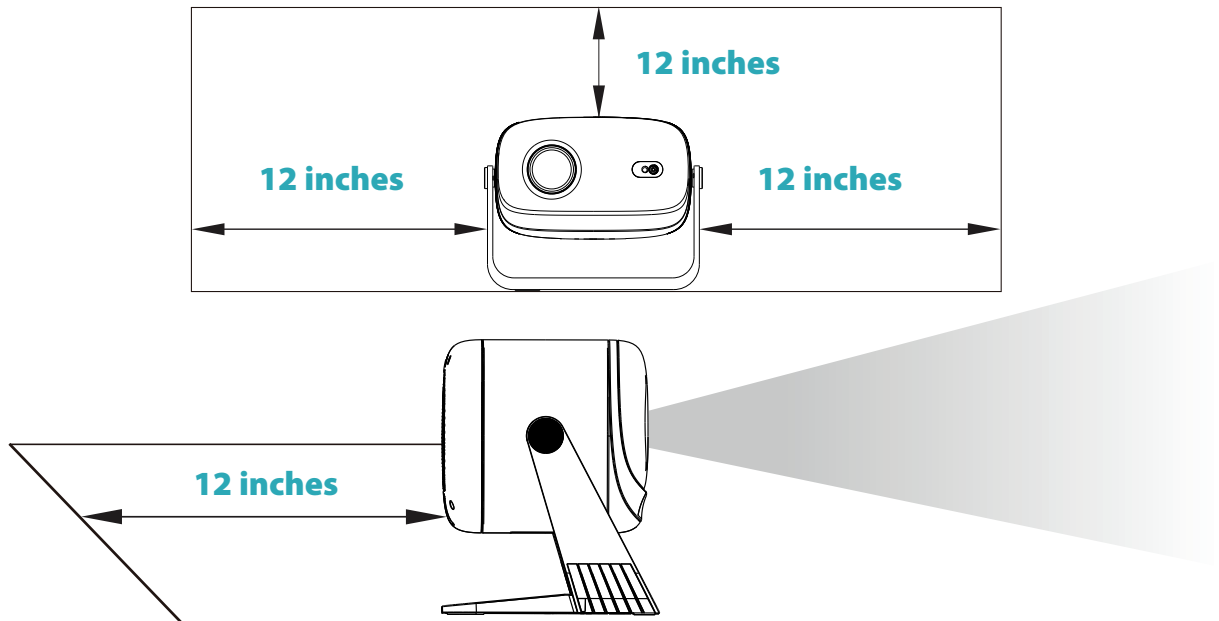


 Note: The projector's light is very bright, so please do not look at it directly or point its light to your eyes in case of causing visual damage.

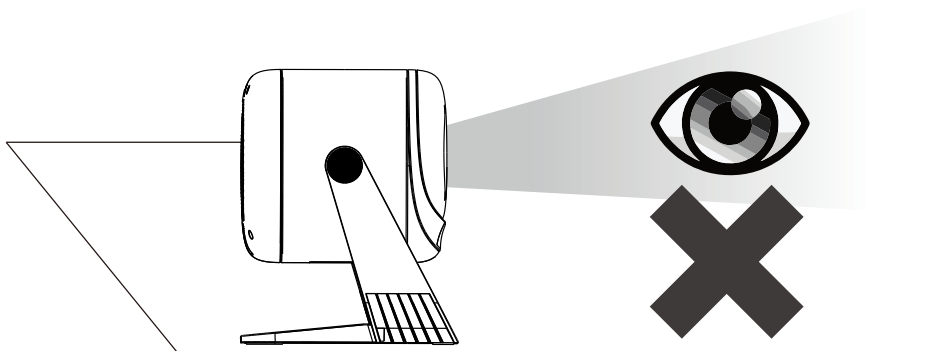

PRODUCT INTRODUCTION

 Product Description

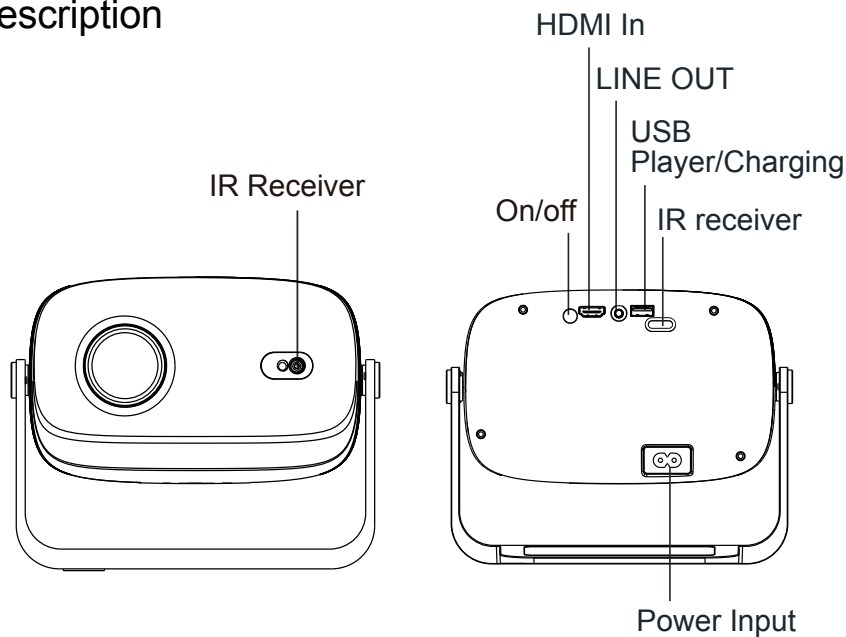


REMOTE CONTROL

- | | |
|-----------------------|----------------------|
| 1. Indicator Light | 9. OK/Play/Pause |
| 2. Power On/Off | 10. Menu |
| 3. Automatic keystone | 11. Back |
| 4. Source | 12. Home |
| 5. Up | 13. Focus Adjustment |
| 6. Left | 14. Volume + |
| 7. Right | 15. Volume - |
| 8. Down | 16. Mute |

Shortcut Button for Remote Control:

1. Projector Basic Setting: ⑩
2. Electric Focus Adjustment:

 Warm Tips for Electric Focus: Click F+ for smaller display and Click F- if you changed the display image to a larger one.*

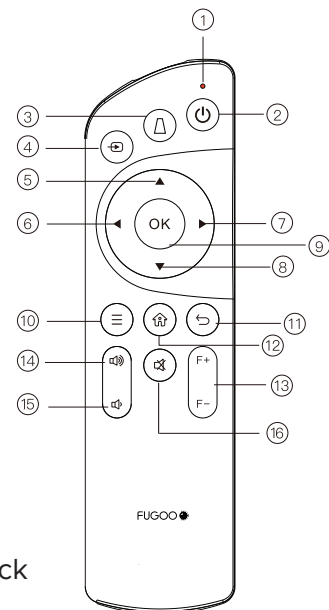


Note: Due to ongoing design improvements, the appearance, screen printing, or labeling on the remote control may differ slightly from the actual product. In case of discrepancies, please refer to the actual product as the final reference.

Be cautious when using the remote control. Do not drop it, trample on it, or spill any liquid into its body. Do not put the remote control near to any heat source. Do not expose the remote control under sunlight. Do not put the remote control in a damp place.

INSTALLATION AND DEBUGGING

1. Projector Installation


 
Place the projector on a firm, level base.

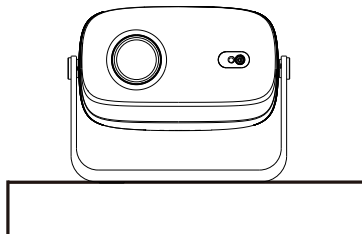

2. Focus Adjustment

When the image is blurred, press **F+** or **F-** button on the remote to adjust the focus to improve the clarity of the image. If you cannot obtain satisfactory clarity through adjustment, please try to move the projector forward or backward.

  Warm Tips: Click **F-** for larger display image and Click **F+** for smaller image.

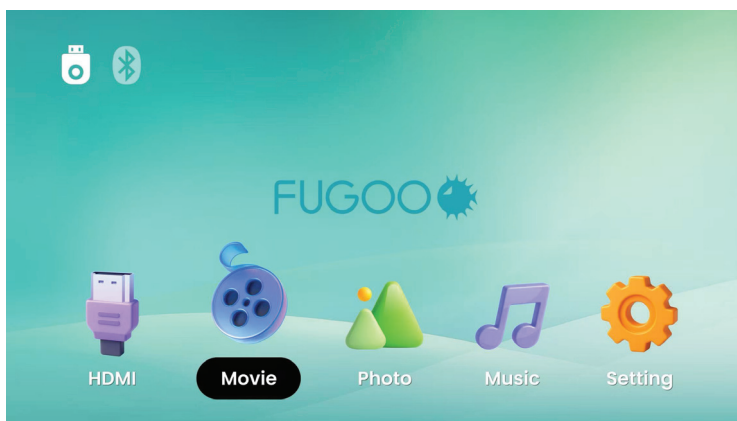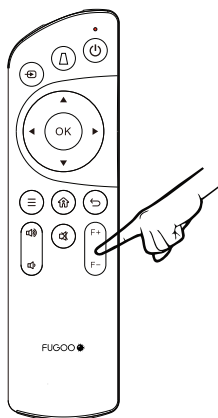


3. Keystone Correction

Electric Keystone Adjustment [Max $\pm 50^\circ$]


Electrically adjust the Keystone correction under [Menu] - [Adjust] - Vertical Keystone] - [Direction keys for $\leftarrow/\rightarrow$ adjustment.

 Note: The side projection angle of the projector should not exceed $\pm 15^\circ$. It's recommended to use horizontally.

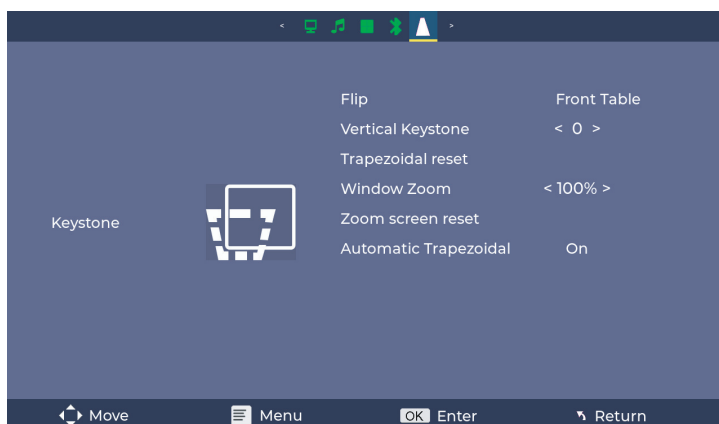


4. ZOOM Setting

 Go to Home Page--[Setting]--[Option]--[window zoom]--[Zoom+ / Zoom-]. The projection screen can be zoomed from 100% to 50% without moving the projector distance. Press Direction keys for ◀▶ to set the value needed and click Reset to the original image.

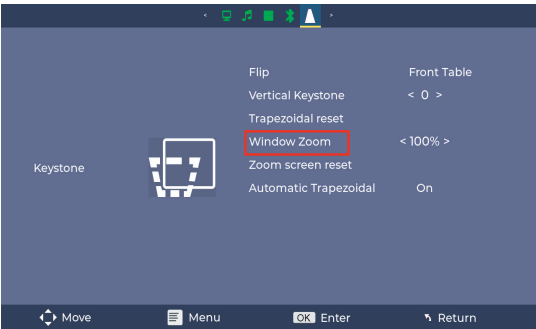


5. Projection Mode

 Note: Go to Home Page--Settings--Option--OK to change the projection modes per your needs

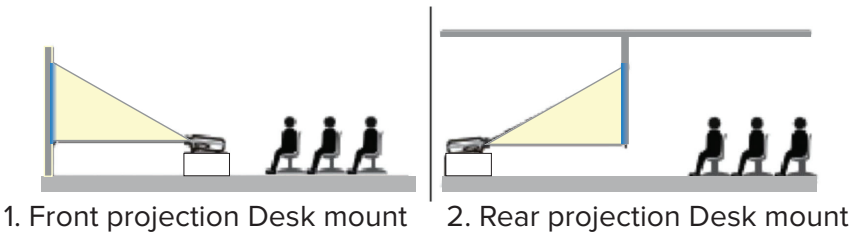

6. Projection Distance Reference

 
Screen size identification (inches)

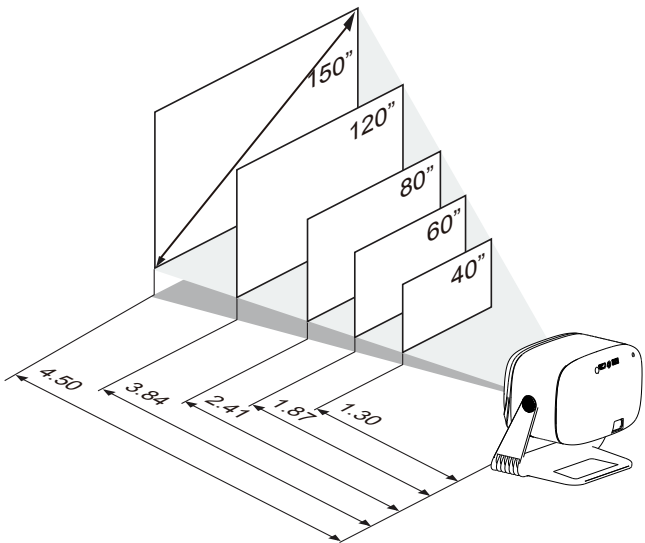

7. Turn Off Safely


Press the Power button on operational panel of remote control, and turn off the device according to the system prompts.

 INPUT SOURCE INTRODUCTION

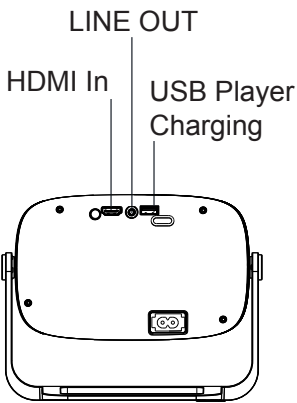

INPUT	HDMI In	
	USB Player Charging	
	LINE OUT	

 
SIGNAL SOURCE CONNECTION

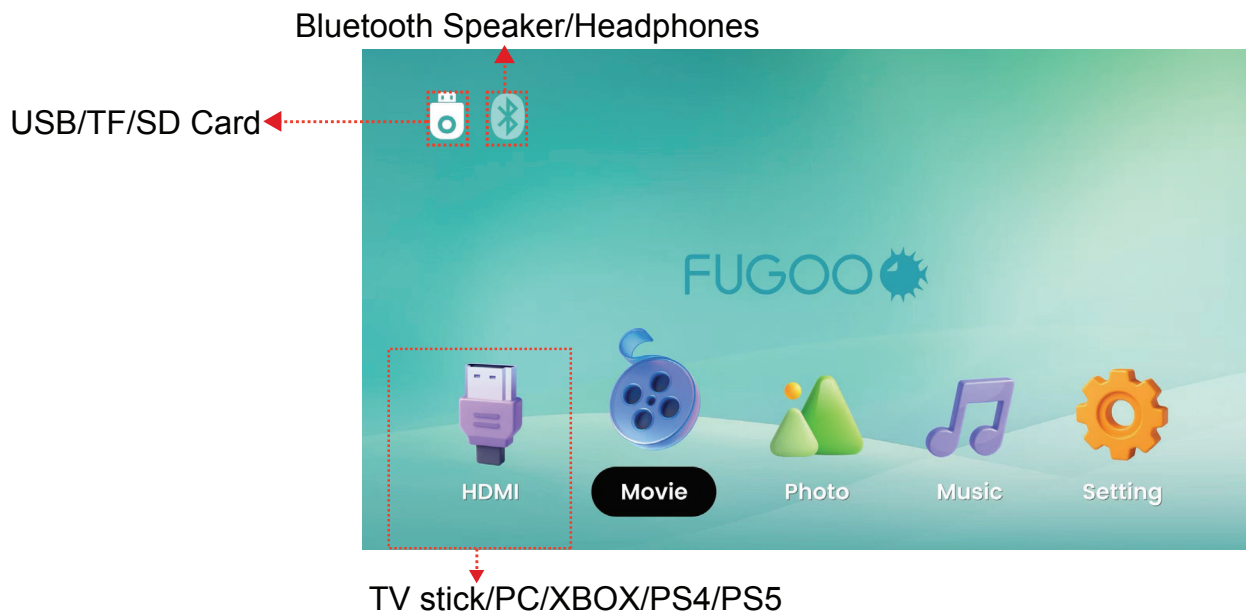

MULTI-MEDIA CONNECTION

1. HDMI Connection

 
Select the desired input signal source HDMI on the home page, or you can press the Source button on the remote control to select the corresponding signal source.

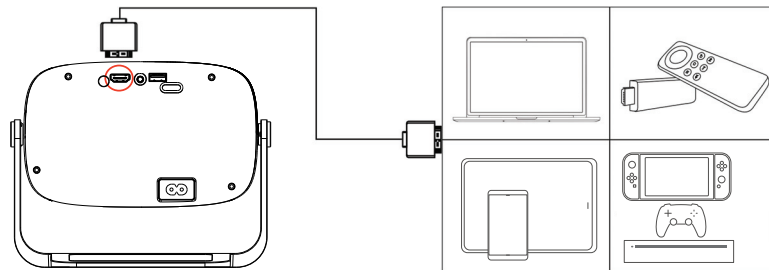

HDMI Compatible Devices: Laptops, TV Sticks, Tablets, Smart Phones, Game Consoles, etc.

2. USB Connection

 For USB devices, choose the signal source.

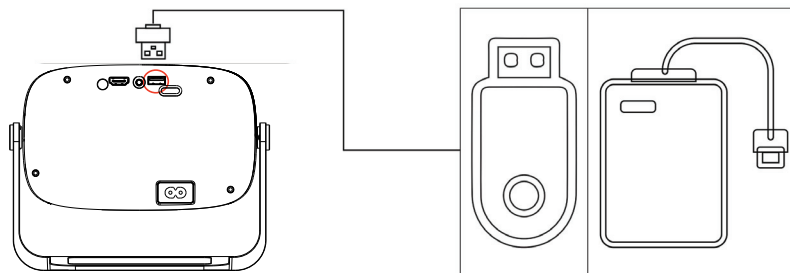


Media Support Format as Following:

Video Format	MP4, TS, DAT, MKV, MPG-1/2/4, MOV
Audio Format	MP3, APE, AAC, FLAC, OGG, WAV, WMA
Picture Format	JPG

SOUNDBAR SETTINGS

1. Picture Settings

 
Set up Contrast, Brightness, Color, Sharpness under Settings –Image Mode, User Mode; Switch color temperature to medium, warm, user and cool to meet different usage.

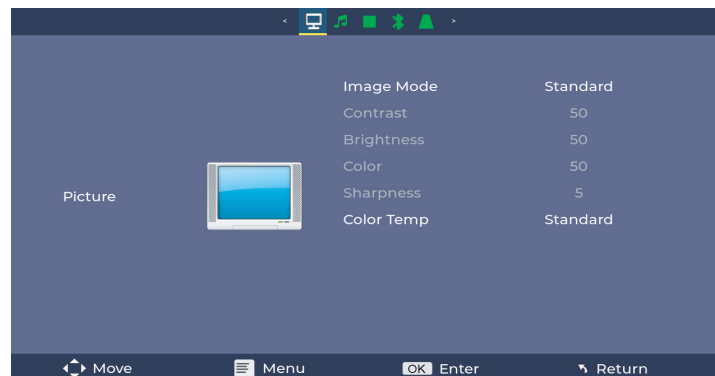

Warm Tips: Warm Mode is good for video display quality and Cool Mode is ideal for Image Display


2. Sound Settings

 Set up sound patterns of Standard, Music, Movie, Sports and User Mode; Balance is to balance the sound of the left and right channel of the speaker.

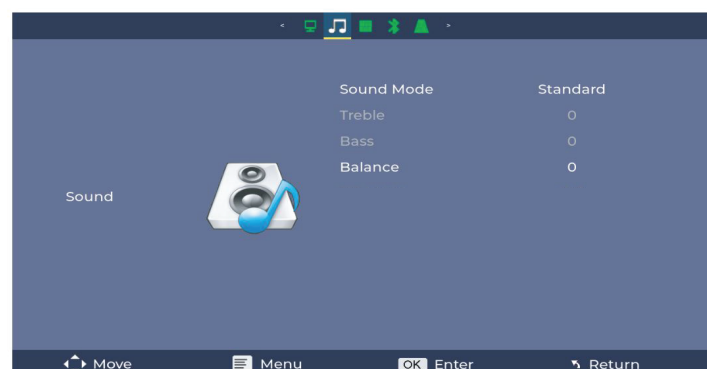

3. Bluetooth Settings

 - * Go to Home Page--Setting--Select **Bluetooth** and press **OK** to turn on Bluetooth,
- * Click **Search Bluetooth** and choose the device to be paired,
- * Select the Back key to exit after successfully Connected.

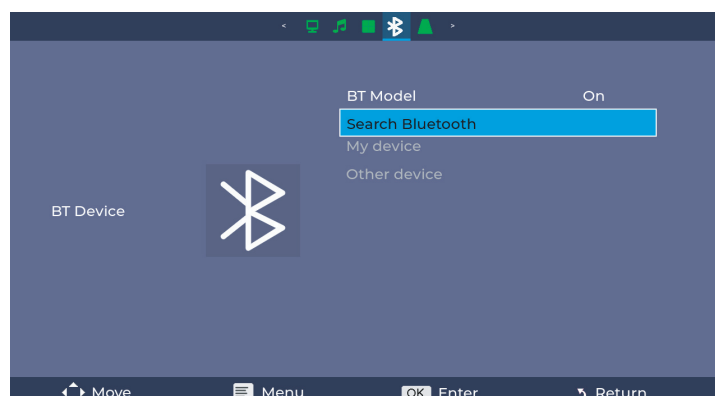

Notice: It's NOT supported to connect with smart-phones via Bluetooth to realize screen sync.

4. Option Settings

For **OSD Language, Factory Reset, Auto Sleep, OSD Timer, Window Zoom, Video Delay and Version information** Settings, you can set them up under Option part.



4.1 OSD Language Settings: choose the language per your needs.

OSD Lang		
English	中文	繁體中文
Français	Deutsch	Español
Português	Italiano	Polski
Svenska	suomi	Ελληνικά
Dansk	norwegian	Magyar
תענית	Русский язык	Tiếng Việt
ภาษาไทย	اىبرع لآب	日本語
한국어	IndonesiaName	Nederlands
Türkçe		
OK Enter		Menu

4.2 Video Delayed Function

When you connect the Soundbar to watch video programs and notice that the actions in the video are significantly out of sync with the audio output, you can optimize it as follows:

Use the keys on the remote control to operate.

 
Press "**Settings → Video Delay → OK**" to adjust the "Video delay" data. The current delay data (0 to 800) will be displayed on the right side of the screen. Use the up and down keys on the remote control to adjust the video delay value to optimize the synchronization of the actions in the video and the audio output until the desired effect is achieved.

4.3 Auto Sleep

The projector will automatically power off if there is no audio or video playback for 30 minutes.

SOUNDBAR

Control & Power Input

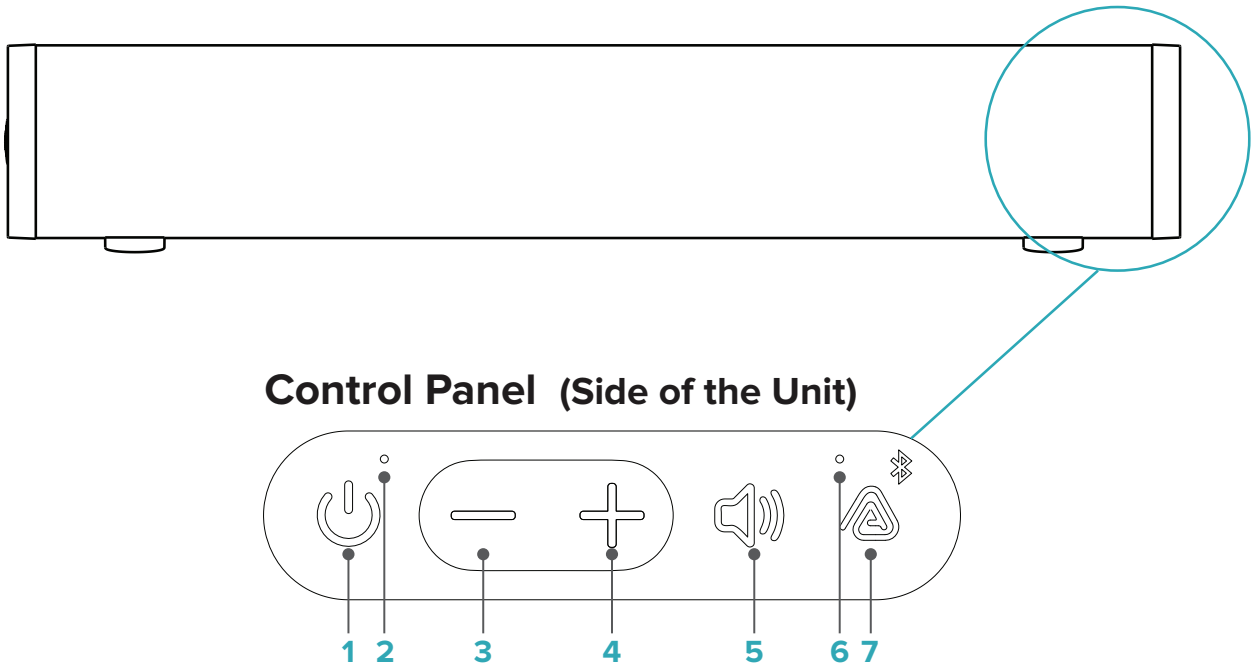

- | | |
|-----------------------------|---|
| 1 Power & Play/Pause Button | 5 EQ button |
| 2 Power LED (Red) | 6 Auracast & BT & Aux In (White/Blue/Green) |
| 3 Volume- Button | 7 Auracast & BT Button |
| 4 Volume+ Button | |

Power

CHARGING THE SOUNDBAR

POWER SAVING FEATURE

 
When playing from battery power the product will turn off after 15 minutes of not playing audio to conserve the battery charge.

When plugged into a charging source the product will remain on until you turn the power off.

Battery Features

The rechargeable battery comes with a partial charge and the speaker is ready to play. For maximum playtime, fully charge the battery in the soundbar.

Charging

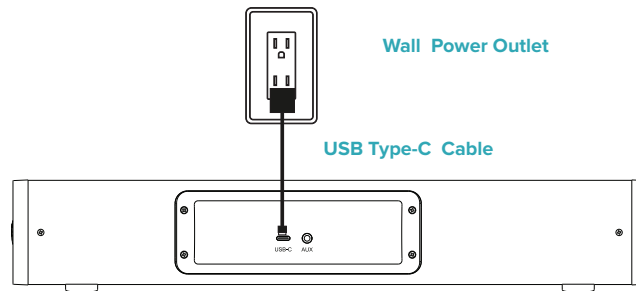

IMPORTANT: Before first use, charge for 4 hours.

- Connect the included USB-C cord into the USB-C port of the product. Connect the other end of the cord into a USB AC adapter and then into a power outlet.

To Prolong Battery Life:

- If the product is stored fully charged, re-charge every 3 months; not to exceed 6 months between charges.
- If the unit is stored with no charge, do not exceed 15 days without charging.

Full Charge Achieved:

- 4 Hours while unit is powered OFF.

 
POWER ON / OFF

- ONHold  button(2 seconds)
- OFFHold  button(2 seconds)

Power LED

- ChargingBreathing
- LowRapid Blink
- FullSolid
- Standbyoff

Projector and Soundbar Connection

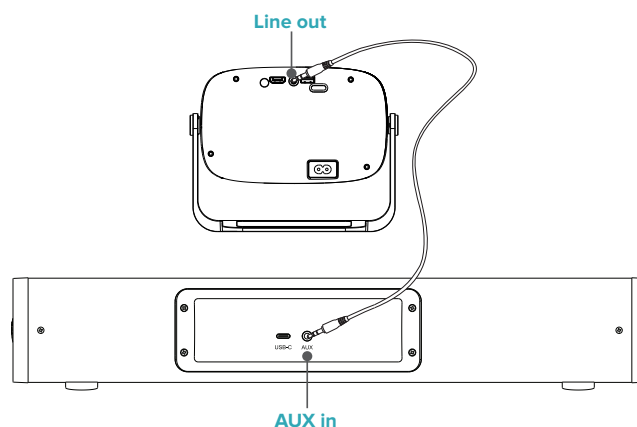

- Turn on your projector and soundbar
- Plug one end of the 3.5mm stereo audio cable into the AUX IN jack on the speaker.
- Plug the other end of the audio cable into the LINE OUT jack on the projector.
- Make sure both ends of the audio cable are fully plugged in.
- The sound from the projector should now play through the soundbar.

Audio

BLUETOOTH PAIRING

The product will automatically enter into Bluetooth mode when powered ON and will search for the last audio device it was paired to.

IMPORTANT: Pair devices within 3 feet (1 meter); Max signal range of 33 feet (10 meter); Signal disruption/loss may occur when devices are out of range from each other.

- Turn your audio source device's Bluetooth ON and select **"FUGOO FPJ1080PS"**

Bluetooth LED

- PairingBlinking
- PairedSolid

DisconnectHold the  button for(2 seconds)

AURACAST

1. Ensure that only one speaker acts as the transmitter in the same environment.

2. Transmitter: When the speaker is connected via Bluetooth and playing music, briefly press the "Auracast & BT" button. The speaker will emit "Auracast pairing", indicating it has entered Auracast transmission mode. Press the button again to exit, accompanied by "Auracast disconnected" tones.

3. Receiver: When the speaker is not connected via Bluetooth, briefly press the "Auracast & BT" button. The speaker will emit a "Auracast pairing" and the white LED will illuminate, indicating it has entered Auracast receiver mode. Press again to exit, signaled by "Auracast disconnected" tones and the Bluetooth LED flashing.

4. When the Auracast is successfully established, all receivers will synchronously play the same audio as the transmitter.

PairClick  Button

PairedSolid

Auracast LED

Transmitter PairedBlue Solid

Receiver PairedWhite Solid

BLUETOOTH AUDIO CONTROLS

Play / PauseClick  button

Volume UpClick  button

Volume downClick  button

EQ ModeClick  button

Dust Removal from Projector

Cleaning the dust - proof net of the projector can prevent dust from clogging and affecting heat dissipation and projection effects. The methods are as follows:

Tools Preparation:

- Flat - head screwdriver (used when prying open the dust - proof net)
- Soft - bristle brush (such as an old toothbrush)
- Hairdryer (cold air setting) or compressed air can
- Clean water (suitable for some washable dust - proof nets)

Cleaning steps:

1. Power - off operation

 
First, turn off the projector and disconnect the power supply, and wait for the machine body to cool down (to avoid burns).

2. Locate the dust - proof net

It is usually on the side, back or bottom of the projector. There is an obvious grid - shaped cover plate, and some models are marked with the word "FILTER".

3. Remove the dust - proof net


Pry open the dust-proof net with a flat-head screwdriver

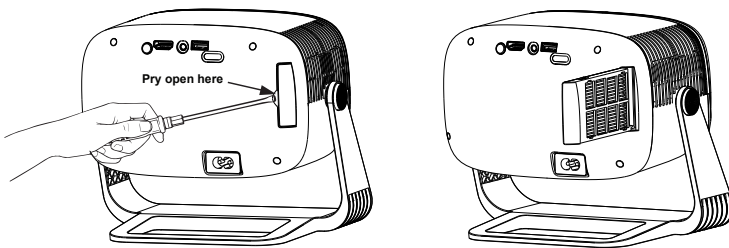

4. Clean the dust - proof net

For light dust: Gently brush off the surface dust with a soft - bristle brush, or blow it clean with a hairdryer on the cold air setting from a distance of 10 - 15 cm.

 For thick dust: If the dust - proof net is washable (check the instruction manual), rinse it with clean water and let it dry (avoid direct sunlight), and reinstall it after it is completely dry.

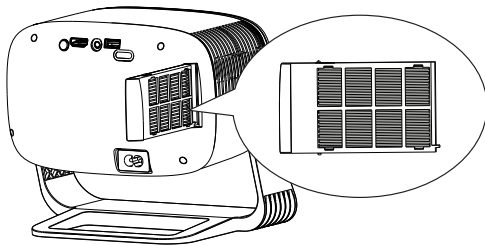

5. Reinstall the dust - proof net

Restore the dust - proof net and the cover plate in the reverse order of disassembly to ensure a secure installation.

Precautions :

- Avoid wiping the inside of the machine body or non - washable dust - proof nets directly with a wet cloth.
- It is recommended to clean once every 1 - 3 months, and shorten the cycle in a dusty environment.