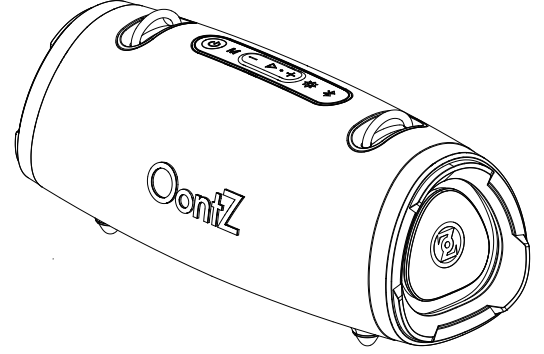 
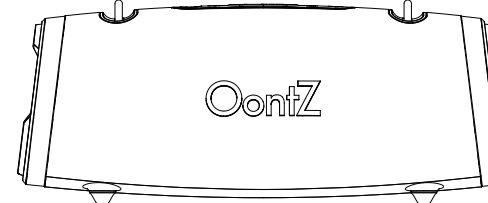 
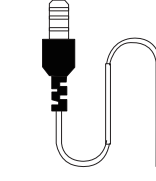 
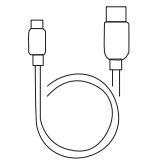 
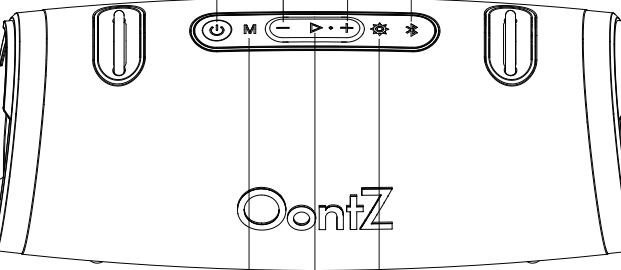 
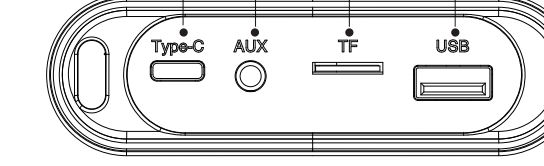 
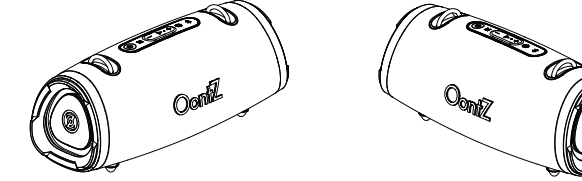 
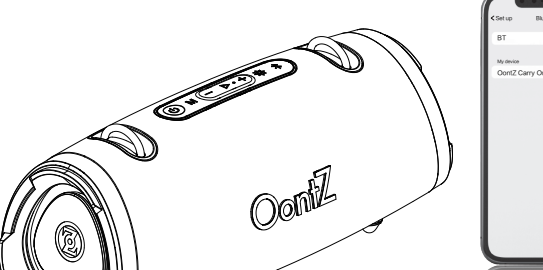 


98*140mm 骑马钉 (英文版说明书参考，西班牙版 页码右上角标注ES)


EN User Guide OontZ Carry On  Designed and Engineered By CAMBRIDGE SOUNDWORKS TheOontZ.com	EN Package Content  Carry On *1  3.5mm Aux Cable  Type-C Charging Cable  User Manual*1 1	EN Button Configuration  Volume - / Previous song Volume +/Next song Charging Indicators Bluetooth/TWS button Mode switch (Bluetooth, USB,TF card, AUX) Light button (toggle/off) Play / Pause 2	EN  Aux In Audio Input Type C charging TF card slot USB flash drive/USB-A 3	EN  Power switch - x 1 EQ switch: Indoor Mode Outdoor Mode - x 2 s / * Power on/off: long press for 2 seconds - x 8 s The speaker is faulty and freezes: Press and hold for 8 seconds Light button - x 1 → Lighting effect switch: short press for 1 second - x 2 s → After turning off the light, press and hold for 1 seconds to turn it on again Mode Switching - x 1 → → → → Switch mode: Bluetooth / U disk / TF / AUX / SD card mode: short press for 1 second - x 2 s Long press for 2 seconds: Enter the mobile voice assistant, long press again to exit the voice assistant 4	EN Play / Pause - x 1 / Play/Pause: Short press for 1 second - x 1 Answer/End call: short press for 1 second - x 2 s Reject call: Long press for 2 seconds - x 8 s Answer/End call: short press for 1 second Volume- - x 1 Volume down: short press - x 2 s Previous song: Press and hold for 2 seconds Volume+ - x 1 Volume up: short press - x 2 s Next song: Press and hold for 2 seconds Pairing button - x 1 Enter Bluetooth pairing mode and exit pairing mode after successful connection: short press - x 2 s Enter TWS pairing mode After successful connection, exit TWS pairing mode: Press and hold for 2 seconds 5	EN Product Specifications Driver Unit: Mid-high frequency speaker: 2*67mm Subwoofer: 1*105mm Power: 70W Charging time: 4H Charging support: 5V/3A Playing time: 10H (affected by volume and sound source) External output: 5V/1A Bluetooth version: V5.3 Frequency response range: 65Hz-20KHz Product size: 320*132*130mm 6	EN How To Pairing  ①Turn on the wireless speaker, find the speaker name “ OontZ Carry On” on your mobile phone ②Click manually to connect Friendly reminder : If can’ t find the device name on cellphone, pls press to enter single pairing mode. Mobile Power function This speaker has USB charging function, please insert the device in the speaker power mode, the speaker will automatically detect your device and start charging, if there is no operation after the speaker power on, it will automatically shut down after 30 minutes. Aux in mode Connect the speaker to a music player/mobile via 3.5mm audio cable (provide as accessory) and the music can be played automatically. 7	EN TF/SD card mode Insert a card to the speaker and it can play music automatically. Reset Long Press “ ” 8s to reset the speaker, If the reset is successful, the speaker will automatically shut down Automatic shutdown 1)If not paired with any device or if there is no playback after pairing, the speaker will automatically shut down after 30 minutes. 2)When the speaker battery is low, it will also automatically shut down 8	EN RF exposure statement This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. FCC Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 9
---	--	--	---	--	--	---	---	--	---

98*140mm 骑马钉

Guía del usuario

OontZ

 Carry On

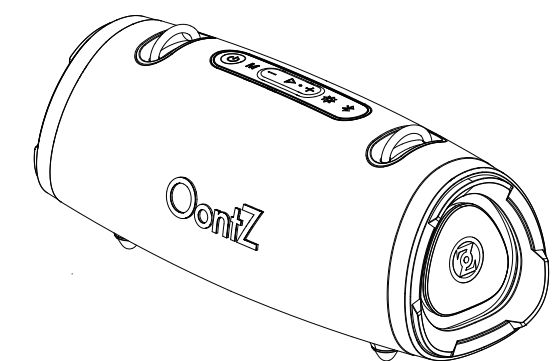

Designed and Engineered By
CAMBRIDGE SOUNDWORKS

 
TheOontZ.com

ES


Contenido del paquete



Altavoz de Carry On *1

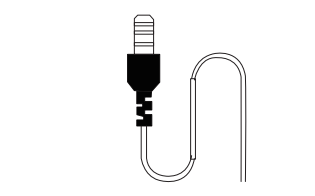

Cable auxiliar de 3.5 mm

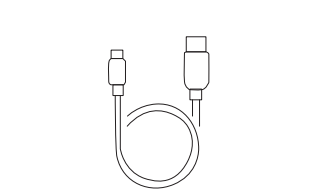 

Cable de carga tipo C

 


Manual de usuario*1

1


ES

Configuración de botones

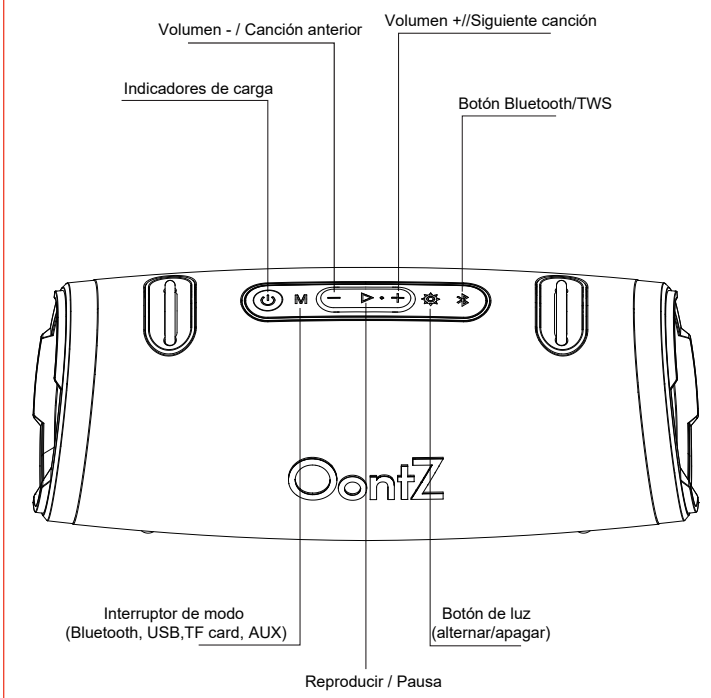


2

 ES

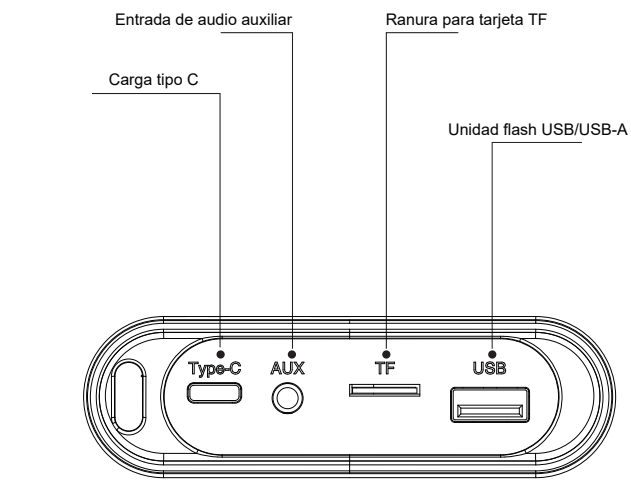

3

 ES

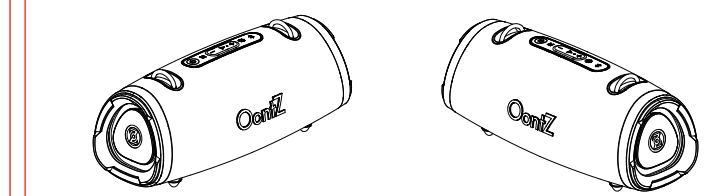

Interrupción de encendido

x 1
Interrupción de ecualizador: Modo interior / Modo exterior

x 2 s
Encendido/apagado: mantenga pulsado durante 2 segundos

x 8 s
El altavoz está defectuoso y se congela: mantenga presionado durante 8 segundos

Botón de luz

x 1
Interrupción de efecto de iluminación: presione brevemente durante 1 segundo

x 2 s
Después de apagar la luz, mantenga presionado durante 1 segundos para encenderla nuevamente

Cambio de modo

x 1
Modo de conmutación: modo Bluetooth / disco U / TF / AUX / tarjeta SD: pulsación corta durante 1 segundo

x 2 s
Pulsación larga durante 2 segundos: Ingrese al asistente de voz móvil, pulsación larga nuevamente para salir del asistente de voz

4

ES

Reproducir / Pausa

x 1
Reproducir/Pausa: pulsación corta durante 1 segundo

x 1
Responder/Finalizar llamada: pulsación corta durante 1 segundo

x 2 s
Rechazar llamada: mantenga pulsado durante 2 segundos

x 8 s
Responder/Finalizar llamada: pulsación corta durante 8 segundos

Volumen-

x 1
Bajar volumen: pulsación corta

x 2 s
Canción anterior: mantenga presionado durante 2 segundos

Volumen+

x 1
Subir volumen: pulsación corta

x 2 s
Siguiente canción: mantenga presionado durante 2 segundos

Pairing button

x 1
Ingrese al modo de emparejamiento Bluetooth y salga del modo de emparejamiento después Conexión exitosa: pulsación corta

x 2 s
Ingrese al modo de emparejamiento TWS. Después de una conexión exitosa, salga. Modo de emparejamiento TWS: mantenga presionado durante 2 segundos

5

ES

Especificaciones del producto

Unidad de controlador:

Altavoz de frecuencia media-alta: 2*67mm

Subwoofer: 1*105mm

Potencia: 70W

Tiempo de carga: 4 horas

Soporte de carga: 5V/3A

Tiempo de reproducción: 10h

(depende del volumen y la fuente de sonido)

Salida externa: 5V/1A

Versión de Bluetooth: V5.3

 
Rango de respuesta de frecuencia: 65Hz-20KHz

Tamaño del producto: 320*132*130mm

6

ES

How To Pairing

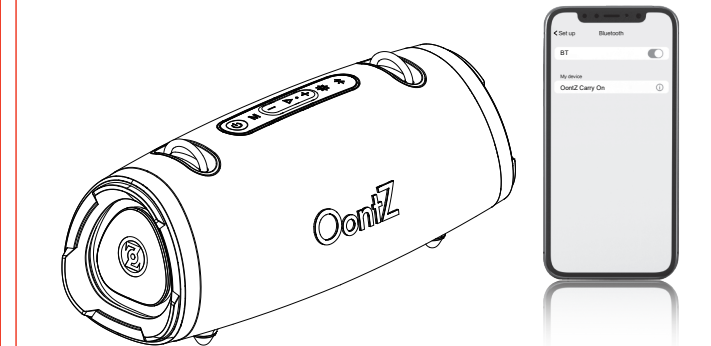

①Encienda el altavoz inalámbrico y busque el " OontZ Carry On" nombre del altavoz. Activado en tu teléfono móvil

②Haga clic manualmente para conectarse

Recordatorio amistoso: si no puede encontrar el nombre del dispositivo en el teléfono celular, presione * para ingresar al modo de emparejamiento único.

Función de energía móvil

Este altavoz tiene función de carga USB, inserte el dispositivo en el modo de energía del altavoz, el altavoz detectará automáticamente su dispositivo y comenzará a cargarse, si no hay ninguna operación después de encender el altavoz, se apagará automáticamente después de 30 minutos.

Modo Aux in

Conecte el altavoz a un reproductor de música/móvil mediante un cable de audio de 3.5 mm (incluido como accesorio) y la música se reproducirá automáticamente.

7

ES

Modo de tarjeta TF/SD

Inserte una tarjeta en el altavoz y podrá reproducir música automáticamente.

Reiniciar

Al mantener presionado 8 segundos para reiniciar el altavoz. Si el reinicio es exitoso, el botón, el altavoz se apagará automáticamente.

Apagado automático

1)Si no está emparejado con ningún dispositivo o si no hay reproducción después del emparejamiento, el altavoz se apagará automáticamente después de 30 minutos.

2)Cuando la batería del altavoz esté baja, también se apagará automáticamente.

8

OontZ