


MCSSENS PCB Label

Location: Near the product's printed PCB Antenna



MCSSENS Enclosure Label

Location: Bottom part of the enclosure

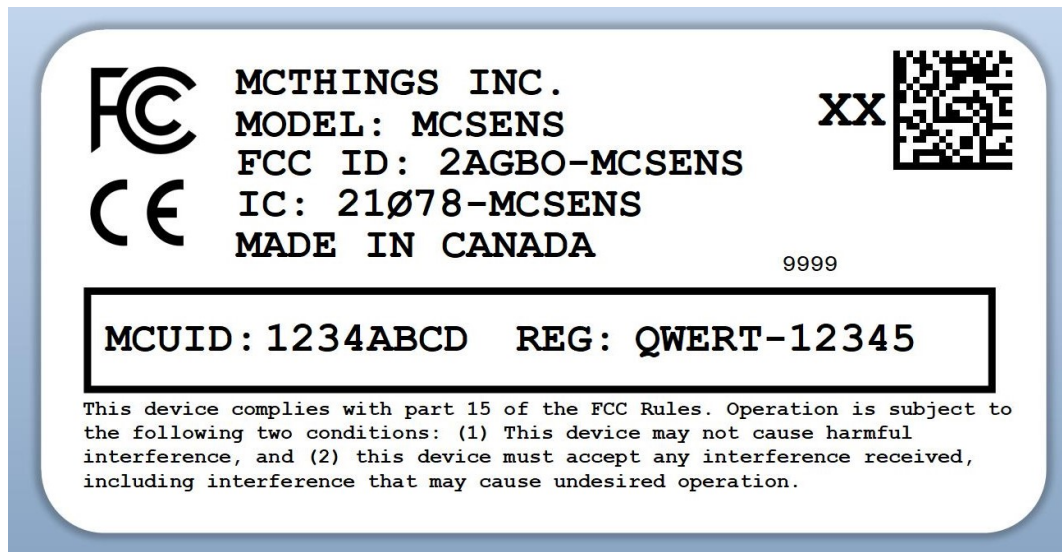

Label Location

