

Brookstone®

Bluetooth Glass Keyboard

With Transparent Touch Screen for Ipad TABLET /Windows Tablet

TABLE OF CONTENTS

Battery Precautions.....	2
FCC Information.....	3
Location of Parts and Controls.....	4
Charging the Keyboard.....	4
Syncing Bluetooth to your Tablet.....	5
Care and Maintenance.....	5
Specifications.....	6
Extend Key Function.....	6
Touchpad Gesture Guide.....	7
Troubleshooting.....	8
Warranty.....	8、 9

BATTERY PRECAUTIONS

- . Dispose of old batteries properly. Do not dispose of old batteries in a fire.
- . Do not leave batteries where a young child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- . Batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- . Discard this product as you would a spent battery.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the distance between the equipment and receiver.
- . Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1.This equipment may not cause harmful interference.
- 2.This equipment must accept any interference received, including interference that may cause undesired operation.


Modifications not authorized by the manufacturer may void the user's authority to operate this device.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LOCATION OF PARTS AND CONTROLS

1. Micro USB Port For Charging
2. Power Button
3. Indicator Light
4. Bluetooth Keyboard

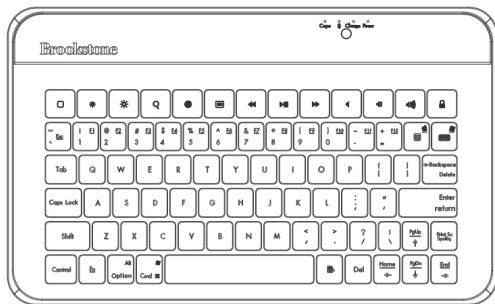

CHARGING THE KEYBOARD



1. Plug the USB CHARGING CORD (included) into the CHARGING OUTLET and then into any USB outlet.
 2. The Charging LED illuminates red during charging, and shuts off when charging is complete.
 3. The Keyboard takes approximately 3 hours to charge.
- Note: The Power LED indicator will blink when the Keyboard's battery needs recharging.

SYNCING THE BLUETOOTH KEYBOARD TO YOUR TABLET

1. Power on your Tablet.
 2. To turn on the Keyboard, press the Power button. Both the Bluetooth LED and the power LED will light up for a few seconds, and then the Bluetooth LED will begin to flash; Then the Keyboard will be closed. If no device is pairing within 10 minutes after Bluetooth LED flashed.
 3. Select the Settings icon on your tablet's screen.
 4. Locate and select Bluetooth from the setting menu.
 5. Under Bluetooth "Devices", select "Brookstone Bluetooth Keyboard".
 6. Your Tablet screen should now show the Bluetooth keyboard has connected successfully.
 7. The Power LED will remain illuminated while the Keyboard is powered on.
 8. To turn off the keyboard, press the power button in 3 seconds. The Power LED will turn off.
 9. If your Tablet goes into standby mode, the Keyboard should still be synced. If you power-off your Tablet, you may need to re-sync. If you use the Keyboard with a new Tablet, or it doesn't connect properly, follow the steps above to re-sync.
- Note: The Keyboard will automatically go into standby mode after 15 minutes of non-use in order to preserve battery life. Just press Power button to reactivate the Keyboard.

CARE AND MAINTENANCE

- Ensure you turn off the keyboard when you have finished using your Bluetooth Keyboard. This should preserve battery life.
- Do not allow any heavy objects to be placed on the Keyboard, as this may damage the keyboard.
- The screen is made of glass, please avoid the device falling down, being hit strongly and suffering severe vibration.
- Wipe the exterior of the Bluetooth Keyboard with a soft, dry cloth.
- Always fully charge the Bluetooth Keyboard prior to long periods of storage. Do not store in extreme cold or hot temperatures and out of direct sunlight.

SPECIFICATIONS

Bluetooth Wireless Technology.....	V3.0
Bluetooth Wireless Technology Working Distance.....	32'
Material.....	Transparent Tempered Glass + Aluminum Alloy
Operating Voltage.....	5V
Support System.....	IOS / Windows/Mac
Battery Usage Time Approximately.....	About 10hours
Battery Capacity.....	520mAh
Charging Time Approximately.....	3hours
Surface Treatment.....	Anti-Fingerprint Coating
Waterproof.....	Surface Waterproof
Glass Properties.....	Rigidity>6H, Intensity: CS≥450mpa,DOL≥8um
Storage Temperature.....	-4-140 ℉

Extend Key Function

Icon	Function
	Ipad Home key
	Ipad Screen be darken
	Ipad Screen be brighten
	Ipad Search function
	Ipad Switch Input Method
	Ipad Enter into Virtual Keyboard
	Ipad MovePrevious
	Ipad Pause
	Ipad MoveNext
	Ipad Mute
	Ipad Volume-
	Ipad Volume+
	Ipad Lockscreen
	Enter into Touchpad mode (Touchpad function only available in Mac and Windows system)
	Enter into Keyboard mode
	Enter into Ipad system
	Enter into Windows system

Note: For the key which is remarked with underline, then should press the key “Fn” at the same time to show the function.

Such as if you want to get the function of F1 key, then should press” Fn+F1” at the same time.

Touchpad Gesture Guide

1.In Mac OSX system:

Singer Finger: Keep moving is mouse pointer; Click with singer finger is left click.

Two Fingers: (when viewing pictures)Two fingers separate and get close is zoom in and zoom out; Swipe left/right is picture switching.

Two Fingers: Click with two fingers is right click; Swipe up/down with two fingers is mouse wheel.

Three Fingers: Select function.

Four Fingers: Swipe up with four fingers is Mission Control(the system default shortcut: Control+↑);Swipe down with four fingers is Applications Expose(the system default shortcut: Control+↓).

Four Fingers: Swipe left/right with four fingers is switching among full screen display application(the system default shortcut: Control+ ← / Control+ →).

Five Fingers: Click with five fingers is show the desk(the system default shortcut: F11).

Five Fingers: Catch up with five fingers is Launchpad (users need to set up Launchpad as shortcut key Control + L on your computer).

Attn: To use the function(Launchpad) correctly, need to set up shortcuts in the system settings(System→Keyboard→Shortcuts).

2.In Windows System:

Singer Finger: Keep moving is mouse pointer; Click with singer finger is left click; Slide came from the right side is Super button(Windows 8.0)

Two Fingers: (when viewing pictures)Two fingers separate and get close is zoom in and zoom out; Swipe left/right is picture switching.

Two Fingers: Click with two fingers is right click; Swipe up/down with two fingers is mouse wheel.

Three Fingers: Select function.

Four Fingers: Swipe up is maximize the current task(Windows 8.0 above);Swipe down is minimize the current task(Windows 8.0 above).

Four fingers: Swipe left/right is switch the task in left/right.

Five fingers: Flick with five fingers/catch up with five fingers is show the desk.

TROUBLESHOOTING

ISSUE

The keyboard will not work with my iPad Tablet/Windows Tablet

SOLUTION

Make sure that the keyboard is synced correctly. Power the keyboard off and try again.

If the iPad Tablet/Windows Tablet has been upgraded, or you are using a different iPad Tablet/Windows Tablet,

resync using the steps on the previous pages.

Check the battery power. You may need to recharge the Keyboard.

ONE (1) YEAR LIMITED WARRANTY

Brookstone warrants this product against defects in materials and/or workmanship normal use for a period of ONE(1) YEAR from the date of purchase by the original purchaser ("Warranty Period").If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2)replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstones's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819.Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance, Service options, parts availability and response time will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is Limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or Suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.