

ALL RIGHTS RESERVED

©2017. All rights reserved! No replication allowed!

This handbook is for reference only. Software might upgrade any time, and no further notifications will be announced.

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Contacts having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

1. UNDERSTANDING YOUR DEVICE

1.1 DEVICE OVERVIEW



Position of keys

1. Front camera	2. SIM card slot
3. Touch screen	4. Back key
5. Home key	6. Record recent
7. Microphone	8. USB Port
9. Photoreceptive sensor	10. Earpiece
11. Earphone jack	12. Volume
13. Power key	14. Back camera
15. Fingerprint/Homekey	16. Flash
17. Speaker	


2.INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the SIM card and memory card.

Installing SIM card or Memory card

In your phone there are two SIM card slots; micro slot can only use micro SIM card, while SD/nano slot can use both nano SIM card or SD card.

- Use the pin to open the card slot.
- Insert the SIM card or memory card correctly.
- Push the SIM card to the correct position.

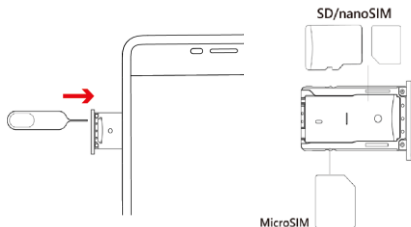

Notice: SD/nano card slot CAN NOT insert SIM card and SD card at the same time.

Notice: Built-in battery is not removable.

POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press the Power Key to turn on the device.
- The first screen that appears is known as the Home/Idle Screen.
- Drag up the unlock icon to release the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

Turning Off the Device

- Long press the Power Key.
- A pop-up window appears, select Power off.

3. SYSTEM GUIDE

3.1 MAIN SCREEN OPERATING

Notification Panel

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	You have new SMS.		Network is in use.
	Wi-Fi is connected		A clock alarm is active.
	You have missed calls.		Bluetooth ON

3.2 USING YOUR PHONE

➤ Enter main menu

In idle mode press the  key to enter the main menu on the desktop and press the (Home) key to return.

➤ Enter sub menu

In the main menu click the icon to select the sub menu, press the Back key to return to the previous menu, and press the Home key to return to the Home screen.

3.3 CALLING

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

3.4 MESSAGING

For using your device for sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service), go to Main Menu and then select Messaging.

Creating a Message

- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- Tap  to insert a picture or video file, etc.
- To insert text, tap Type to compose, and then enter your message.

3.5 CONTACTS

You can save information such as name, phone numbers, etc. for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select Contacts.
- Tap  add to contacts .
- Store the contact to SIM card or Phone contact.
- You can fill out as many or as little fields as you'd like for the contact.
- Tap  to save the contact.

3.6 BROWSER

The Browser is the tool which enables you to access the Internet.

4. HOME SCREEN

4.1 CUSTOMIZING SCREEN

The device features a touchscreen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Shortcuts

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.

- Long press the idle/Home Screen > Widgets

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- Long press the idle/Home Screen > Wallpapers.

Rotating Your Mobile Phone Screen

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > When devices is rotated > Rotate the contents of the screen.

5. MULTIMEDIA

Your device features various multimedia options, such as Music Player, Camera and Video Player.

5.1 FILE MANAGER

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

5.2 CAMERA

Your device is equipped with a camera and camcorder that enable you to capture photos and videos.

5.3 GALLERY

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

5.4 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust volume.

Tap  to pause FM radio function. Tap the ( ) to search the channels.

6. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

6.1 CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

6.2 CLOCK

This function gives you an access to the alarm clock.

- Go to  → Clock
- Tap  > tap  to add alarm.



ENVIRONMENTAL CONCERN

We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live in.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore, preserves natural resources for the future and saves the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DON'Ts

Do not dispose of your mobile and its battery in fire.

Do not dispose your mobile with regular waste.

Do not overcharge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it.

This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;
When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may leach into groundwater affecting your local community;
In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on the hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronic devices recycled only through authorized recycles, approved by the Pollution Control Board. We provide a facility of recycling of our products. For details



of our collection centers, please visit our website or call our customer care. Help us to GO GREEN.



Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

Emergency call

If any emergency arises, dial 112/911 (or other emergency call number) for emergency help.

Note:

Due to the nature of cellular networking, the success of emergency call is not guaranteed.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types R520 (FCC ID: 2AGTF-R520) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory are 0.75 W/kg, 0.79 W/kg respectively. The Max simultaneous SAR is 0.96W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.