


Setup Photographs:


9kHz – 30MHz

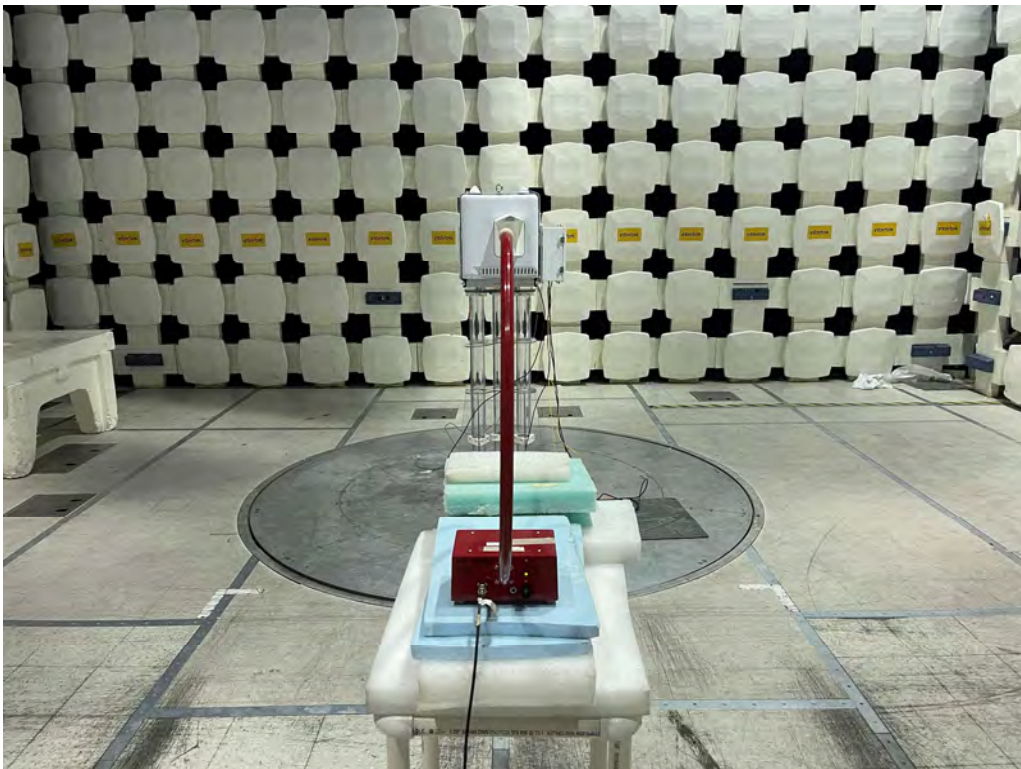


9kHz – 30MHz




9kHz – 30MHz

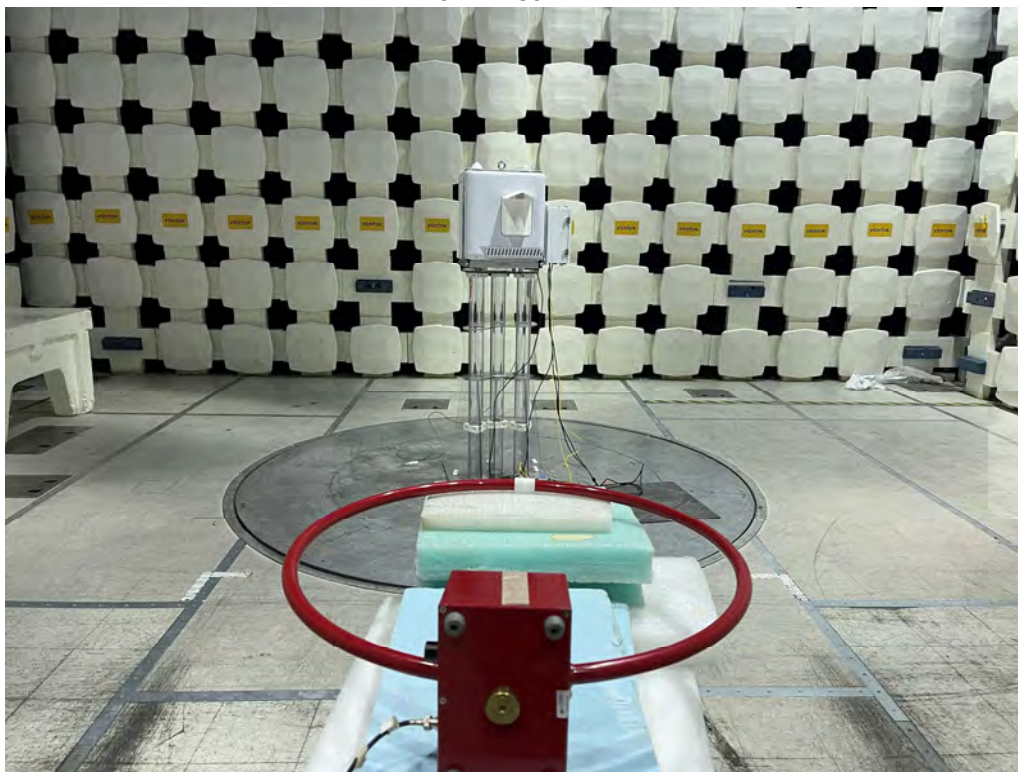



30 – 1000 MHz

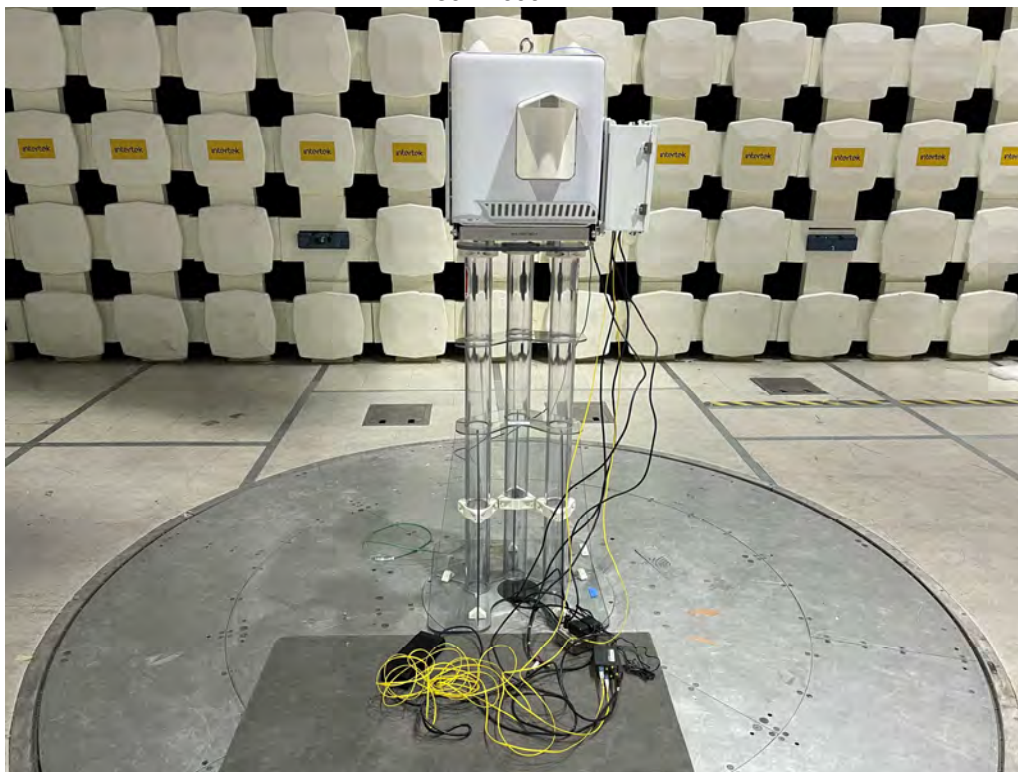

1 - 18 GHz

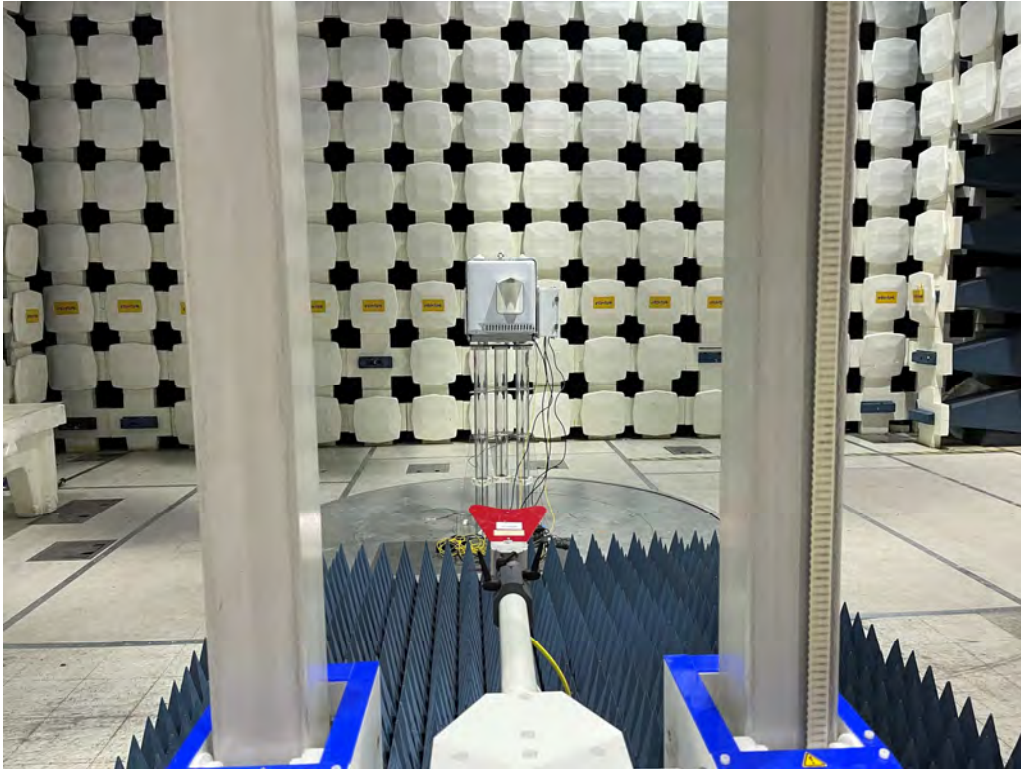

18 – 40 GHz

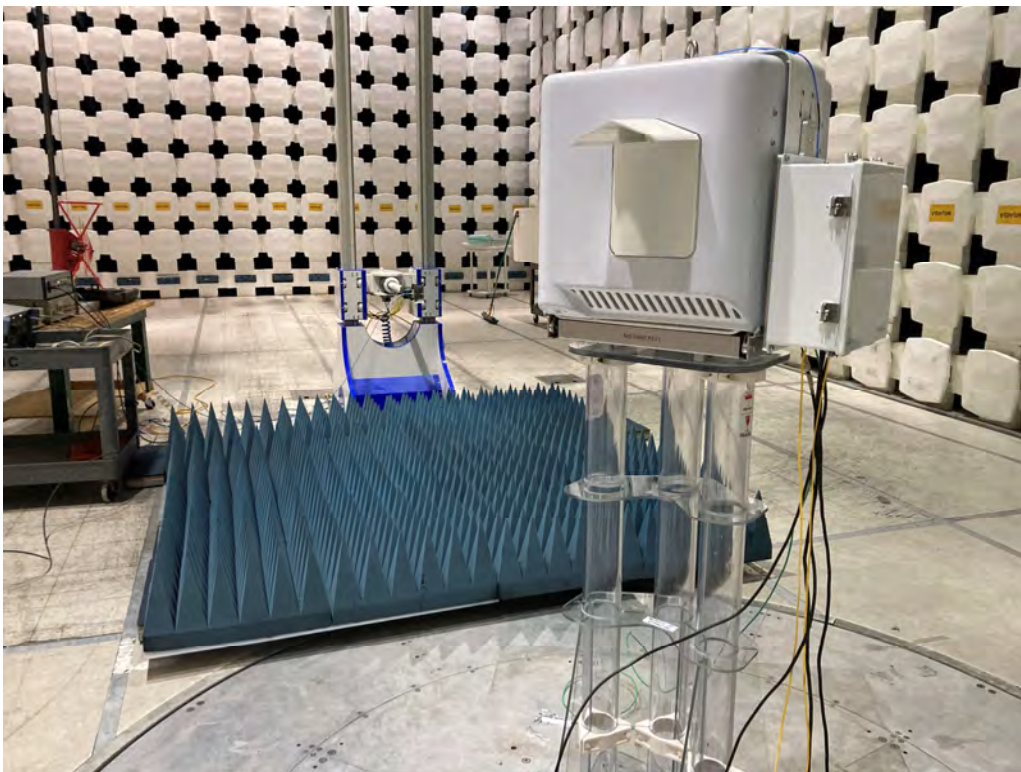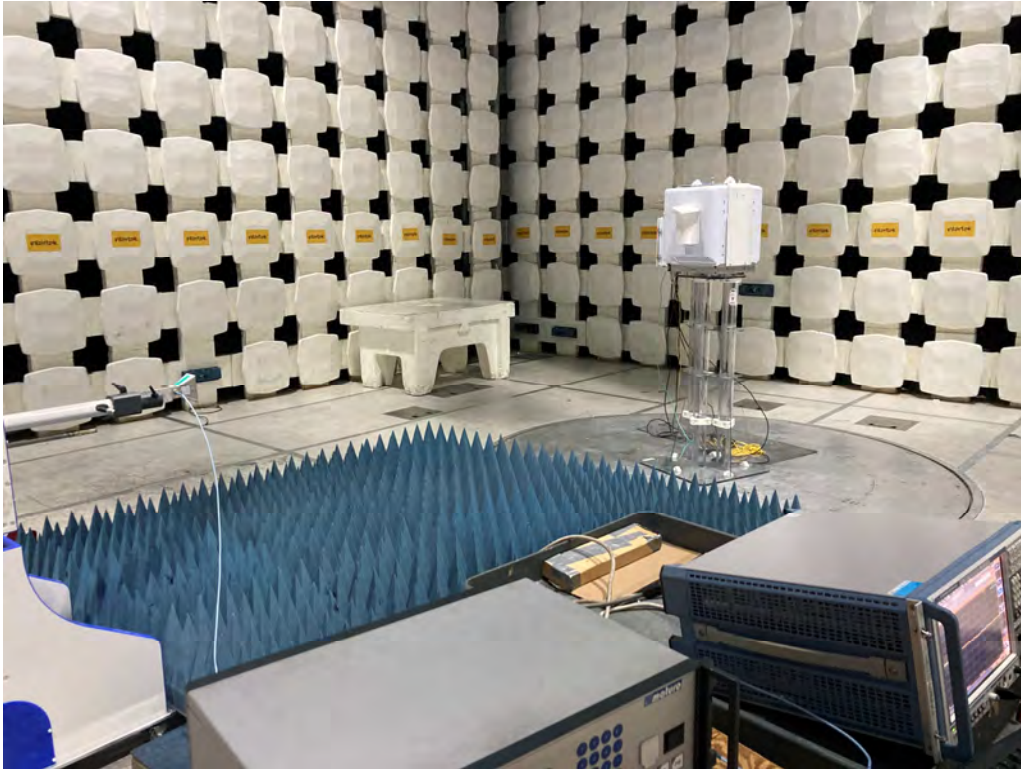

Above 40 GHz

