

Introduction to the Printer

The diagram shows the HP DesignJet 1045C printer with the following components labeled:

- Cover**: The top lid of the printer.
- Power Switch**: A small button on the left side of the front panel.
- Volume Buttons**: Two buttons on the right side of the front panel, labeled 'Volume Up' and 'Volume Down'.
- Power Feed Button**: A button on the right side of the front panel, labeled 'Power Feed'.
- Anomaly Indicator**: A small light or icon on the right side of the front panel.
- Network Indicator**: A small light or icon on the right side of the front panel.
- Power Indicator**: A small light or icon on the right side of the front panel.

Power Switch

To power on the printer, press the power switch. The power switch is located on the left side of the front panel.

Cover Button

To open the printer cover, press the cover button. The cover button is located on the left side of the front panel.

Volume Buttons

To adjust the volume, press the volume buttons. The volume buttons are located on the right side of the front panel.

Power Feed Button

To feed paper into the printer, press the power feed button. The power feed button is located on the right side of the front panel.

Anomaly Indicator

If an anomaly occurs, the anomaly indicator will light up. The anomaly indicator is located on the right side of the front panel.

Network Indicator

If the printer is connected to a network, the network indicator will light up. The network indicator is located on the right side of the front panel.

Power Indicator

If the printer is powered on, the power indicator will light up. The power indicator is located on the right side of the front panel.

Connections

Connect the printer to the network using the network cable. The network cable is located on the back of the printer.

Power Feed Button

Press the power feed button to feed paper into the printer. The power feed button is located on the right side of the front panel.

[illegible]

Product Warranty Card

Product Name	_____	The following conditions are not covered by this warranty:
Product Model	_____	• Accessories and repair to third-party software programs.
Product Price	_____	• The product hardware or floppy disks is damaged, or the warranty seal is compromised or tampered.
Purchase Date	_____	• Modifications made to the operation of the device which are not in accordance with this guide.
Warranty Period	_____	• Any damage resulting from the installation, operation or damage caused by water ingress or falling oil.
Warranty Period	_____	• Modifications or damage caused by third parties.
Contact Name	_____	• Cost of spare parts.
Company Address	_____	
Company Phone	_____	

[illegible]

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can use radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to other radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.