

SAR Test Setup



Picture 1: Main Antenna Back Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 2: Main Antenna Back Side, the distance from EUT to the bottom of the Phantom is 19mm



Picture 3: Main Antenna Front Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 4: Main Antenna Front Side, the distance from EUT to the bottom of the Phantom is 19mm



Picture 5: Main Antenna Left Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 6: Main Antenna Left Edge, the distance from EUT to the bottom of the Phantom is 19mm



Picture 7: Main Antenna Right Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 8: Main Antenna Right Edge, the distance from EUT to the bottom of the Phantom is 19mm



Picture 9: Main Antenna Top Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 10: Main Antenna Top Edge, the distance from EUT to the bottom of the Phantom is 19mm



Picture 11: WLAN Antenna Back Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 12: WLAN Antenna Left Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 13: WLAN Antenna Top Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 14: Hyper Wi-Fi Antenna Back Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 15: Hyper Wi-Fi Antenna Left Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 16: Hyper Wi-Fi Antenna Bottom Edge, the distance from EUT to the bottom of the Phantom is 0mm