

Test Configuration Photos

Test positions for Body:

According to the antenna position, the Body SAR is tested at the following 2 test positions all with the distance =5mm between the EUT and the phantom bottom:



Figure 1-1 Front Side mode



Figure 1-2 Right Side mode

Test positions for Limb:

According to the antenna position, the Limb SAR is tested at the following 2 test positions all with the distance =0mm between the EUT and the phantom bottom:



Figure 1-3 Front Side mode



Figure 1-4 Right Side mode

Test positions for sensor triggering minus 1 mm:

The sensor triggering minus 1 mm SAR is tested at the following 1 test positions with the distance =16mm between the EUT and the phantom bottom:



Figure 1-5 Right Side mode 16mm