

SAR Test Setup



Picture 1: Back Side, the distance from EUT to the bottom of the Phantom is 10mm



Picture 2: Back Side 2, the distance from EUT to the bottom of the Phantom is 10mm



Picture 3: Back Side 3, the distance from EUT to the bottom of the Phantom is 10mm



Picture 4: Back Side 4, the distance from EUT to the bottom of the Phantom is 10mm



Picture 5: Front Side, the distance from EUT to the bottom of the Phantom is 10mm



Picture 6: Left Edge, the distance from EUT to the bottom of the Phantom is 10mm




Picture 7: Right Edge, the distance from EUT to the bottom of the Phantom is 10mm




Picture 8: Bottom Edge, the distance from EUT to the bottom of the Phantom is 10mm



Picture 9: Right Edge, the distance from EUT to the bottom of the Phantom is 16mm

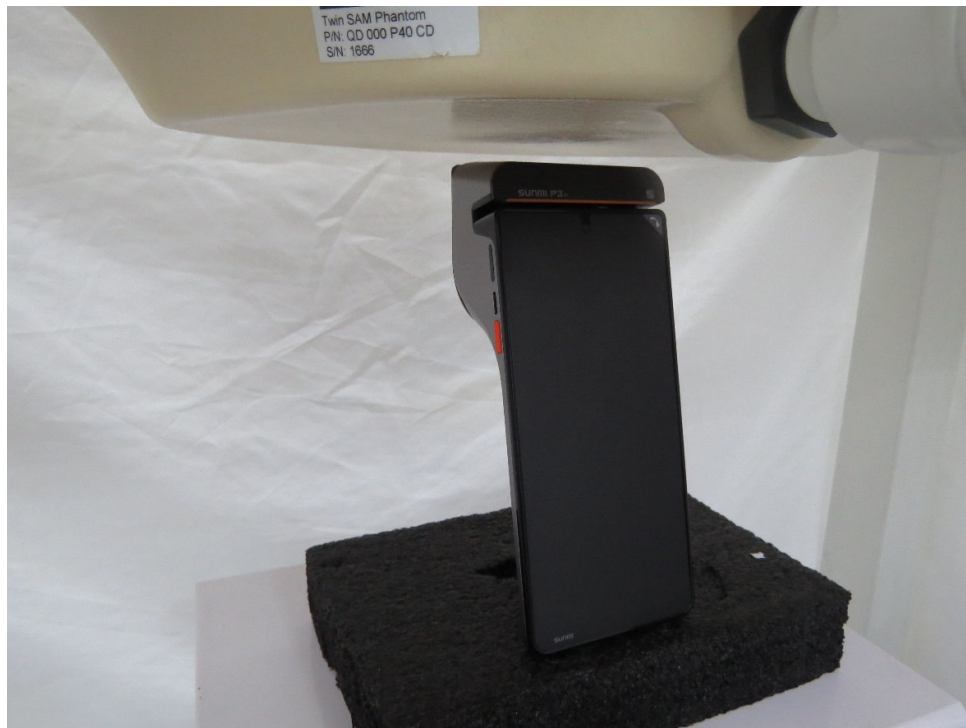

Picture 10: Top Edge, the distance from EUT to the bottom of the Phantom is 10mm

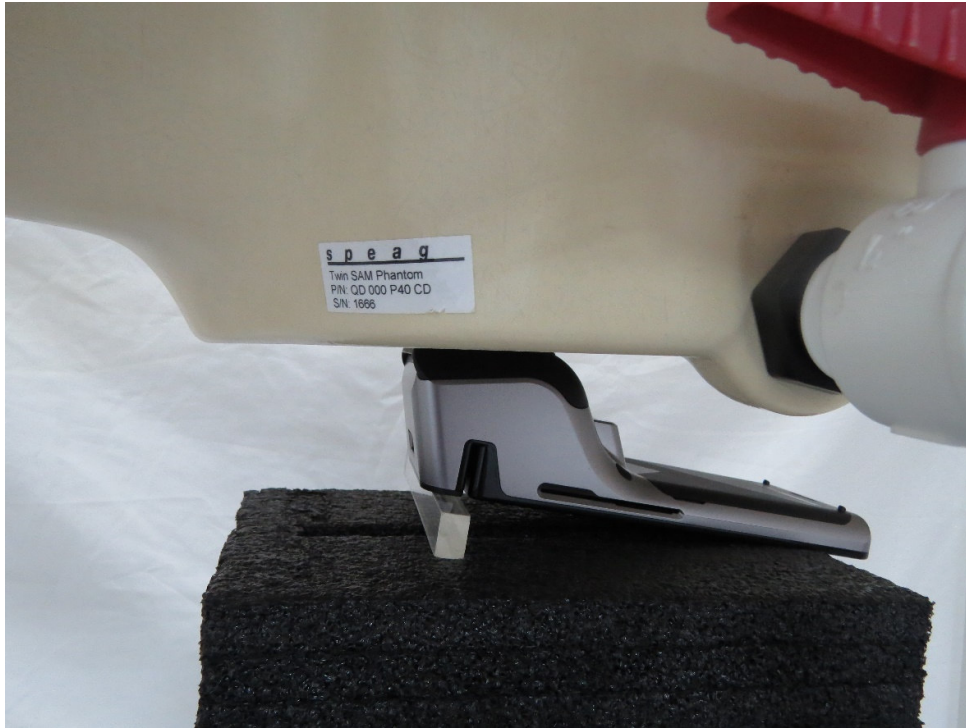

Picture 11: Back Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 12: Back Side 2, the distance from EUT to the bottom of the Phantom is 0mm



Picture 13: Back Side 3, the distance from EUT to the bottom of the Phantom is 0mm



Picture 14: Back Side 3, the distance from EUT to the bottom of the Phantom is 0mm



Picture 15: Front Side, the distance from EUT to the bottom of the Phantom is 0mm



Picture 16: Left Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 17: Right Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 18: Top Edge, the distance from EUT to the bottom of the Phantom is 0mm



Picture 19: Top Edge, the distance from EUT to the bottom of the Phantom is 0mm