



FRONT SIDE



BACK SIDE

EN - General instructions for use For US market

G-EYE REMOTE - 8387342



DECATHLON - 4 Boulevard de Mons - BP
299 59650 Villeneuve d'Ascq cedex - France



Questions or missing parts ?

customer.service@decathlon.com



IMPORTANT

- | | | | |
|--|--|--|--|
| - Decathlon is not liable for accidents or injuries due to improper use of the product, failure to adhere to the instructions given in this guide, or modifications to the product | - To avoid serious injury or death, follow the safety information in this document | guide is accurate and complete, Decathlon is not liable for any errors or omissions | use this product under the direct supervision of an adult. An adult should review and explain the full set of instructions in this guide with the youth (age 13 years and over) before using it. |
| | - Keep these instructions | - This product is not a toy. It is not intended for use by children 12 years of age or younger. Youth of ages 13 to 17 should only | |
| | - While every effort has been made to ensure that the information contained in the | | |

SAFETY INSTRUCTIONS

Failure to follow these warnings may result in serious injury or property damage and will void warranty.

- | | | | |
|---|--|---|--|
| - WARNING RELATED TO SAFETY PRECAUTIONS : | -Do not use the G-EYE Remote if it has been cracked, punctured or damaged by water. | tures between 0° C and 40° C. Extreme temperatures may temporarily affect battery life or affect the functionality of the G-EYE Remote. During use, your G-EYE Remote may become hot. Simply let it sit and cool before attempting to use it again. | CONS...) are running around you to limit the interferences. |
| - WARNING + PICTO When using the G-EYE Remote during your activities always be aware of your surroundings to avoid injuring yourself and others. | -Do not use the G-EYE Remote in water | - CAUTION When using your G-EYE Remote closed to another electronic device, read the safety precautions of this device. Turn off your G-EYE Remote when rescues actions using localisation tools (GPS, BEA- | |
| - WARNING + PICTO Observe the following precautions : | -Do not dry your G-EYE Remote with an external heat source : microwave or hair dryer for example. | | |
| -Do not drop, disassemble, crush, bend, deform, incinerate or microwave the G-EYE Remote. | -Failure to observe these precautions could result in fire or electric shock. | | |
| | - WARNING The G-EYE Remote is designed to be operated in tempera- | | |
| - This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. | sonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. | reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: | - Consult the dealer or an experienced radio/TV technician for help. |
| - This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide rea- | - However, there is no guarantee that interference will not occur in a particular installation. | - Reorient or relocate the receiving antenna. | - NOTE: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. |
| | - If this equipment does cause harmful interference to radio or television | - Increase the separation between the equipment and receiver. | |
| | | - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. | |