 
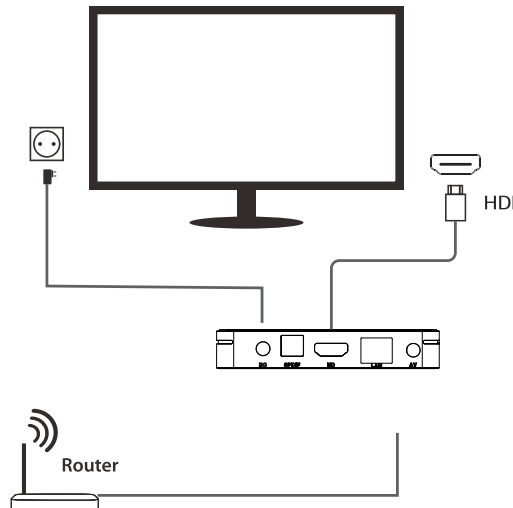 
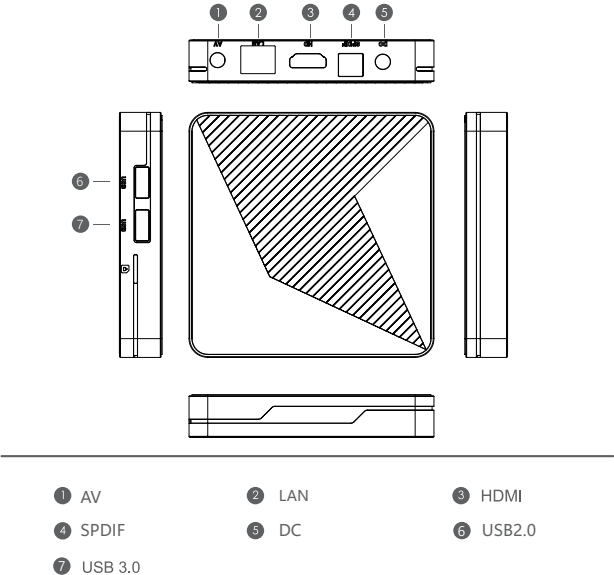 



Android TV User Manual

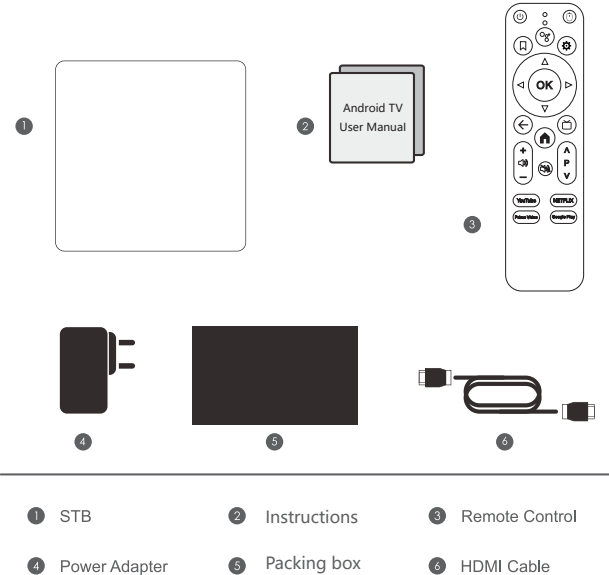

*Sorry to the changes of our products parameters but without notice. 89.0000028


Switch in the applications

 Click "My Apps" to view recently used programs, click program icon to switch application arbitrarily

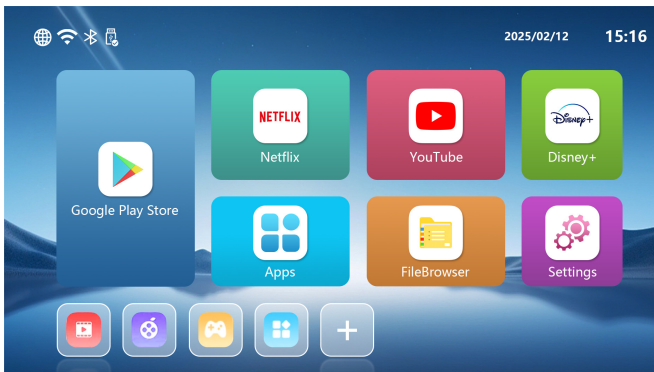

WiFiFunction

 1. Home Screen→SETTINGS→Network→Select "Wi-Fi" to open WIFI function
2. Choose Hotspot→Input Password→Connect to the network

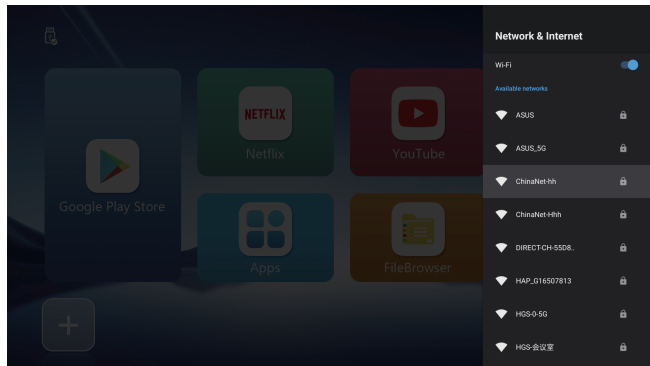


Ethernet Function

1. Home Screen→SETTINGS→Network→Select "Ethernet" to open Ethernet function
2. Insert network cable, network will be connected automatically

File Browser

 Move to "File browser". Press OK to enter into the device list.
When inserting with USB device or SD/SDHC/MMC cards, the sign "Device is mounting" will be shown on the screen.
Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.

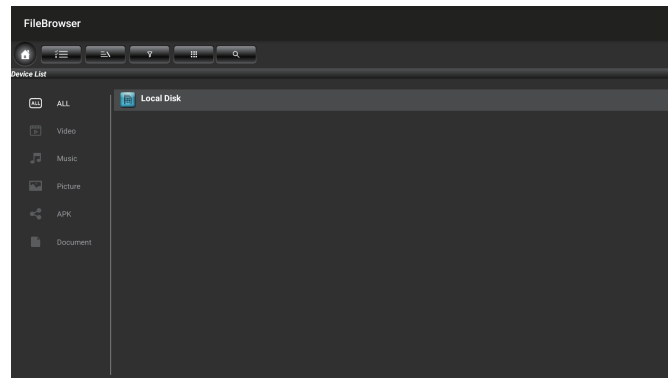

Read TF card
Insert TF card into the device in the status of power on, when icon appears in top left corner of the desktop, open "File Browser", the identified External Storage Card will appear under ""Local Disk", TF card's operation is available now.

Warm

Under no circumstances should you try to repair the TV BOX by yourself, as this will invalidate the warranty. Do not open the TV BOX as there is a risk of electric shock. If a fault occurs, firstly check the points listed below before taking the TV BOX for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	- Check if the power adaptor is properly connected to the power line and the TV BOX. - Press the power on the remote control to turn on the power.
No picture	- Re-connect with HDMI cable or AV cable. - Check if the TV is switched on.
No sound or distorted sound	- Adjust the volume. - Check if the speakers are connected correctly.
No audio or digital output	- Check the digital connections. - Check if the amplifier is set correctly.
The player does not respond to the remote control	- Is the remote control directed at the sensor on the front of the TV? - Reduce the distance to the TV BOX.
Player does not respond to playing commands during playback	- Replace the batteries in the remote control. - Operations may not be permitted to the user manual. - Possibility of system failure, re-insert with power adaptor.
No sound during movies playback	- The audio codec may not be supported by the TV BOX. You change to the supported audio on playing menu. - Check the volume.
The contents of the USB flash drive cannot be read	- The USB flash drive format is not compatible with the box. - If one of the USB is not read, please pass phase the TV BOX 30 seconds and restart the TV BOX.
Slow operation of the USB flash drive	4GB file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDMI connection	- Check the connection between the TV and the HDMI jack of the TV BOX system cable. - Check the volume.
The TV screen is blank and the player LED is blinking	- Turn off your TV BOX wait 30 seconds turn on 10 again. - Check if the USB system cable, check if HDMI connection is correct or change another HDMI cable, set the output resolution of the TV.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

It is your responsibility to take measures to prevent this interference. If you are unable to eliminate the interference, you may wish to consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the radiator and your body.

The following measures may be taken to reduce the radio frequency interference:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the radiator and your body.

制作要求:

S905 X5M说明书ROHS80G书写纸风琴3折页黑白印刷
100MM*140MM

制图

审核

制图日期

图纸编号

比例

版本

更改记录

黄浪

数字签名者
DN: cn=jun
o=hugsun,
email=yuan
un.com.cn,
日期: 2025
16:08:33 +08

2025-2-25

9.00000289

1:1

1.0