




Quick Start Guide **Device (ione)**

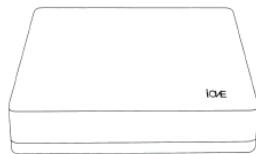

Front view

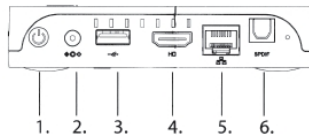

Back view

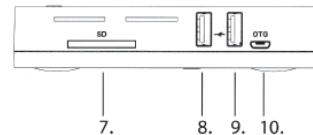


Right side view


- | | |
|-----------------|------------------|
| 1. Power button | 4. HD jack |
| 2. Power jack | 5. Ethernet jack |
| 3. USB jacks | 6. SPDIF jack |

- | | |
|------------------|---------------|
| 7. Micro-SD card | 10. Micro-USB |
| 8. USB jacks | |
| 9. USB jacks | |

Accessories

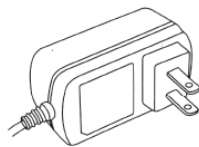

1. Power Adapter

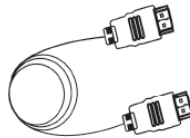

2. HD Cable

 


3. OTG Cable



4. Remote Controller


Setup



1. Connect to power source.


3. Plug in the USB for the AireMouse.

2. Connect HDMI to TV.

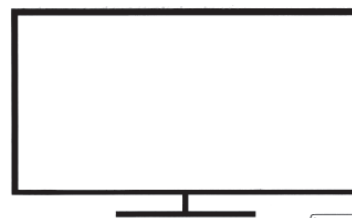


Press the  power button , device to enter boot state.


Basic Operations

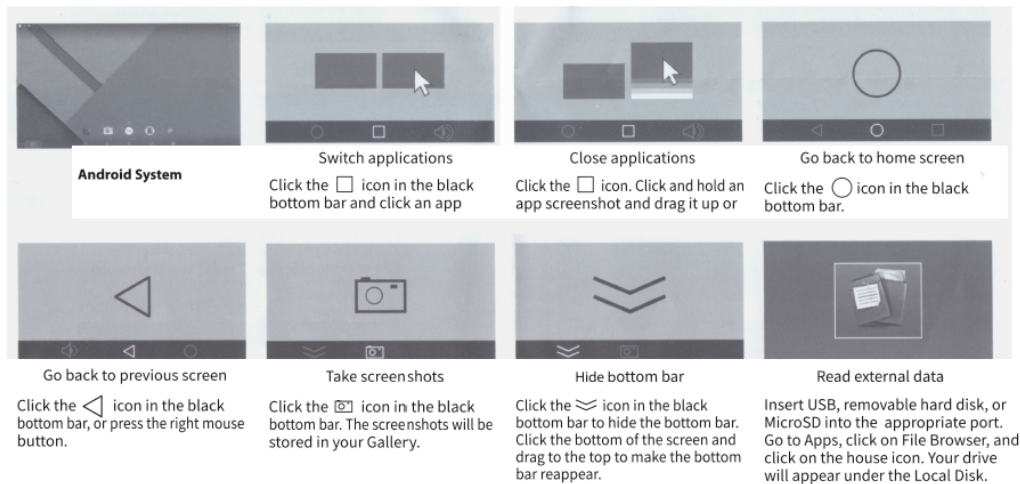

Basic Operations

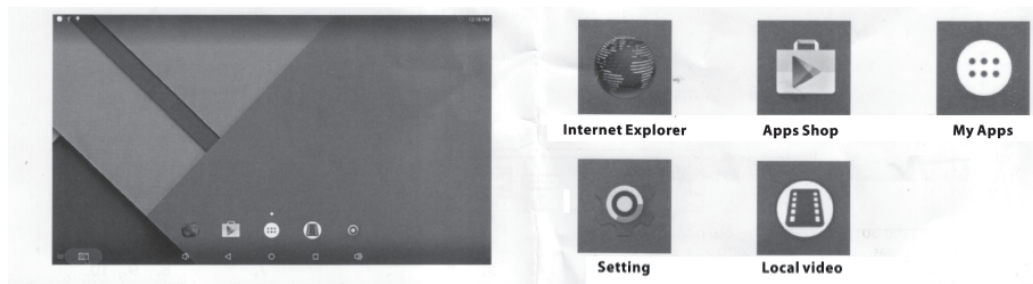

Language Settings

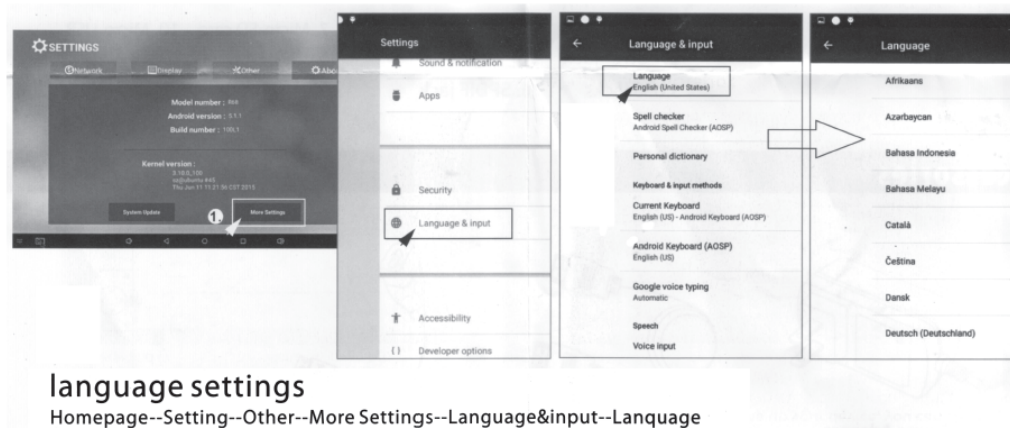


Connecting to Internet

Wi-Fi

When device starts, you will be prompted to connect to the Internet. To connect to the Internet via Wi-Fi:

1. Select Wi-Fi.
2. Select your network.
3. Input network password.

After you have finished setting up your device, you can change how you connect to the internet by clicking on Settings on the homepage and going to Network and do steps 1-3.

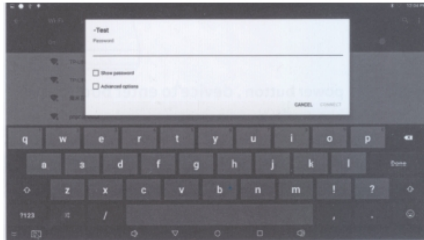


Ethernet

To connect to the Internet via Ethernet:

1. Select Ethernet.
2. Plug in the Ethernet cable to the device.
3. The device will automatically detect it.


After you have finished setting up your device, you can change how you connect to the internet by clicking on Settings on the homepage and going to Network and do steps 1-3.

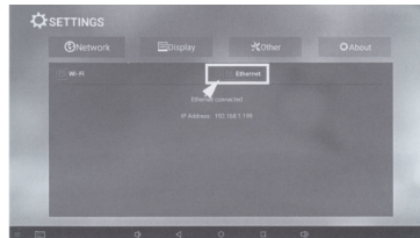

Set up WLAN hotspot

To set up a WLAN hotspot with your device:

1. From the homepage, click on Settings, then on Other, then on More settings, then Portable Hotspot, and select "Portable Wi-Fi Hotspot."
2. Select "Set up Wi-Fi hotspot" and create Network SSID, Security, and Password parameters.
3. To access device hotspot on other devices, select the Network SSID you modified and enter the password.

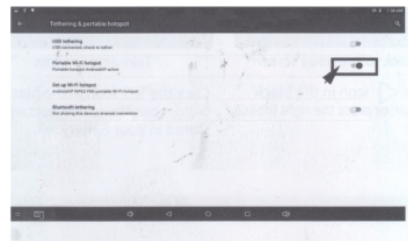

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.