

LAX-MAX[®]

NEW GENERATION

MODEL: LI-S244
MODEL NAME: PULSE

 
User's manual




Note: as we keep upgrading our product, we reserve the right to modify the product without notice in advance.

OPERATION PANEL


Schematic diagram:

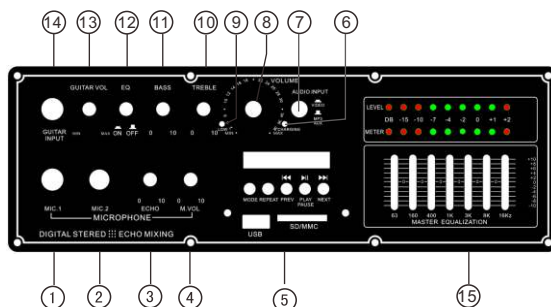

 1. MIC 1 input jack;
2. MIC 2 input jack;
3. MIC echo adjuster;
4. MIC volume;
5. USB/SD player control key ;
6. Charging & full LED;
7. Audio input Video & Mp3 Switch
8. Volume Adjustor;
9. Low voltage LED
10. Main treble volume;
11. Main bass volume;
12. EQ on/off key;
13. Guitar volume ;
14. Guitar input jack;
15. EQ control;

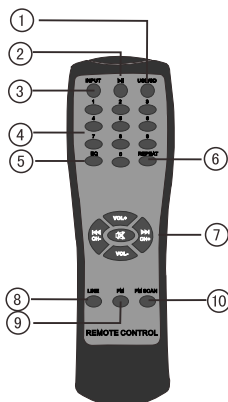

 1. USB/SD select key
2. USB/SD play/pause control key
3. Input select USB/SD; FM; LINE; BLUE
4. USB/SD play number select key
5. EQ control key
6. USB/SD play repeat select key
7. Play control & FM CH- or CH+ & volume + or -
8. Line AUX input select key
9. Radio FM input select key
10. Radio FM scan control key

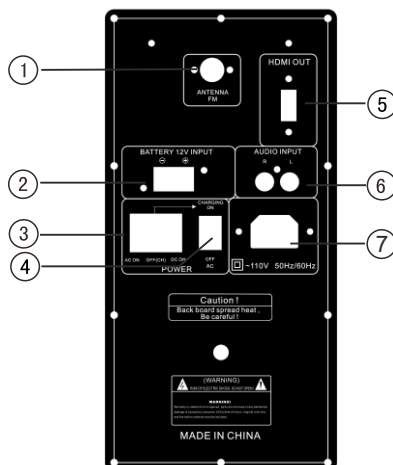

1. Radio FM antenna
2. DC12V battery input
3. DC/AC power on/off
4. AC power on/off
5. HDMI output
6. Audio DVD or AUX input
7. AC ~110V-120V/60Hz input

OPERATION INSTRUCTION FOR KARAOKE & WIRELESS MICROPHONE

 
1. Insert the microphone plug into the microphone input MIC2.
2. Adjust the microphone volume knob MIC VOL for proper volume. Then adjust the echo depth to the proper position. Now you can start the karaoke.
3. Open wireless MIC "on & off" button, Adjust the microphone volume knob MIC VOL for proper volume. and adjust the echo depth to the proper position. Then you can start the wireless Microphone.

SPEAKER SYSTEM

OPERATION PANEL

Bluetooth® Connection:

1. Please press the “MODE” button to start the Bluetooth® connection. This will turn on the Bluetooth® flashing LED light on the control panel.
2. Your unit will now be ready to pair with your mobile device via Bluetooth®. From your mobile device scan for “LAX-MAX”. The password for connection is “0000” and once you have paired your device to the DJ system, the LED flashing light will become solid.
3. You can control the volume and tracks from the unit's control panel or from your external Bluetooth® enabled device.

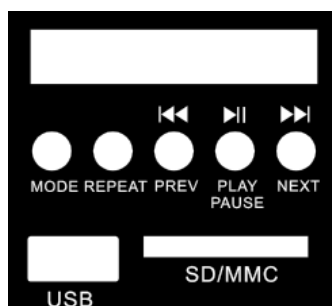

- MODE : AUX . BLUE . USB/SD . FM;
- REPEAT : PRESS ONE TIME REPEAT SINGLE, PRESS TWO TIMES REPEAT ALL
- ◀◀ PREV OR RADIO FM CHANNEL -
- ▶▶ PL/PA OR RADIO FM SCAN
- ▶▶ NEXT OR RADIO FM CHANNEL+

Matters need attention:

1. Battery is integrated in the unit with an auto protection function. When the battery is out of power and you need to recharge your speaker unit be sure the power switch is ON before you connect the system to 110V power plug. When your unit is charging the red LED indicator will be ON. PLEASE NOTE: If you do not set the power switch to ON before charging the unit, the battery auto protection will take effect and the unit will NOT charge.
2. Full recharge takes 8-12 hours
3. Voltage for recharge must be ~110V-120V
4. When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
5. To protect the lifespan of the built in battery ,be sure to fully charge your unit on the same day the battery runs out. Not charging your unit right away can hurt the long term life span of your unit.
6. When you change fuse, please use model (10A)

OPERATION PANEL

Output power(RMS): 50W
Output Impedance: 4(ohm)
S/N: 76dB
Input sensitivity: 500mV
Frequency response: 40Hz-20KHz
Rating Voltage: ~ 110V-120V/50-60Hz

VALUED CUSTOMER

Thank you for purchasing the LAX-MAX New Generation professional DJ system, please be sure to follow operating instructions to insure proper use of this unit.

Keep this manual for your future reference.

Your name _____
Address: _____
Office number: _____
Home number: _____
Product model: _____
Date of purchase: _____
Invoice number: _____
Name and address of shop: _____
Repair record: _____
User's comment: _____

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



MODELO: LI-S244
MODELO NAME: PULSE

 
Manual de Usuario




Nota: conforme vamos actualizando nuestro producto, nos reservamos el derecho de modificar el producto sin notificación por adelantado.

PANEL DE OPERACIÓN


Schematic diagram:

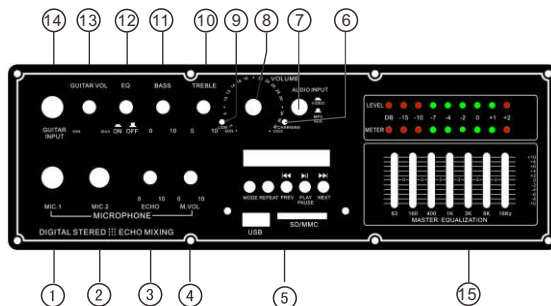

 1. MIC 1 input jack;
2. MIC 2 input jack;
3. MIC echo adjuster;
4. MIC volume;
5. USB/SD player control key ;
6. Charging & full LED;
7. Audio input Video & Mp3 Switch
8. Volume Adjustor;
9. Low voltage LED
10. Main treble volume;
11. Main bass volume;
12. EQ on/off key;
13. Guitar volume ;
14. Guitar input jack;
15. EQ control;

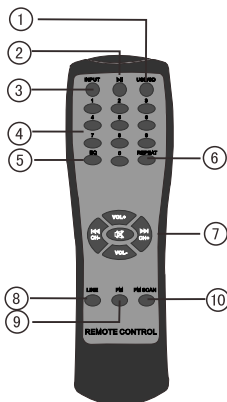

 1. USB/SD select key
2. USB/SD play/pause control key
3. Input select USB/SD; FM; LINE; BLUE
4. USB/SD play number select key
5. EQ control key
6. USB/SD play repeat select key
7. Play control & FM CH- or CH+ & volume + or -
8. Line AUX input select key
9. Radio FM input select key
10. Radio FM scan control key

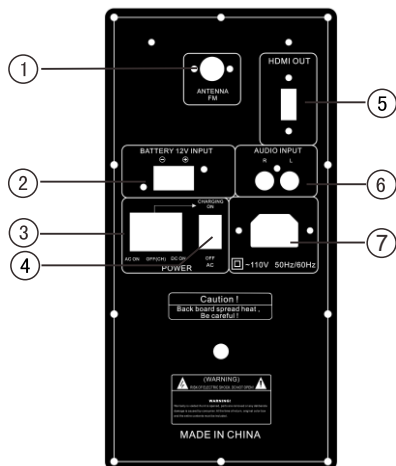

1. Radio FM antenna
2. DC 12V battery input
3. DC/AC power on/off
4. AC power on/off
5. HDMI output
6. Audio DVD or AUX input
7. AC ~110V-120V/60Hz input

INSTRUCCIONES DE OPERACIÓN PARA KARAOKE Y MICRÓFONO INALÁMBRICO

1. Conecte el enchufe del micrófono a la entrada de MIC 2.


2. Ajuste el volumen de micrófono en la perilla de MIC VOL para obtener el volumen deseado. Luego ajuste la profundidad del eco a la posición correcta. Ahora puede comenzar a usar el karaoke.

3. Abra el botón de MIC inalámbrico ON/OFF. Ajuste el volumen del micrófono en la perilla MIC VOL para obtener el volumen deseado y ajuste la profundidad del eco a la posición correcta. Ahora puede comenzar a usar el micrófono inalámbrico.

PANEL DE OPERACIÓN

CONEXIÓN BLUETOOTH® :

1. Presione el botón MODE para comenzar a usar la función de conexión Bluetooth® . Esto encenderá una luz parpadeante de conexión Bluetooth® en el panel de control.
2. Su unidad está ahora lista para emparejar su dispositivo móvil a través de la conexión Bluetooth® . Desde su dispositivo móvil busque "LAX-MAX". La contraseña para la conexión es "0000" y una vez emparejado su dispositivo con el sistema de DJ la luz parpadeante se volverá fija.
3. Mientras usa la función Bluetooth® puede controlar el volumen y las canciones desde el panel de control o desde su dispositivo móvil.

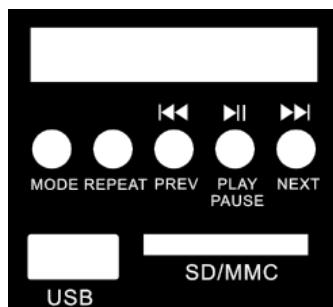

- MODE : AUX . BLUE . USB/SD . FM;
- REPEAT : PRESS ONE TIME REPEAT SINGLE, PRESS TWO TIMES REPEAT ALL
- ◀◀ PREV OR RADIO FM CHANNEL -
- ▶▶ PL/PA OR RADIO FM SCAN
- ▶▶ NEXT OR RADIO FM CHANNEL+

ASUNTOS QUE REQUIEREN ATENCIÓN:

1. Las celdas de batería están integradas dentro del producto, con función de auto-protección. Cuando las baterías se queden sin carga, debe encender el interruptor antes de conectar al enchufe de 110V, de otra manera la auto-protección comenzará a funcionar y no se cargará la batería. Durante la recarga el indicador de luz roja se encenderá.
2. La recarga completa toma de 8-12 horas.
3. El voltaje para recarga debe ser de 110V-120V.
4. Cuando escuche música con energía eléctrica externa, encienda el interruptor de batería.
5. Para que la vida de la batería dure un largo periodo, recargue completamente el mismo día que se quede sin batería. Entre más tiempo le tome recargar la batería, esto puede dañar la duración de vida de la batería.
6. Cuando cambie el fusible, use uno del mismo modelo (10A)

PANEL DE OPERACIÓN

Salida de energía (RMS): 50W
Salida de resistencia: 4 (OHMS)
S/R 76 dB
Entrada de sensibilidad: 500mV
Frecuencia de respuesta: 50Hz-18KHz
Valor de voltaje: ~ 110V-120V 50Hz/60Hz

CLIENTE VALIOSO

Gracias por comprar el Sistema Profesional de DJ de LAX-MAX New Generación, asegúrese de seguir las instrucciones de operación para garantizar el uso correcto de esta unidad. Guarde este manual para futuras referencias.

Nombre: _____
Dirección: _____
Tel. Oficina: _____
Tel. Casa: _____
Modelo del Producto: _____
Fecha de compra: _____
Número de Factura: _____
Nombre y dirección de la tienda: _____
Registro de Reparación: _____
Comentarios del usuario: _____
