


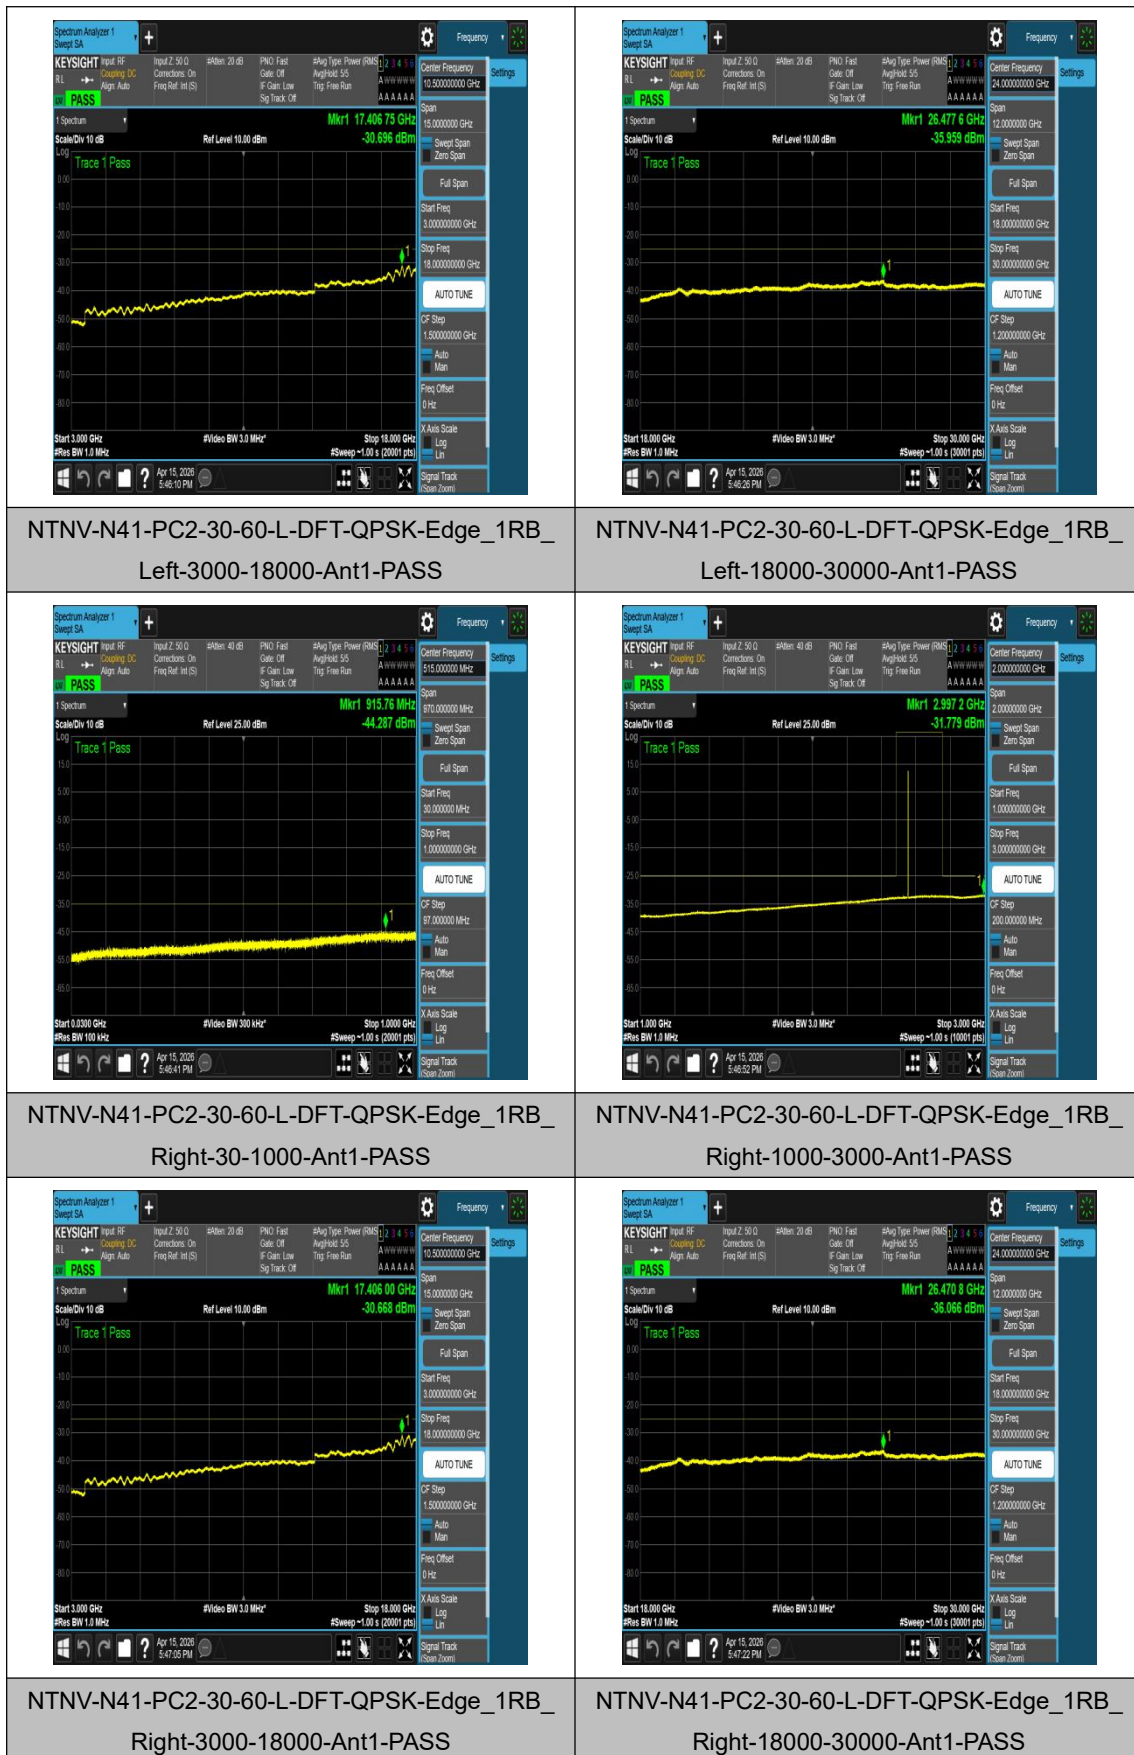


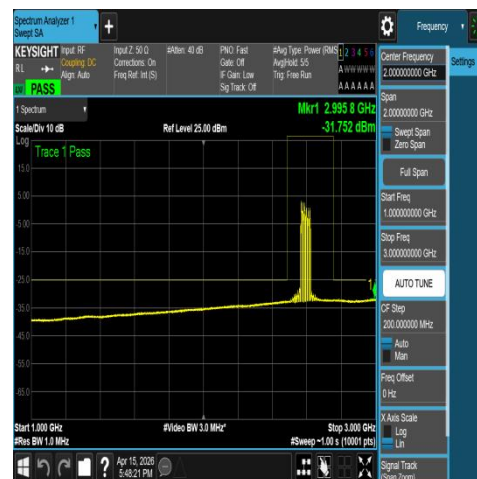

NTNV-N41-PC2-30-60-M-DFT-QPSK-Outer_Full-3
0-1000-Ant1-PASSNTNV-N41-PC2-30-60-M-DFT-QPSK-Outer_Full-1
000-3000-Ant1-PASSNTNV-N41-PC2-30-60-M-DFT-QPSK-Outer_Full-3
000-18000-Ant1-PASSNTNV-N41-PC2-30-60-M-DFT-QPSK-Outer_Full-1
8000-30000-Ant1-PASSNTNV-N41-PC2-30-60-M-DFT-QPSK-Edge_1RB_
Left-30-1000-Ant1-PASSNTNV-N41-PC2-30-60-M-DFT-QPSK-Edge_1RB_
Left-1000-3000-Ant1-PASS

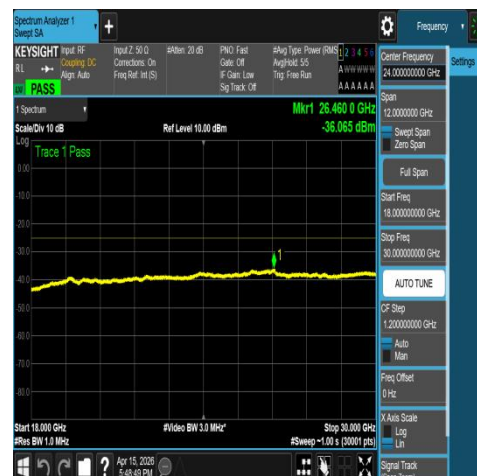

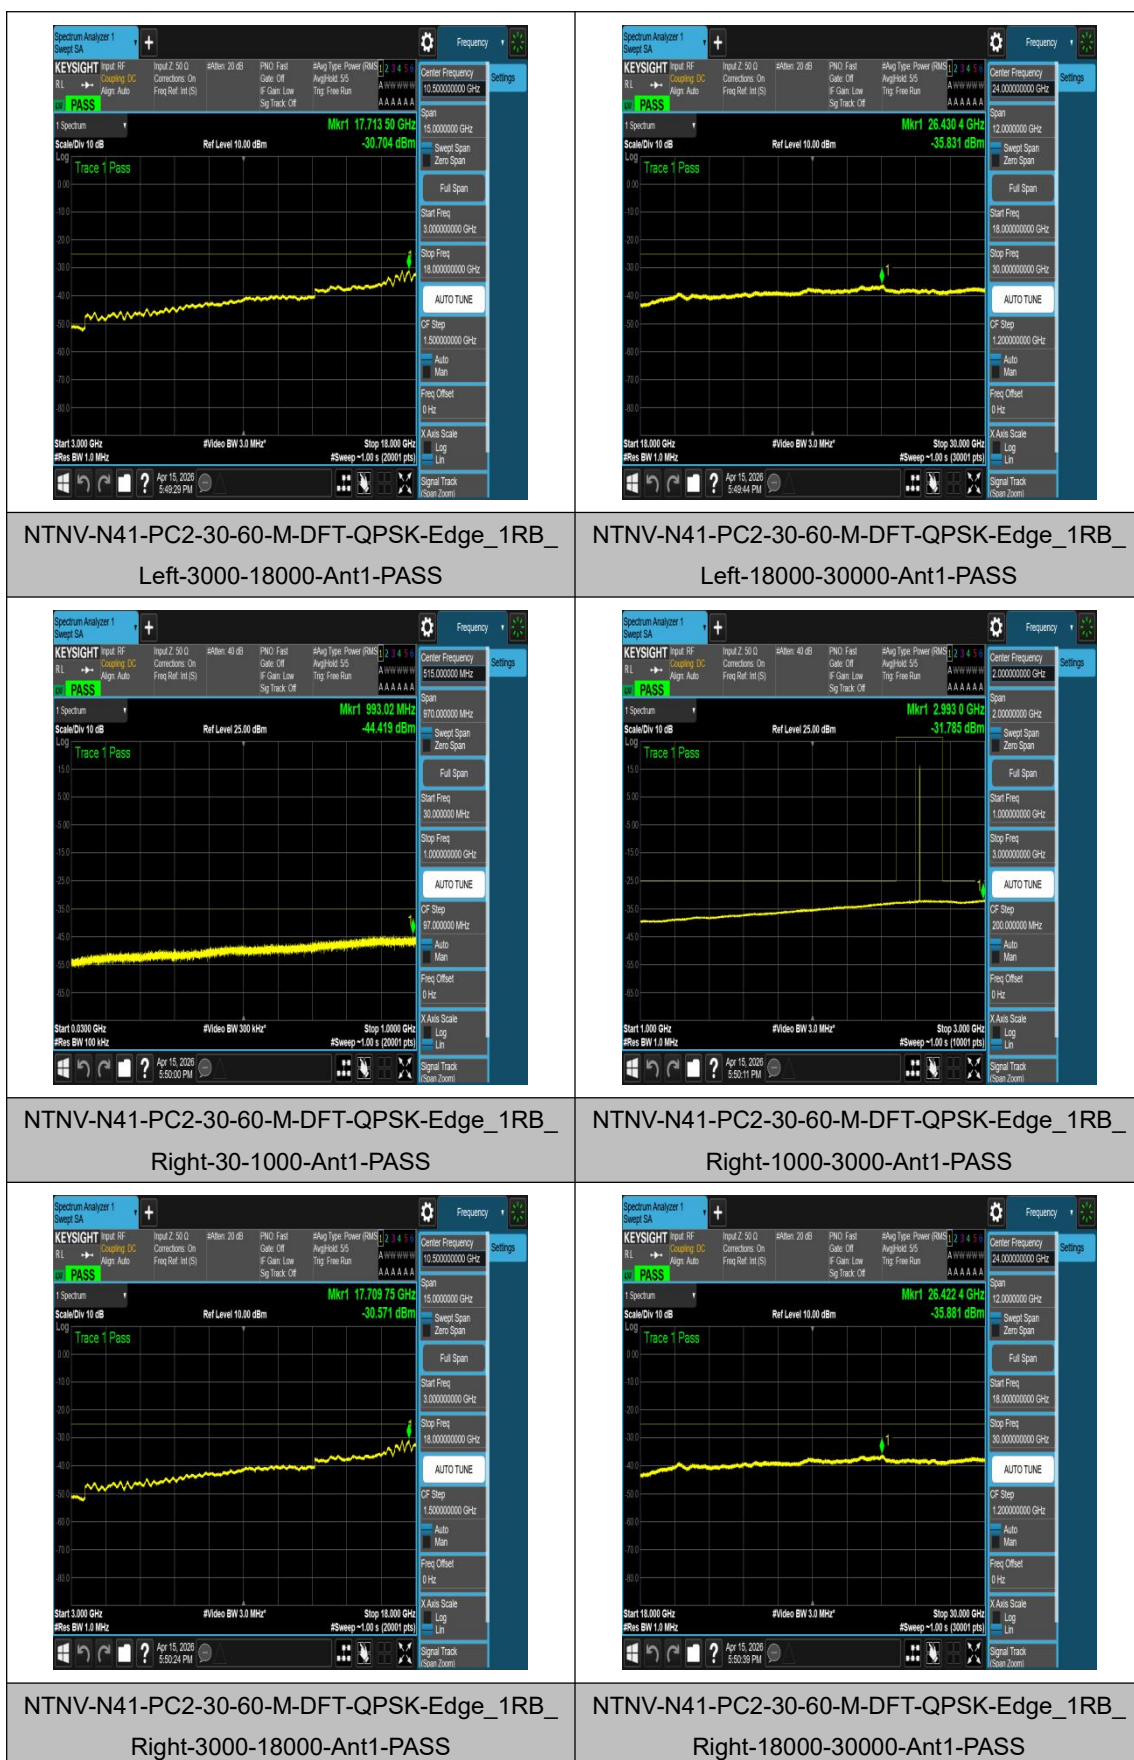

NTNV-N41-PC2-30-60-H-DFT-QPSK-Outet_Full-3
0-1000-Ant1-PASS



NTNV-N41-PC2-30-60-H-DFT-QPSK-Outet_Full-1
000-3000-Ant1-PASS



NTNV-N41-PC2-30-60-H-DFT-QPSK-Outet_Full-3
000-18000-Ant1-PASS



NTNV-N41-PC2-30-60-H-DFT-QPSK-Outet_Full-1
8000-30000-Ant1-PASS



NTNV-N41-PC2-30-60-H-DFT-QPSK-Edge_1RB_
Left-30-1000-Ant1-PASS



NTNV-N41-PC2-30-60-H-DFT-QPSK-Edge_1RB_
Left-1000-3000-Ant1-PASS

