

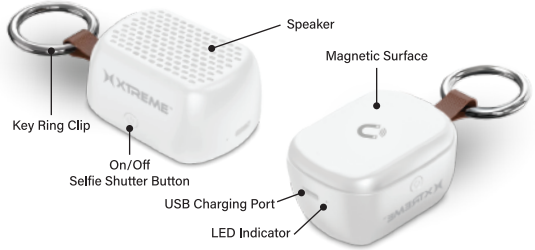
 PRINTER SLUG FOR TECH PACK	
BRAND: XTREME CATEGORY: Audio PRODUCT NAME: XB59-1086 FILE NAME: XB59-1086_UserManual ITEM NUMBER: XB59-1086	ADDITIONAL PRINTING PROCESSES: UV SPOT: GLOSS METALLIC FOIL: DEBOSS: EMBOSS:
	VARNISHING TECHNIQUE: MATTE LAMINATION
	PRESS SPEC COLOR REFERENCES DIELINE GLOSS UV SPOT EMBOSSING (RELIEF) DEBOSSING (SUNKEN) FOLDING LINE PRODUCT PLACEMENT FOILING GLUE FOLD Ø20mm SECURITY STICKERS PLACEMENT BLISTER OR INNER TRAY PLACEMENT CLOTH LIFT TAG
	ADDITIONAL PANTONE COLORS (NOT CMYK) SOLID COLOR NAME: NEON COLOR NAME: METALLIC COLORS: VENDOR'S FOIL NAME/NUMBER:
PRESS WORK: PRINT 1/1. TRIM TO SIZE, SCORE, FOLD WHEN SPECIFIED	
SCALE: 100%	
ASSEMBLED PACKAGE DIMENSIONS (in Inches) WIDTH: 3" HEIGHT: 4.9" DEPTH:	
DIELINE OVERALL DIMENSIONS (in Millimeters) WIDTH: 78.065mm HEIGHT: 124.873mm	
MANUAL MATERIAL, THICKNESS & SIZE	
SUBSTRATE TYPE: MATTE ART PAPER C2S, 100gsm	
WINDOW:	
INNER TRAY:	
BLISTER:	
PLASTIC BAG:	
MAGNET:	
VELCRO:	
SECURITY STICKERS:	
HANG TAB COLOR/ MATERIAL/SIZE:	
FOAM	
CORRUGATED BOARD:	
PAPERBOARD:	
USER MANUAL: PRINT 1/1 IN BLACK ONLY	
PACKAGING TYPES	
FOLDING CARTON:	
FOLDING CARTON WITH DOOR PANEL:	
RIGIT GIFT BOX:	
CLAMSHELL:	
SLIDING/SLIPCASE:	
TRAPPED BLISTER CARD	
BLISTER CARD:	
OTHER:	
	APPROVAL CHECKLIST: PRIMARY DESIGNER: Rita Manukyan DATE: 07/31/2025 SECONDARY DESIGNER: DATE: PROOF READ: DATE: APPROVED BY: DATE: AUTHORIZATION SIGNATURES:

Press Ready Artwork.
DO NOT PRINT THIS LAYER:
Printer Slug

PRINTABLE LAYER:
Manual Artwork

TRUE WIRELESS STEREO	FCC STATEMENT	ONE YEAR LIMITED WARRANTY
True Wireless Stereo (TWS) mimics immersive stereo sound by wirelessly synchronizing two speakers to create left and right audio channels. To enter TWS mode, you will need a second speaker (sold separately). NOTE: To enter TWS Mode, both speakers must be in pairing mode and NOT connected to your smartphone via Bluetooth. Before proceeding, please disconnect the speaker(s) in your smartphone's Bluetooth settings. To set up TWS, follow these steps: 1. Press and hold the On/Off Button on both speakers until they power on into pairing mode. 2. Press the On/Off Button on one speaker 3 times in a row to enter TWS Mode. You will hear an audio prompt when this is complete. 3. Go to your smartphone's Bluetooth settings and select "Xtreme XB59-1086" from the list of available new devices. Your speakers will now connect to your smartphone for simultaneous, TWS audio. Once you set up TWS Mode, the two speakers will automatically re-enter TWS Mode whenever you turn them on. If you want to disconnect your speakers and exit TWS Mode, press the On/Off Button on one speaker 3 times in a row. TIPS • Performance can be affected by the environment or when your speaker becomes discharged. • Interruption can be caused by obstacles between the speaker and your smartphone or Bluetooth device, by Wi-Fi or other high-frequency signals, or if the speaker is brought out of range of the smartphone or Bluetooth device (approximately 33 feet). • To maintain healthy battery performance, charge the speaker periodically if not in use. • To clean, wipe the speaker's exterior only with a soft, clean cloth. Do not use abrasive cleaning solvents.	Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures: • Reorient or relocate the receiving antenna • Increase the separation between the equipment and receiver • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected • Consult the dealer or an experienced radio/TV technician for help FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. 	Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied. Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com Scan the QR code on the front of this manual to extend your warranty from 1 Year to 2 Year Limited. XB59-1086 User Manual V1.0 0925 855.999.8041 WWW.XTREMECABLES.COM  Scan to Extend Your Warranty

BACK PAGE

SAFETY AND CARE INSTRUCTIONS	INTRODUCTION	PRODUCT DESCRIPTION & SETUP	SETUP & OPERATIONS
Read all the instructions before using this product and store them for future reference. • Noise is measured in decibels (dB). Long-term exposure to noise levels of 85 dB or higher can gradually cause hearing loss. To protect your hearing, monitor your usage: The louder the sound, the shorter the time you should be exposed to it. Conversely, the softer the sound, the longer you can listen safely. For detailed information on preventing noise-induced hearing loss (NIHL) and a comprehensive list of harmful noise levels, visit the Hearing Heath Foundation at www.dr4.org. • Turn down the volume on the speaker before turning on audio playback. • Do not use this product for anything other than what it was intended for. • Do not open, modify, or disassemble this product. There are no serviceable parts inside. • This product contains a non-replaceable rechargeable lithium-polymer battery. When discarding, follow your local/state guidelines. • Disconnect the USB cable once the product is fully charged. • Performance can be affected by the environment or when the product becomes discharged. • Charge the product fully before storing it for a long period. NOTE: Lithium-polymer batteries will self-discharge over time. To ensure battery life, do not store the product in a discharged state for a long period of time. Leaving the lithium-polymer battery discharged for too long can render it unchargeable. • Interruption can be caused by obstacles between the product and Bluetooth device, by Wi-Fi or other high-frequency signals, or if the product is brought out of range of the Bluetooth device. • Do not expose the product to extremely high or extremely low temperatures. • Do not expose the product to heat sources or leave it in a location that is likely to get excessively hot. • Do not let the product get wet. • Do not use abrasive cleaning solvents to clean the product. • This product is not a toy. Do not allow children or others who require supervision to use the product unsupervised.	Thank you for choosing the Xtreme Mini Wireless Magnetic Speaker! Enjoy quality sound with a keychain-friendly speaker that syncs wirelessly to your smartphone for enhanced music, calls, and streaming at home or on the go. The speaker doubles as a selfie shutter and features a magnetic surface that snaps to compatible magnetic devices, making it the perfect companion to your smartphone. FEATURES • Syncs wirelessly to your device within 33 feet • Enhances calls, music, streaming, and other audio • Plays up to 2-3 hours of audio when fully charged • Charges in 1.5 hours with the included USB cable • Snaps to compatible magnetic smartphones, or use the included adapter ring • Hooks onto keychains, bags, and belts • Pairs with another speaker for True Wireless Stereo (second speaker sold separately) SPECIFICATIONS • Input: 5V=0.5A • Output: 3W • Battery Capacity: 300mAh • Charging Time: 1.5 Hours • Playback Time: 2-3 Hours • Bluetooth Version: 5.3 WHAT'S INSIDE • Mini Wireless Magnetic Speaker • Adhesive Magnet Adapter Ring • Key Ring Clip • USB Charging Cable • User Manual	 Carefully remove the components from the package and charge your speaker fully before first use. CHARGING INSTRUCTIONS 1. Insert the USB-C end of the included charging cable into the USB-C port on the speaker. Insert the other end into a USB port or appropriate power adapter (sold separately). 2. The LED indicator light beside the speaker's USB-C port will illuminate red when the speaker is charging. Once it is fully charged, the indicator light will turn off. MAGNETIC MOUNTING INSTRUCTIONS Your speaker features a built-in magnetic surface that snaps onto the back of compatible magnetic iPhone® models (series 12 and newer). For other smartphones, you can attach the included adapter ring to your device to create a suitable magnetic surface for the speaker: • Clean the back of your smartphone to ensure it is free of dust and debris. • Peel off the protective film from the adhesive side of the included adapter ring. • Firmly press the adapter ring onto your desired location on the back of your smartphone. The metal adhesive ring is designed for single-use only. Once removed, the adhesive loses its stickiness and cannot be reapplied. Caution: Do Not Use while Wireless Charging The adhesive magnet adapter ring should be removed from the phone/case if the phone is being placed on a wireless charger. Wireless charging could heat the metal ring causing burns or damage to the device. The adhesive magnet adapter ring should not be used with battery charging cases. It is only intended for use with standard phone cases.	BLUETOOTH® PAIRING INSTRUCTIONS 1. Press and hold the On/Off Button on the speaker until the device powers on. The indicator light will blink blue to indicate that the speaker is in pairing mode. 2. Open the Bluetooth settings on your smartphone and select "Xtreme XB59-1086" from the list of available new devices. 3. The speaker will emit a chime tone when pairing is complete, and the indicator light will turn solid blue. If you are unable to connect your speaker to your smartphone, try the following: • Ensure the speaker and your smartphone are turned on and fully charged. • Make sure your smartphone's Bluetooth setting is switched on. • Restart your smartphone. OPERATIONS POWER ON/OFF: Press and hold the On/Off Button for 3 seconds. PLAY/PAUSE AUDIO: Press the On/Off Button. NOTE: For volume adjustment and other audio controls, you must use your smartphone. SELFIE MODE Once your speaker is connected to your smartphone with Bluetooth, you can use it to take selfies and photos without touching your smartphone in Selfie Mode: 1. Go to the camera app or enter camera mode on your smartphone. 2. Press your speaker's On/Off Button 2 times in a row to enter Selfie Mode, with a chime tone. 3. You can now take a photo by pressing the On/Off Button 1 time (NOTE: The speaker must be within 33 feet of your device for this to work). 4. To exit Selfie Mode, press your speaker's On/Off Button 2 times in a row, with a chime tone.

When folded, please make sure that this title page is visible and not folded inside.

FRONT PAGE