

About This Manual

Thank you for choosing the Akuvox C313W-2 indoor monitor. This manual is intended for the administrators who need to properly configure the indoor monitor. This manual applies to the 212.30.6.40 version, and it provides all the configurations for the functions and features of the C313W-2 indoor monitor. Please visit the Akuvox website or consult technical support for any new information or the latest firmware.

Introduction of Icons and Symbols



Warning:

- Always abide by this information in order to prevent the persons from injury.



Caution:

- Always abide by this information in order to prevent the damages to the device.



Note:

- Informative information and advice from the efficient use of the device.



Tip:

- Useful information for the quick and efficient use of the device.

Related Documentation

You are advised to refer to the related documents for more technical information via the link below:

<http://knowledge.akuvox.com>

**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co - located or operating in conjunction with any other antenna or transmitter. To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm from your body.

Table of Contents

1. Product Overview.....	1
2. Change Log.....	2
3. Introduction to Configuration Menu.....	3
4. Access the Device.....	5
4.1. Device Start-up Selection.....	5
4.2. Device Home Screen Type Selection.....	6
4.3. Accessing the Device Setting on the Device.....	7
4.3.1. Accessing Device Basic Setting.....	7
4.3.2. Accessing Device Advanced Setting.....	7
4.4. Access the Device Setting on the Web Interface.....	8
5. Language and Time Setting.....	11
5.1. Language Setting.....	11
5.1.1. Language Setting on the Device.....	11
5.1.2. Language Setting on the Web Interface.....	12
5.2. Time Setting.....	12
5.2.1. Time Setting on the Device.....	12
5.2.2. Time Setting on the Device Web Interface.....	14
5.2.2.1. Time Setting on the Device Web Interface.....	14
5.2.2.2. Daylight Saving Time Setting.....	15
6. Screen Display Configuration.....	17
6.1. Screen Display setting on the Device.....	17
6.2. Screen Display Setting on the Web Interface.....	18
6.3. Screensaver Configuration.....	18
6.4. Upload Device Booting Image.....	20
6.5. Upload Web interface logo.....	20
6.6. Icon Screen Display Configuration.....	21
7. Sound and Volume Configuration.....	24
7.1. Volume Configuration.....	24
7.1.1. Configure Volume on the Device.....	24
7.1.2. Configure Volume on the Web Interface.....	25
8. Phone Book Configuration.....	26
8.1. Phone Book Configuration on the Device.....	26
8.1.1. Add Contacts.....	26
8.1.2. Edit Contacts.....	27
8.1.3. Blocklist Settings on the Device.....	27
8.2. Phone Book Configuration on the Web Interface.....	28
8.2.1. Contact Configuration.....	28
8.2.2. Contact Management.....	29
8.2.3. Block List Setting on the Web Interface.....	30
8.2.4. Contact Display.....	31


8.2.5. Contacts Import and Export on the Web Interface.....	32
9. Network Setting.....	33
9.1. Device Network Configuration.....	33
9.1.1. Configuring Network Connection on the Device.....	33
9.1.2. Configuring Device Network Connection on the Web Interface.....	34
9.2. Device Deployment in Network.....	36
9.3. Device NAT Setting.....	37
9.4. Device Wi-Fi Setting.....	37
9.5. VLAN Setting.....	38
10. Intercom Call Configuration.....	40
10.1. IP call & IP Call Configuration.....	40
10.2. SIP Call & SIP Call Configuration.....	40
10.3. SIP Account Registration.....	41
10.4. SIP Server Configuration.....	42
10.5. Outbound Proxy Server configuration.....	43
10.6. SIP Call Configuration.....	44
10.7. Device Local RTP configuration.....	44
10.8. Data Transmission Type Configuration.....	45
10.9. Call Setting.....	46
10.9.1. Call Auto-answer Configuration.....	46
10.9.2. Auto-answer Allow List setting.....	46
10.10. Intercom Call Configuration.....	48
10.11. SIP Hacking Protection.....	48
10.12. Emergency Call Setting.....	49
10.12.1. SOS icon Display.....	49
10.12.2. SOS Number Settings on web Interface.....	50
10.12.3. SOS Number Settings on device.....	50
10.13. Multicast Configuration.....	51
10.14. Call Forwarding Setting.....	52
10.14.1. Call Forwarding Configuration on the Device.....	53
10.14.2. Call Forwarding Configuration on the Web Interface.....	54
11. Intercom Message Setting.....	55
11.1. Manage Text Messages.....	55
11.2. Manage Voice Message.....	56
12. Audio& Video Codec Configuration for SIP Calls.....	57
12.1. Audio Codec Configuration.....	57
12.2. Video Codec Configuration.....	58
13. Security.....	59
13.1. Monitor and Image.....	59
13.1.1. Monitor Setting.....	59
13.1.2. Web camera Setting.....	60
13.1.3. Video Image Capturing.....	61
13.2. Alarm and Arming Configuration.....	63
13.2.1. Configure Alarm and Arming on the Device.....	64

13.2.2. Configure Alarm and Arming on the Web Interface.....	66
13.2.3. Configure Location-based Alarm on the device screen.....	67
13.2.4. Configure Location-based Alarm on the Web Interface.....	68
13.2.5. Configure Alarm Text.....	69
13.2.6. Configure Arming mode.....	69
13.2.7. Alarm Action Configuration.....	70
13.2.7.1. Select Alarm Action Types.....	70
13.2.7.2. Configure Alarm Action via HTTP Command.....	71
13.2.7.3. Configure Alarm Action via SIP Message.....	72
13.2.7.4. Configure Alarm Action via SIP Call.....	72
13.2.8. Check Alarm Log.....	73
13.3. Screen Unlock Setting.....	74
13.3.1. Screen Unlock by PIN Code.....	75
13.4. Client Certificate Setting.....	75
13.4.1. Web Server Certificate.....	76
13.4.2. Client Certificate.....	76
13.5. Power Output Setting.....	78
14. Door Access Control Configuration.....	79
14.1. Relay Switch Setting.....	79
14.1.1. Local Relay Setting.....	79
14.1.2. Remote Relay Switch Setting.....	79
14.2. Web Relay Setting.....	80
14.3. Door Unlock Configuration.....	81
14.3.1. Door Unlock by DTMF Code.....	81
14.3.2. Door Unlock via HTTP Command.....	82
14.3.3. Unlock by Icon Button.....	83
15. Device Integration with Third Party Device.....	85
15.1. Lift Control.....	85
15.1.1. Configure Lift Control.....	85
15.1.2. Configure Lift Control Prompt.....	86
15.2. Smart Living Setting.....	86
16. Firmware Upgrade.....	88
17. Backup.....	89
18. Auto-provisioning.....	90
18.1. Provisioning Principle.....	90
18.2. Introduction to the Configuration Files for Auto-Provisioning.....	91
18.3. Autop Schedule.....	92
18.4. Static Provisioning Configuration.....	93
19. Call Log.....	96
20. Debug.....	97
20.1. System Log for Debugging.....	97
20.2. PCAP for Debugging.....	98
21. Password Modification.....	99
21.1. Modify Device Advanced Setting Password.....	99

21.2. Modify Device Web Interface Password.....	99
22. System Reboot&Reset.....	101
22.1. Reboot.....	101
22.1.1. Reboot on the Device.....	101
22.1.2. Reboot on the Web Interface.....	101
22.2. Reset.....	102
22.2.1. Reset on the Device.....	102
22.2.2. Reset on the Web Interface.....	103
23. Abbreviations.....	104
24. Contact US.....	107

1. Product Overview

It can be connected with the Akuvox door phone for audio/video communication, unlocking, and monitoring. Residents can communicate with visitors via audio/video call, and it supports unlocking the door remotely. It is more convenient and safer for residents to check the visitor's identity through its video preview function. C313W-2 are often applied to scenarios such as villas, apartments, and buildings.

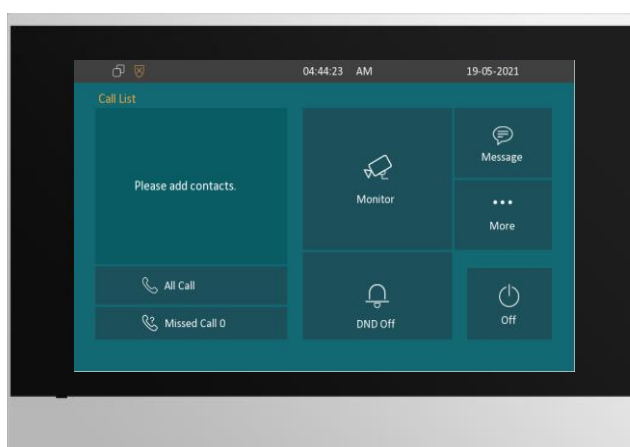

2. Change Log

The change log will be updated here along with the changes in the new software version.

3. Introduction to Configuration Menu

Status: This section gives you basic information such as product information, Network Information, and account information, etc.

Account: This section concerns SIP account, SIP server, proxy server, transport protocol type, audio&video codec, DTMF, session timer, etc.

Network: This section mainly deals with DHCP&Static IP setting, RTP port setting, and device deployment, etc.

Phone: This section includes Time&language, call feature, dial management, data import&export, door log, web relay.

Contacts: This section allows the user to configure the local contact list store in the device.

Upgrade: This section covers Firmware upgrade, device reset&reboot, configuration file auto-provisioning, PCAP.

Security: This section is for password modification, account status & session time out configuration, as well as service location switching.

Settings: This section is including the RTSPD & voice assistance setup.

Arming: This section covers the configuration including, arming zone setting, arming mode, disarm code, and alarm action.

- **Mode selection:**

Discovery mode: It is a plug and play configuration mode. Akuvox devices will configure themselves automatically when users power on the devices and connect them to the network. It is super time-saving mode and it will greatly bring users convenience by reducing manual operations. This mode requires no prior configurations previously by the administrator.

Cloud mode: Akuvox SmartPlus is an all-in-one management system. Akuvox Cloud is the mobile service that allows audio, video, remote access

control between smartphones and Akuvox intercoms. All configurations in the device will be issued automatically from the cloud. If users decide to use Akuvox SmartPlus, please contact Akuvox technical support, and they will help you configure the related settings before using them.

SDMC mode: SDMC (**SIP Device Management Controller**) is a simple and comprehensive software for building management. It provides a topography for a community while offering you a graphical configuration interface for the door access, intercom, monitoring, alarm, etc. It is a convenient tool for property managers to manage, operate, and maintain the community.

- **Tool selection**

Akuvox has many configuration tools for you to set up devices more conveniently. Here we list some common tools, please contact your administrator to get the tool if you need them.


1. **SDMC:** SDMC is suitable for the management of Akuvox devices in large communities, including access control, resident information, remote device control, etc.
2. **Akuvox Upgrade tool:** upgrade Akuvox devices in batch on a LAN (**Local Area Network**)
3. **Akuvox PC Manager:** distribute all configuration items in batch on a LAN.
4. **IP scanner:** it is used to search Akuvox device IP addresses on a LAN.
5. **FacePro:** manage face data in batch for the door phone on a LAN.


4. Access the Device

Akuvox indoor monitor system settings can be either accessed on the device directly or on the device web interface.

4.1. Device Start-up Selection

When you first start up C313W-2 indoor monitor, you need to perform start-up initialization, which include a series of settings, such as language, time zone, networking method and network connection mode. You can also set time, language and network related setting later.

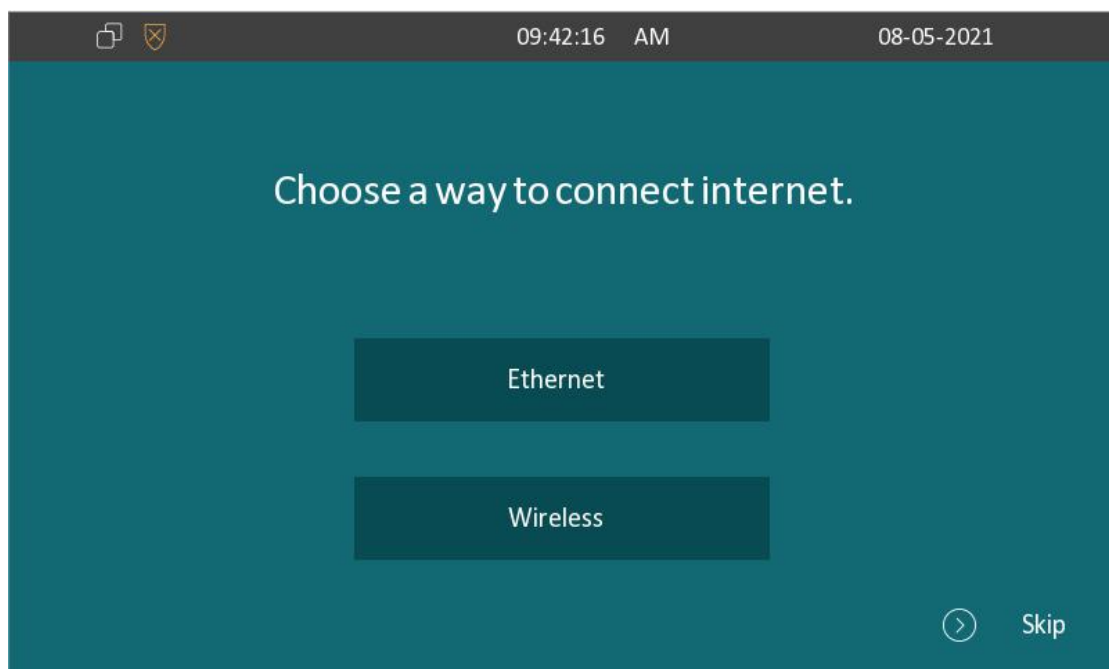

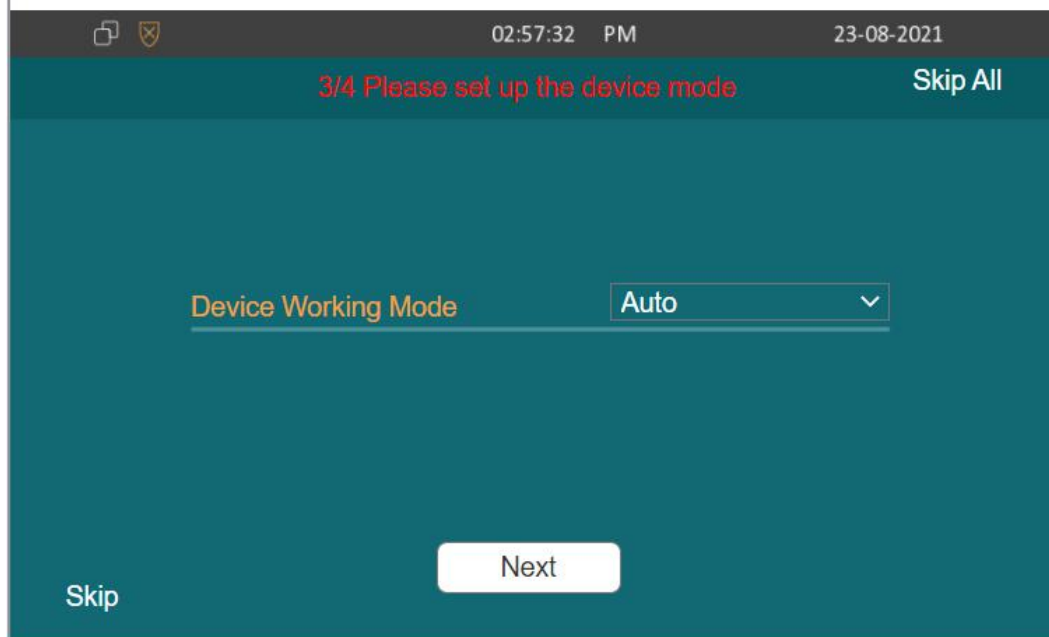

Parameter Set-up:

- **Auto Mode:** If all devices are in **Auto** mode, then one of them will be randomly selected as the master device. The master device will provide the network to the sub devices connected to it.
- **Master Mode:** If **Master** is selected, the device will work as a master device for a house, the other 2-Wire Intercoms will connect with the master device and get the network from the master device.
- **Slave Mode:** If **Slave** is selected, the device will word as the sub device for a house and get the network from the master device.

4.2. Device Home Screen Type Selection

Akuvox indoor monitor supports two different home screen display mode- **Call list Mode, Nine Square Mode**. To configure home page mode on the device web **Phone->Key/Display**, choose one suitable mode for your scenarios.

Home Page Mode

Home Page Mode

Call List Mode

Home Page Display

Call List Mode


Nine Square Mode

Example

4.3. Accessing the Device Setting on the Device


4.3.1. Accessing Device Basic Setting.

You can access the device's basic setting and advance setting where you can configure different types of functions as needed. To access the device basic setting by pressing **More > Settings**.

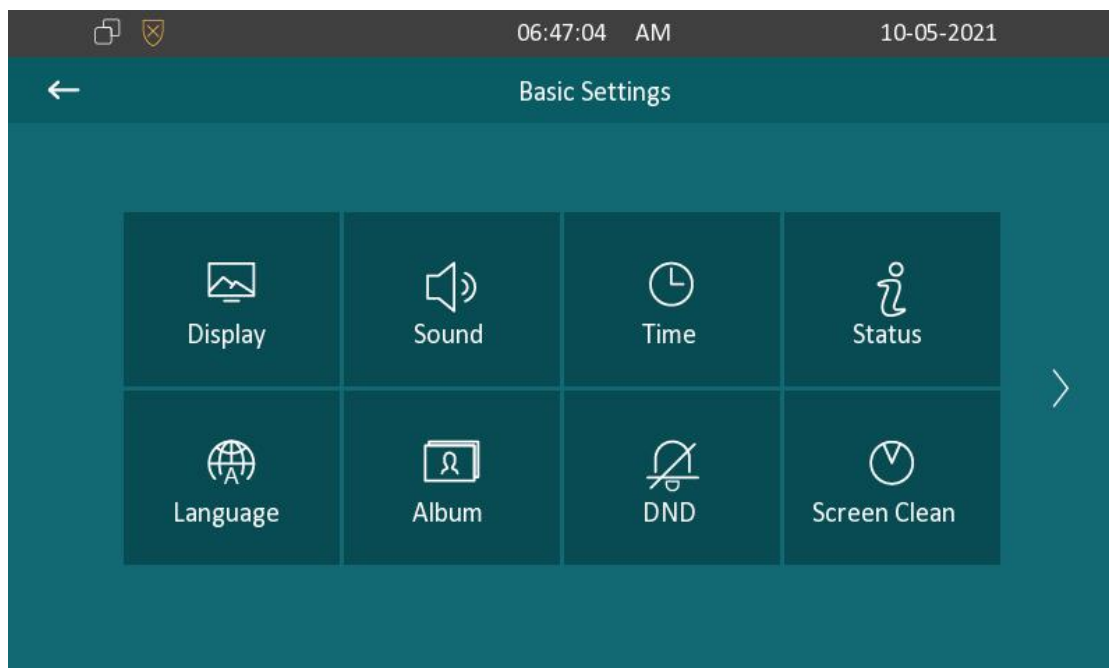


4.3.2. Accessing Device Advanced Setting

To access the advanced setting, press **Setting** then press **Advance** icon. Press password **123456** (by default) to enter the advanced setting.

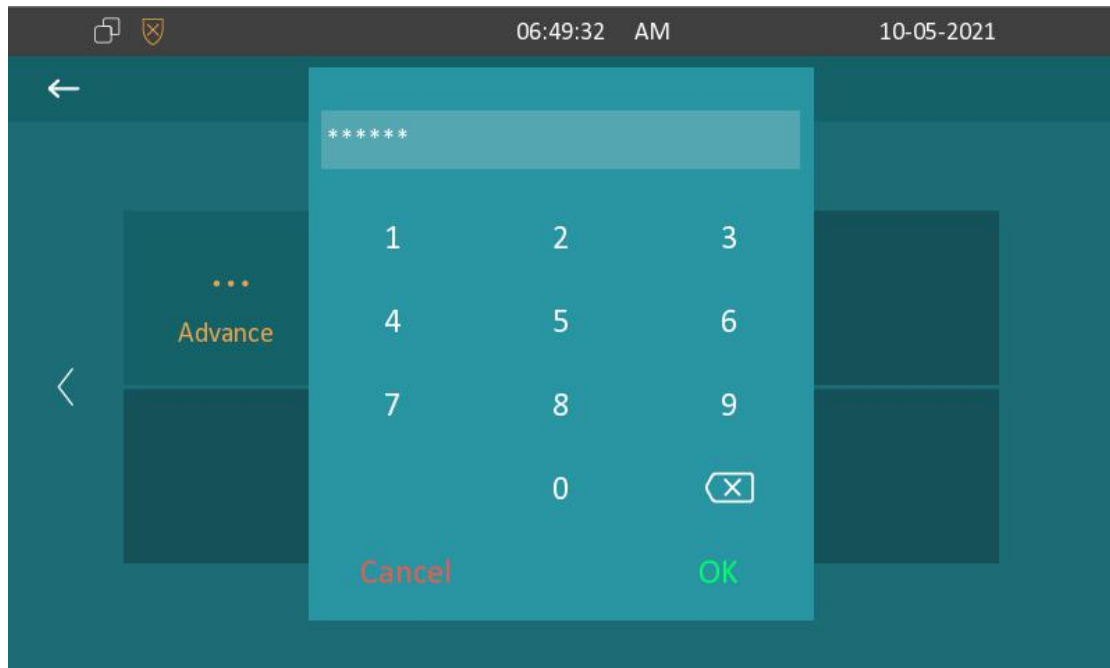


4.4. Access the Device Setting on the Web Interface

You can also enter the device IP address on the web browser in order to log in the device web interface by user name and password **admin/admin** where you can configure and adjust parameter etc.

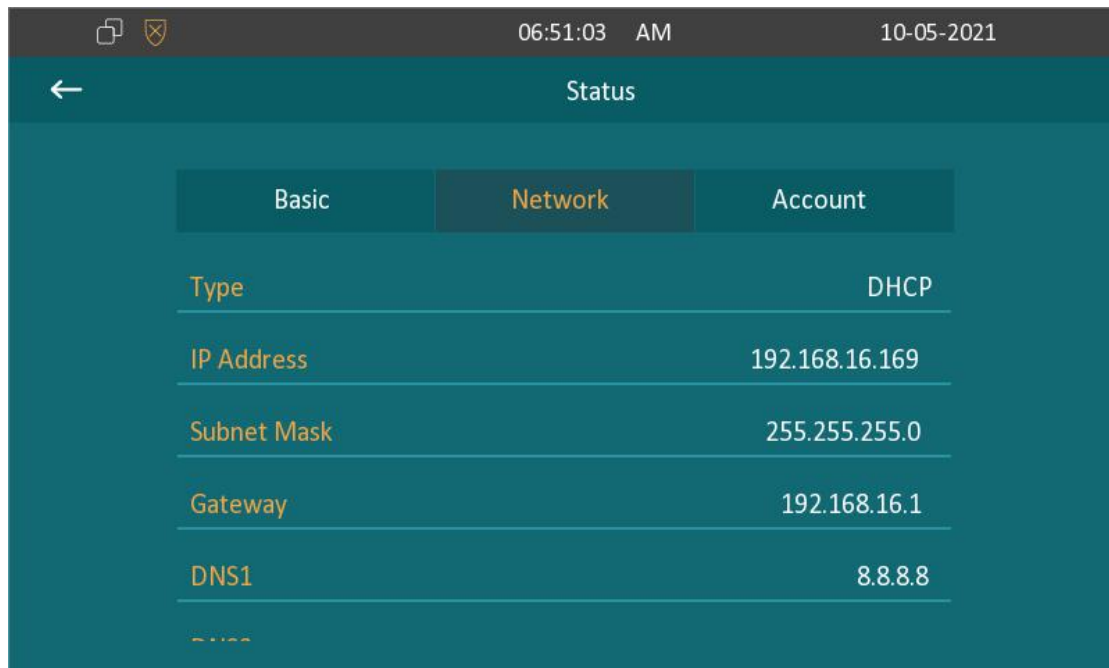

The screenshot shows the 'Status' page of the Akuvox web interface. At the top, there is a status bar with a shield icon, the time '06:51:03 AM', and the date '10-05-2021'. Below this is a navigation bar with a back arrow and the title 'Status'. The main content area has three tabs: 'Basic', 'Network' (which is selected and highlighted in orange), and 'Account'. Under the 'Network' tab, there is a table with the following configuration details:

Type	DHCP
IP Address	192.168.16.169
Subnet Mask	255.255.255.0
Gateway	192.168.16.1
DNS1	8.8.8.8

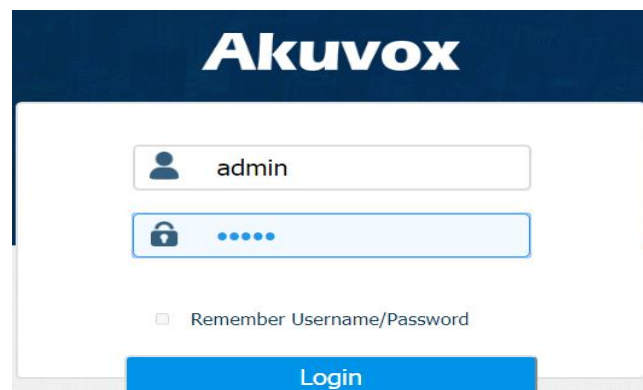

The screenshot shows the login page of the Akuvox web interface. It features the 'Akuvox' logo at the top. Below the logo is a login form with two input fields: a username field containing 'admin' and a password field with masked characters. Below the password field is a checkbox labeled 'Remember Username/Password'. At the bottom of the form is a blue 'Login' button.

✓ Tip:

- You can also obtain the device IP address using the Akuvox IP scanner to log in the device web interface. Please refer to the URL below for the IP scanner application instruction:
[http://wiki.akuvox.com/doku.php?id=tool:ip_scanner&s\[\]=ip&s\[\]=scanner](http://wiki.akuvox.com/doku.php?id=tool:ip_scanner&s[]=ip&s[]=scanner)

**Note:**

- Google Chrome browser is strongly recommended.
- The Initial user name and password are "**admin**" and please be case-sensitive to the user names and passwords entered.


5. Language and Time Setting

5.1. Language Setting

When you first set up the device, you might need to set the language for your need or you can do it later if needed. And the language can either be set up directly on the device or on the device web interface according to your preference.

5.1.1. Language Setting on the Device

Language setting can be configured on the device and on the device web interface that allows you to select or change the language for screen display to your preference. To configure the language display on the device **Setting > Language** screen.

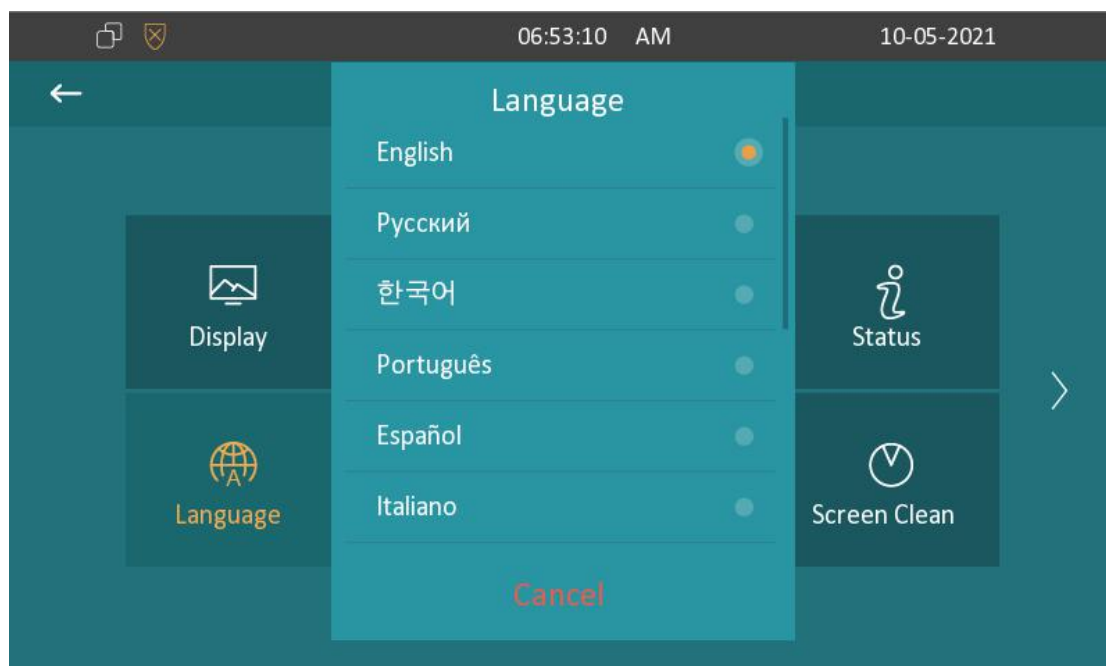

5.1.2. Language Setting on the Web Interface.

To configure the language display on the device web **Phone > Time/Lang** interface. You can either setup the device display language or device web interface language on device web.


Web Language	
Type	English ▼
LCD Language	
Type	English ▼

5.2. Time Setting

Time setting can be set up on the device and on the device web interface in terms of time zone, date and time format etc.

5.2.1. Time Setting on the Device


To set up time setting on the device **More > Setting > Time** screen.

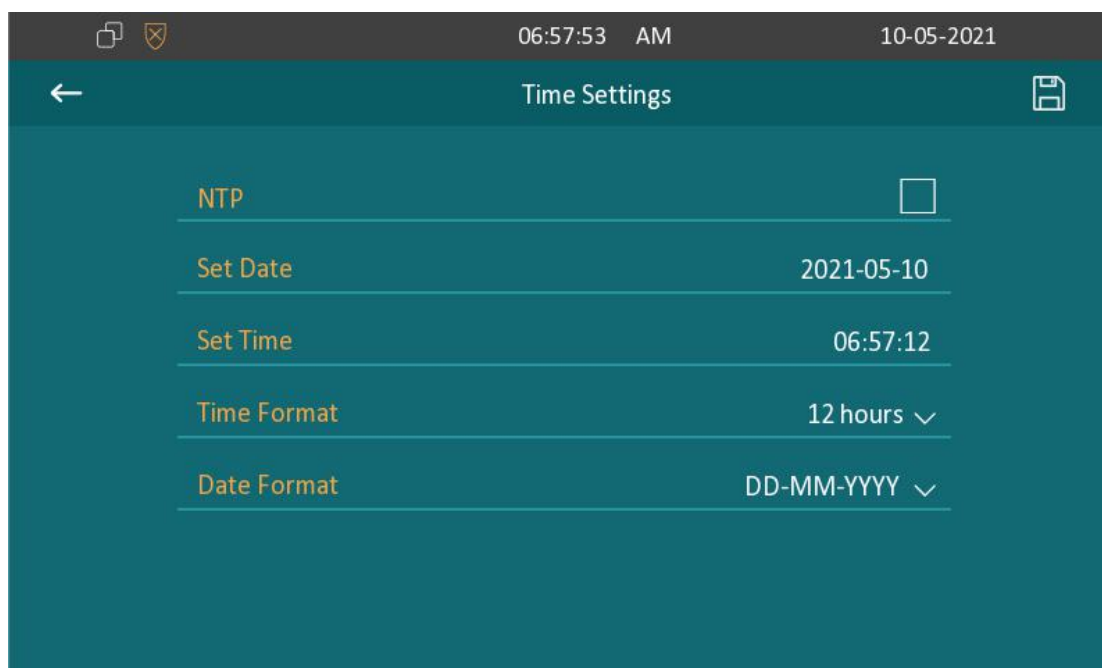

06:57:53 AM 10-05-2021

← Time Settings →

NTP	☐
Set Date	2021-05-10
Set Time	06:57:12
Time Format	12 hours ▾
Date Format	DD-MM-YYYY ▾

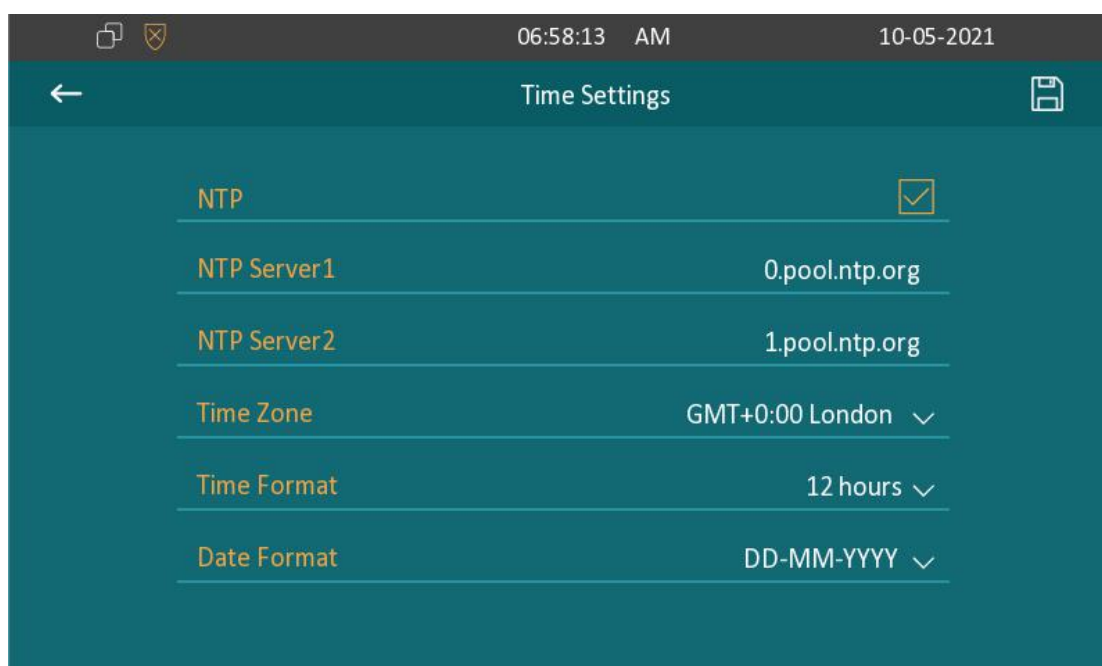

06:58:13 AM 10-05-2021

← Time Settings →

NTP	☒
NTP Server1	0.pool.ntp.org
NTP Server2	1.pool.ntp.org
Time Zone	GMT+0:00 London ▾
Time Format	12 hours ▾
Date Format	DD-MM-YYYY ▾

Parameter Set-up:

- **NTP:** NTP is switched on by default, which allows the date& time to be automatically set up and synchronized with the default time zone and the NTP server (Network Time Protocol). You can also set it up manually by ticking the check box and then enter the time and date you want and press the Save tab to save the setting.
- **Set Date:** Enter the date when it is in manual mode.

- **Set Time:** Enter the time when it is in manual mode.
- **NTP server1&2:** enter the NTP server you obtained in the NTP server field.
- **Time Zone:** select the specific time zone depending on where the device is used. The default time zone is GMT+0.00.
- **Date Format:** select the date format as you like among the three format options. The six formal options are **Y-M-D**, **Y/M/D**, **D-M-Y**, **D/M/Y**, **M-D-Y**, **M/D/Y**.
- **Time Format:** select 12 hour or 24 hour time format as you like.

**Note:**

- When the **NTP** toggle switch is toggled off then parameters related to NTP server will become non-editable. And when the switch is toggled on, then time and date will be denied editing.

5.2.2. Time Setting on the Device Web Interface

5.2.2.1. Time Setting on the Device Web Interface

Time setting on the web **Phone > Time** interface also allows you to set up the NTP server address that you obtained to automatically synchronize your time and date. And when your time zone is selected, the device will automatically notify the NTP server of its time zone so that the NTP server can synchronize the time zone setting in your device.

Format Setting

Time Format Date Format

Type

☐ Manual ☒ Auto

Date Year Mon Day

Time Hour Min Sec

NTP

Time Zone Primary Server

Secondary Server

Update Interval (>= 3600s)

5.2.2.2. Daylight Saving Time Setting

In addition to time settings, you can also configure daylight saving time on the same interface. Modify the time parameters to achieve longer evening or day time, especially in summer.

Daylight Saving Time

Active

OffSet (-300~300Minutes)

☒ By Date ☐ By Week

Start Time Mon Day Hour

End Time Mon Day Hour

Start Month Start Week Of Month

Start Day Of Week Start Hour (0~23)

End Month End Week Of Month

End Day Of Week End Hour (0~23)

Parameter Set-up:


- **Active:** To enable or disable the daylight saving time. You can also configure to make C313W-2 to adjust the daylight saving time automatically.
- **Offset:** To set the offset value, it is 60 minutes as default, setting the clocks an hour ahead of the standard time.
- **By Date:** To set the date schedule for daylight saving time.
- **By Week:** To set the schedule for daylight saving time according to the week and month.

6. Screen Display Configuration

C313W-2 indoor monitor allow you to enjoy a variety of screen displays to enrich your visual and operational experience through the customized setting to your preference.

6.1. Screen Display setting on the Device

You can configure a variety of features of the screen display in terms of brightness and screen saver, etc. You can do this configuration on device **More > Setting > Display** screen.

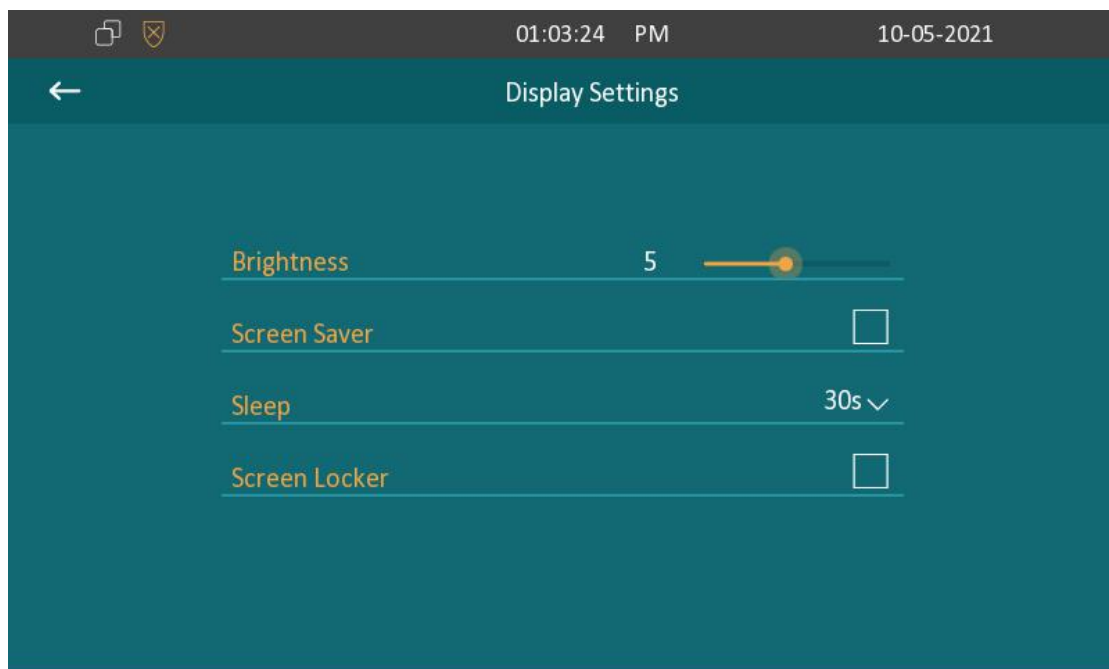

Parameter Set-up:

- **Brightness:** press on the brightness setting and move the yellow dots to adjust the screen brightness. The default brightness is "5".
- **Screen Saver:** tick the square box to enable the screen saver function.
- **Sleep:** set the timing for the device screen to be turned off. You can select the timing among nine options: **15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes, 1 hour**. For example, if you

set it as 1 minute then the screen will be turned off if there is no operation on the device for 1 minute. However, if you turn on the function, then the device screen will not be turned off until screen saver display reaches its configured time duration.

- **Screen Locker:** tick the screen locker if you want to lock the screen after the screen is turned off (turn to dark). You are required to enter the system code to unlock the screen or you can unlock the screen by facial recognition.

6.2. Screen Display Setting on the Web Interface

C313W-2 indoor monitor allows you to enjoy a variety of screen displays to enrich your visual and operational experience through the customized setting to your preference.

6.3. Screensaver Configuration

You can upload screen saver pictures to the device for a public purpose or for a greater visual experience. Upload screen saver on device web interface **Phone > Album > Album**.

Album

Photo

Delete

Upload (Support siz...

Not selected any files

Select File

Submit

Cancel

Screen Saver Options

SDMC and Local Album

Parameter Set-up:

- **Photo:** Choose a photo to configure.
- **Upload:** Choose a photo from the PC and upload this photo to the monitor.

- **Screen Saver Options:** select screen saver type among seven options: **SDMC, Local Album, SDMC+Local Album**. Details for the screen saver types are shown below:

NO	Screen Saver Type	Type Description
1	SDMC Pictures	Display pictures from SDMC as the screen saver.
2	Local Pictures	Display picture uploaded to the indoor monitor as the screen saver.
3	SDMC+Local Pictures	Display pictures from SDMC and the indoor monitor in rotation as the screen saver.


Note:

- The previous pictures with a specific ID order will be overwritten when repetitive designation of pictures to the same ID order occurred.
- The pictures uploaded should be in **JPG format** with 600k maximum.

6.4. Upload Device Booting Image

You can upload the booting image to be displayed during the device's booting process if needed on device web interface **Phone > Album > Logo**.

Boot Logo

Boot Logo(.zip/.png)

Not selected any files

Select File

Import

Reset

(Format: max 1280*800 png)



Note:

- The pictures uploaded should be in **.png or .zip** format.

6.5. Upload Web interface logo

You can upload the logo image to be displayed on web interface if needed on device web interface **Phone > Album > Logo**.

Logo

Boot Logo

Not selected any files

Select File

Submit

Cancel

(Max size:100K; format:800*480 jpg;File name can only contain digits,letters and_.)

Web Logo

Not selected any files

Select File

Submit

Cancel

(Max size:50K; format:166*48 png;File name can only contain digits,letters and_.)

Submit

Cancel



Note:

- The pictures uploaded should be in **.png** format with 50k maximum.

6.6. Icon Screen Display Configuration

C313W-2 indoor monitor allow you to customize icon display on the home screen and **More** screen for the convenience of your operation on device web **Phone > Key/Display** nterface. This article helps you to set up the icon display properly on the screens according to your preference.

Home Page Display

Example

Area	Type	Label
Area1	DND	DND
Area2	Message	
Area3	Enabled	
Area4	Enabled	
Area5	Enabled	
Area6	Enabled	

More Page Display

Example

Area	Type	Label
Area1	Call	
Area2	Contacts	
Area3	Setting	
Area4	Status	
Area5	NA	
Area6	NA	
Area7	NA	
Area8	NA	

Parameter Set-up:

- **Type:** click to select among sixteen icon options: "DND", "Message", "Contact", "Call", "Display", "Status", "Setting", "Sound", "Arming", "SOS", "Relay", "Lift", "Smart Living", "Unlock", "N/A" is elected, the icon display in the corresponding area will disappear.
- **Label:** click to rename the icon if need, while DND icon can not be renamed.

Note:

- You can configure 2 icons in area 1 and 2, or toggle whether to display area 3, 4, 5 and 6.

**Note:**

- You can configure 8 icons on the **More** screen


7. Sound and Volume Configuration

Akuvox C313W-2 indoor monitors provide you with various types of ringtone and volume configuration ranging from Mic volume, Ring volume, Talk volume, Tone volume and Media volume. You can configure them on the device directly or on the web interface.

7.1. Volume Configuration

7.1.1. Configure Volume on the Device

To set up the volumes on the device screen **More > Setting > Sound**.

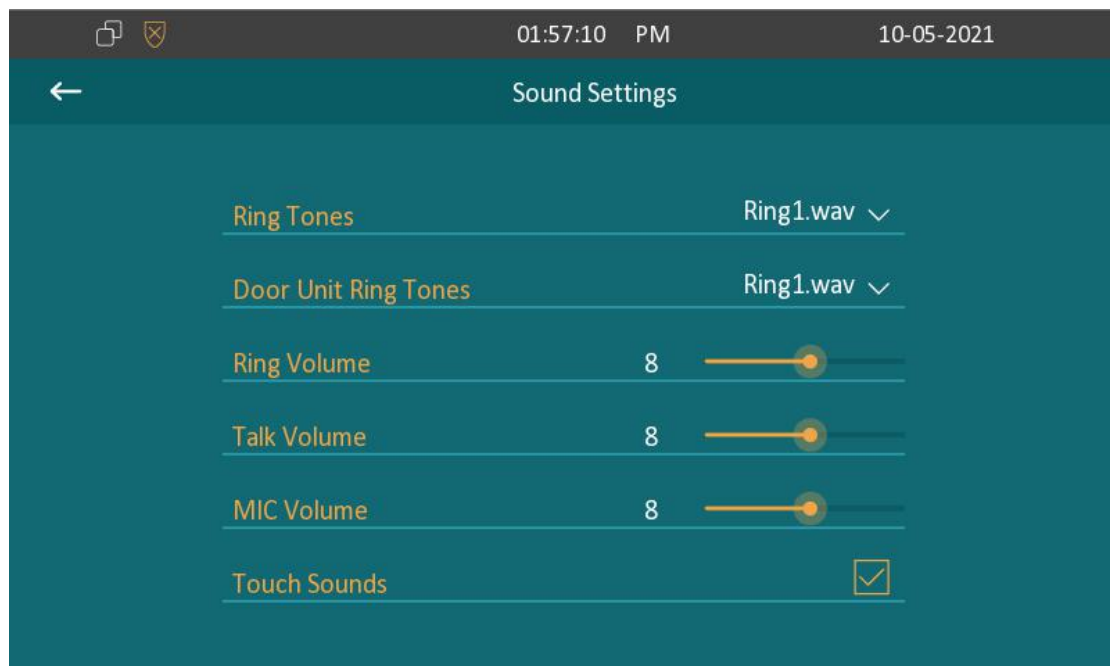

Parameter Set-up:

- **Ring tones:** select ringtone for incoming calls.
- **Door Unit Ring tones:** To set ring tone when receiving calls from Akuvox door units.

- **Ring Volume:** adjust the incoming call ringtone volume.
- **Talk Volume:** adjust the speaker volume during the call.
- **Mic Volume:** adjust the volume of your voice to be heard.
- **Touch Sound:** To enable sound when you press screen.

7.1.2. Configure Volume on the Web Interface

You can configure the tones and customize your doorbell sound by uploading the audio file to your preference on device web interface **Phone > Ringtones**.

All Ringtones

Upload(Max Size: 25... Not selected any files **Select File** **Submit** **Cancel**

Ringtones Ring1.wav **Delete**

Door Unit Ring Tones Ring1.wav

Parameter Set-up:

- **Upload:** To choose the suitable sound file from the local folder.
- **Ringtones:** To set ring tone for incoming calls.
- **Door Unit Ring Tones:** To set ring tone when receiving calls from Akuvox door units.



Note:

- Doorbell sound files to be uploaded must be **.WAV** or **MP3** format with 250k maximum.

8. Phone Book Configuration

8.1. Phone Book Configuration on the Device

You can configure the contacts list in terms of adding and modifying contact groups or contacts on the device **More > Contacts** directly.

8.1.1.Add Contacts


Parameter Set-up:

- **Contact Name** enter the name and save.
- **Number** enter the IP or SIP number to save.
- **Ring Tone:** Select ring tone for this contact.
- **Group** select Default or any other groups that have been created.

- **Account** select which account to use to dial out, Account 1 or Account 2.

8.1.2.Edit Contacts


Select the exiting contact and click **Edit** to modify.

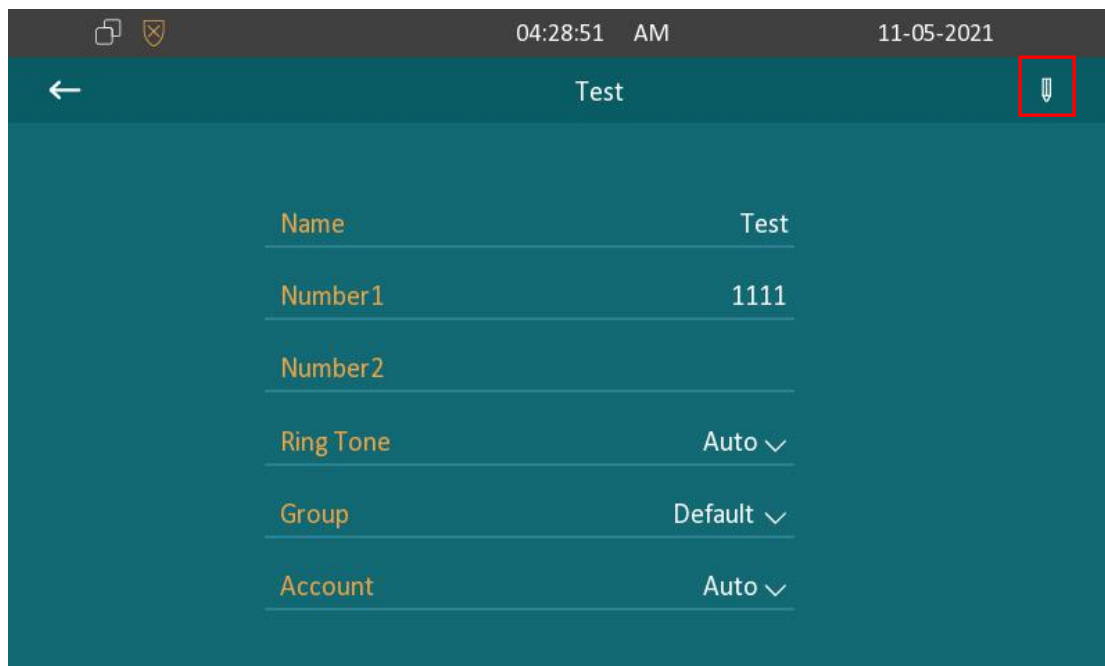

Name	Test
Number1	1111
Number2	
Ring Tone	Auto ▾
Group	Default ▾
Account	Auto ▾

8.1.3.Blocklist Settings on the Device

you can choose from the contact list the contact you want to add to the block list

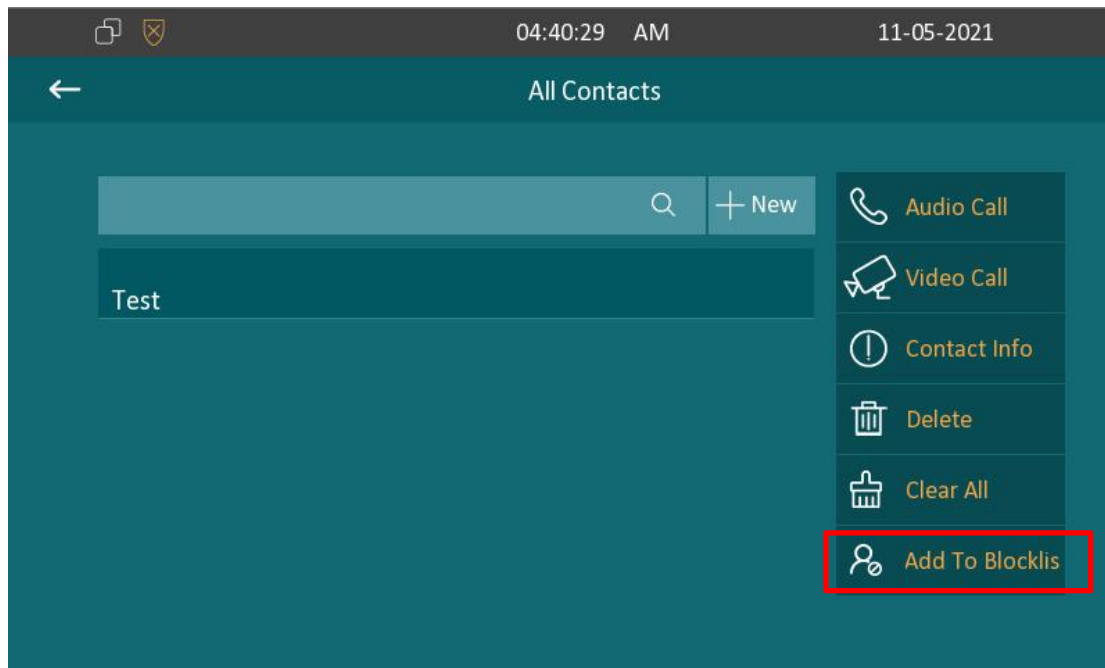
Note:

- You can delete contacts regardless of whether it is on the **All Contacts** screen or the **Blocklist** screen.

8.2. Phone Book Configuration on the Web Interface

8.2.1. Contact Configuration

To conduct contact configuration on web **Contacts > Local Contacts** interface. The new contact will be shown in the below list after it is added.

☐ Index	Name	Number 1	Number 2	Group	Ring	Account
☐ 1	Test	1111		Default	Auto	Auto
☐ 2						
☐ 3						
☐ 4						
☐ 5						
☐ 6						
☐ 7						
☐ 8						
☐ 9						
☐ 10						

1/1

Contact Setting

Name		Number 1	
Number 2		Group	Default
Ring	Auto	Account	Auto
+ Add		Edit	
X Cancel			

Parameter Set-up:

- **Name:** enter the contact name to be saved.
- **Number:** enter the contact number (SIP or IP number) to be saved.
- **Group:** select Default or Blocklist group.
- **Account:** select Account1 or Account2.

8.2.2. Contact Management

You can search, display, edit, and delete the contacts in your contacts list on web **Contacts > Local Contacts** interface.

☐ Index	Name	Number 1	Number 2	Group	Ring	Account
☒ 1	Test	1111		Default	Auto	Auto
☐ 2						
☐ 3						
☐ 4						
☐ 5						
☐ 6						
☐ 7						
☐ 8						
☐ 9						
☐ 10						

Delete
Delete All
Prev 1/1 Next
MoveTo
All Contacts
1
Page

Contact Setting

Name	Test	Number 1	1111
Number 2		Group	Default
Ring	Auto	Account	Auto

+ Add
 Edit
 Cancel

You can dial out a number using the contact phone number on web **Contacts > Local Contacts** interface.

Dial

Dial
Hang Up

8.2.3. Block List Setting on the Web Interface

You can set the blocklist directly in the contact list on the web **Contacts > Local Contacts > Local Contacts List** interface or set it when editing a contact.

☐ Index	Name	Number 1	Number 2	Group	Ring	Account
☒ 1	Test	1111		Default	Auto	Auto
☐ 2						
☐ 3						
☐ 4						
☐ 5						
☐ 6						
☐ 7						
☐ 8						
☐ 9						
☐ 10						

Delete
Delete All
Prev
1/1
Next
MoveTo

All Contacts
1
Page

All Contacts
Blocklist

Contact Setting



Note:

- If you want to remove the contact from the blocklist on the web interface, you can change the group to the **"Default"** when editing the contact.

8.2.4.Contact Display

You can configure the contact display order and control whether to display the discovery device on the device.

Contacts List Setting

Contacts Sort By

ASCII Code

Show Local Contacts...

Disabled

Parameters Set-up:

- **Contacts Sort By:** There are three modes Default, ASCII code and Created time mode for showing the contact list.
- **Show Local Contacts Only:** if enable the function, the contact on device will only show local phonebook, the contact for discovery mode will be hidden.

8.2.5.Contacts Import and Export on the Web Interface

When the contact becomes so many that you can not afford to manage each contact one by one manually, you can import and export the contacts in batch on the device web **Contacts > Local Contacts** interface.

Import/Export			
Contact	Not selected any files	Select File	Import Export ▾ Cancel
Blocklist	Not selected any files	Select File	Import Export ▾ Cancel



Note:

- The contact file can only be imported or exported in .xml or .csv format.

9. Network Setting

9.1. Device Network Configuration

You can check for the C313W-2 network connection info and configure the default DHCP mode (**Dynamic Host Configuration Protocol**) and static IP connection for the device either on the device or on the device web interface.

9.1.1. Configuring Network Connection on the Device

To check and configure the network connection on the device screen **More > Setting > Advance > Network**.

Network Settings	
WLAN	☐
Type	DHCP ▾
IP Address	192.168.16.169
Subnet Mask	255.255.255.0
Gateway	192.168.16.1
DNS1	8.8.8.8
DNS2	

Parameter Set-up:

- **Type:** select the **DHCP** mode or **Static** mode. DHCP mode is the default network connection. If the **DHCP** mode is selected, then the door phone will be assigned by the DHCP server with IP address, subnet mask, default gateway, and DNS server address automatically. When **Static IP**

mode is selected, then the IP address, subnet mask, default gateway, and DNS servers address have to be manually configured according to your actual network environment.

- **IP Address:** set up the IP Address if the static IP mode is selected.
- **Subnet Mask:** set up the subnet Mask according to your actual network environment.
- **Gateway:** set up the gateway according to the IP address of the default gateway.
- **LAN DNS 1/2:** set up preferred or alternate DNS Server (**Domain Name Server**) according to your actual network environment. Preferred DNS server is the primary DNS server address while the alternate DNS server is the secondary server address and the door phone will connect to the alternate server when the primary DNS server is unavailable.


Note:

- You can press **System Info** icon and then press **Network** tab on the **Settings** screen to check the device network status.
- The default system code is "123456".

9.1.2. Configuring Device Network Connection on the Web Interface

To check the network on the web **Status > Network information** interface.

Network Information			
LAN Port Type	DHCP Auto	LAN Link Status	Connected
LAN IP Address	192.168.31.6	LAN Subnet Mask	255.255.255.0
LAN Gateway	192.168.31.1	LAN DNS1	192.168.31.1
LAN DNS2			

To check and configure network connection on the device web **Network >**

LAN Port

☒ DHCP
 ☐ Static IP

IP Address	192.168.31.6	Subnet Mask	255.255.255.0
Default Gateway	192.168.31.1	LAN DNS1	192.168.31.1
LAN DNS2			

Parameter Set-up:

- **DHCP** select the **DHCP** mode by checking the DHCP box. DHCP mode is the default network connection. If the DHCP mode is selected, then the indoor monitor will be assigned by the DHCP server with IP address, subnet mask, default gateway, and DNS servers address automatically.
- **Static IP** select the Static IP mode by checking off the DHCP square box. When static IP mode is selected, then the IP address, subnet mask, default gateway, and DNS servers address have to be manually configured according to your actual network environment.
- **IP Address** set up the IP address if the static IP mode is selected.
- **Subnet Mask** set up the subnet mask according to your actual network environment.
- **Default Gateway** set up the gateway on default gateway according to the IP address of the default gateway.
- **LAN DNS1/2 Server** set up DNS (**Domain Name Server**) according to your actual network environment. **Preferred DNS Server** is the primary DNS server address while the **Alternate DNS Server** is the secondary server address and the door phone connects to the alternate DNS server when the preferred DNS server is unavailable.

9.2. Device Deployment in Network

Akuvox C313W-2 indoor monitors should be deployed before they can be properly configured in the network environment in terms of their location, operation mode, address and extension numbers as opposed to other devices for device control and the convenience of the management. To deploy the device in the network on web **Network > Advanced > Connect Setting** interface.

Connect Setting

Device Address	1	1	1	1	1
Device Extension	1 (1-9)	Device Location	Indoor Monitor		
Connect Type	SDMC				
Discovery Mode	Enabled ▼				

Parameter Set-up:

- **Connect Type:** It is automatically set up according to the actual device connection with a specific server in the network such as **SDMC** or **Cloud and None**. **None** is the default factory setting indicating the device is not in any server type, therefore you are allowed to choose Cloud, SDMC in discovery mode.
- **Discovery Mode:** to turn on the discovery mode of the device so that it can be discovered by other devices in the network, and disable if you want to conceal the device so as not to be discovered by other devices.
- **Device Address:** specify the device address by entering device location info from the left to the right: **Community, Unit, Stair, Floor, Room** in sequence.
- **Device extension:** enter the device extension number for the device you installed.
- **Device Location:** enter the location in which the device is installed and used.

9.3. Device NAT Setting

NAT (**Network Address Translation**) allows hosts in an organization's private intranet to transparently connect to hosts in the public domain.

There is no need for internal hosts to have registered Internet addresses. It is a way to translate the internal private network IP address into a legal network IP address technology. To set up NAT, you can do it on web **Account > Advanced > NAT** interface.

NAT

RPort


Disabled ▼

Parameter Set-up:

- **RPort**: check the RPort when the SIP server is in WAN (**Wide Area Network**).

9.4. Device Wi-Fi Setting

In addition to wired connection, the device also supports Wi-Fi connection. You can set the Wi-Fi on device screen **More > Setting > Advance > Network**.

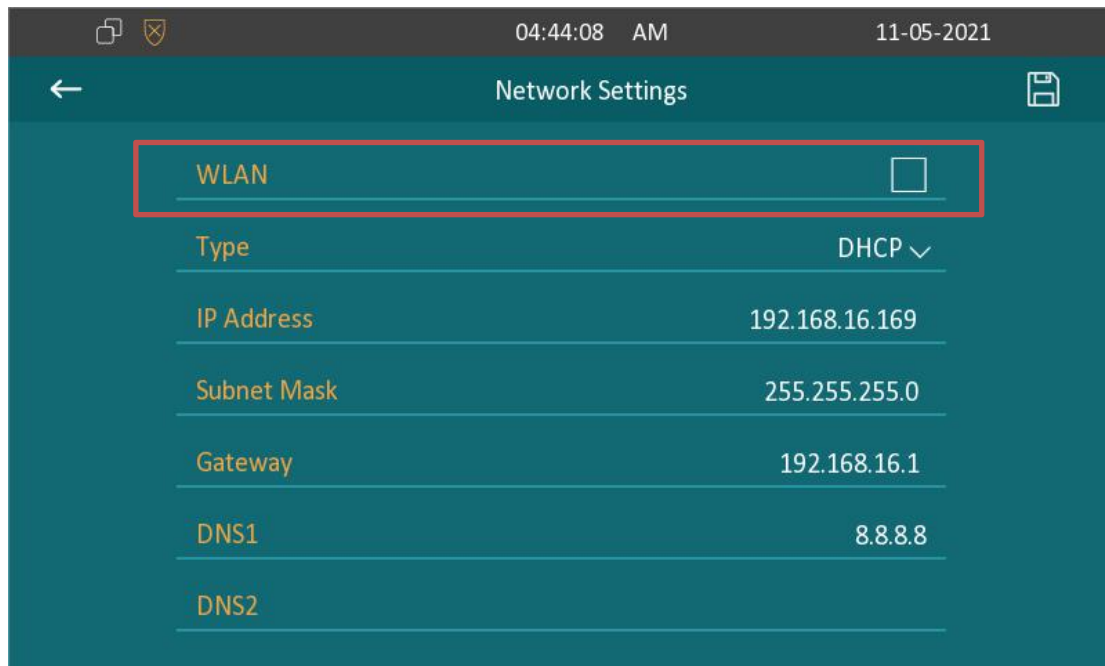

9.5. VLAN Setting

VLAN (Virtual Local Area Network) is a logical grouping of two or more nodes which are not necessarily on the same physical network segment but which share the same logical IP domain. To be specific, the purpose of VLAN is to separate layer 2 broadcast domain. Within trunk links, the tagged packet will only be sent to those ports with same VLAN ID. This is usually achieved by switch or router. To configure VLAN function on the device web interface **Network > Advanced > VLAN Setting**.

VLAN Setting

VLAN	Disabled ▼	Priority	0 ▼
VLAN ID	1	(1~4094)	

Parameter Set-up:

- **VLAN:** Enable or Disable VLAN function.
- **Priority:** VLAN Priority lets you assign a priority to outbound packets

containing the specified VLAN-ID (VID). Packets containing the specified VID are marked with the priority level configured for the VID classifier.

- **VLAN ID:** Set the same VLAN ID as Switch or Router.

10. Intercom Call Configuration

10.1. IP call & IP Call Configuration

IP calls can be made directly on the intercom device by entering the IP number on the device. And you can also disable the direct IP call if you allow no IP call to be made on the device. To configure the IP call feature and port on the device web **Phone > Call Feature > Others** interface.

Others

Busy Tone	Enabled ▼	Indoor Auto Answer	Disabled ▼
Direct IP	Enabled ▼	Direct IP Port	5060
Answer Tone	Enabled ▼		

Parameter Set-up:


- **Direct IP Call:** tick the check box to enable the direct IP call. For example, if you do not allow direct IP call to be made on the device, you can untick the check box to terminate the function.
- **Direct IP Call Port:** the direct IP Call Port is "5060" by default with the port range from 1-65535. And you enter any values within the range other than the 5060, you are required to check if the value entered is consistent with the corresponding value on the device you wish to establish a data transmission with.

10.2. SIP Call & SIP Call Configuration

You can make SIP call (**Session Initiation Protocol**) in the same way as you do for making the IP calls on the device. However, SIP call parameters related to its account, server, and transport type need to be configured first before you can make calls on the device.

10.3.SIP Account Registration

Akuvox C313W-2 indoor monitors support two SIP accounts that can all be registered according to your applications. For example, you can switch between the two SIP accounts. The SIP account can be configured on the device and on the device interface. To configure the SIP account on the device screen **More > Setting > Advance > SIP Account**.

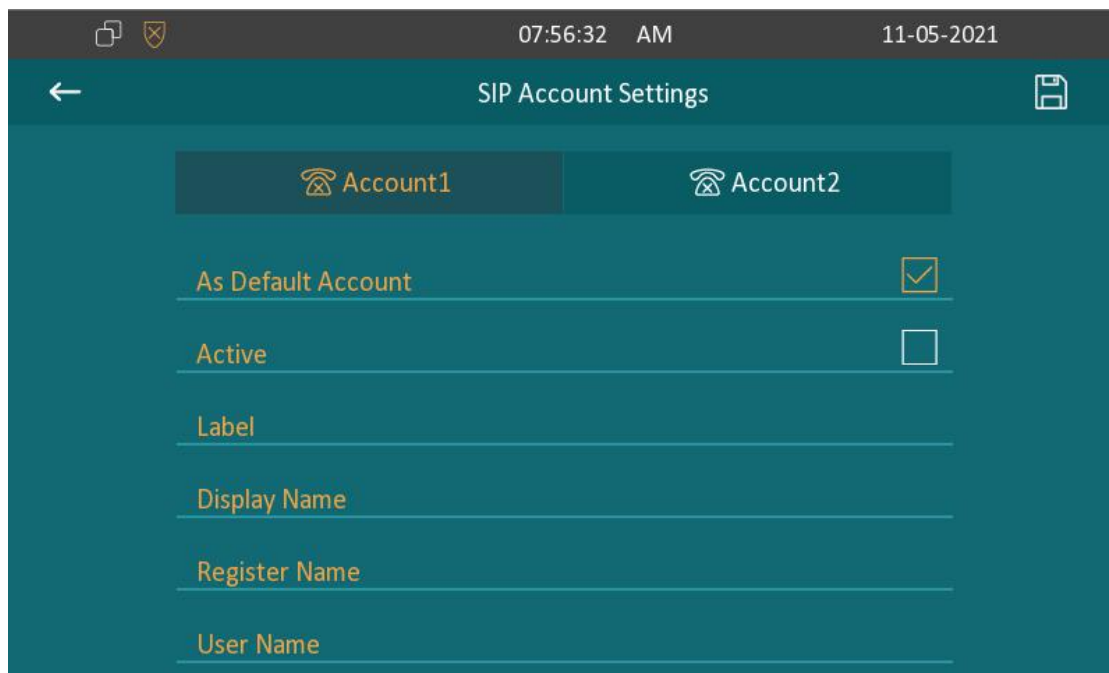

The parameter settings for SIP account registration can be configured on the Account setting screen and they can also be configured on the device web interface. To perform the SIP account setting on the Web **Account > Basic > SIP Account** Interface.

SIP Account			
Status	Disabled	Account	Account 1
Account Active	Disabled	Display Label	
Display Name		Register Name	
User Name		Password	

Parameter Set-up:

- **Status:** check to see if the SIP account is registered or not.
- **Account:** select Account1 or Account2.
- **Account Enabled:** check to active the registered SIP account.
- **Display Label:** configure the device label to be shown on the device screen.
- **Display Name:** configure the name, for example, the device's name to be shown on the device being called to.
- **Register Name:** enter the SIP account register Name obtained from the SIP account administrator.
- **Username:** enter the user name obtained from SIP account administrator.
- **Password:** enter the password obtained from the SIP server.

10.4.SIP Server Configuration

SIP server can be set up for device in order to achieve call session through SIP server between intercom devices. To perform the SIP account setting on the Web **Account > Basic > SIP Server** Interface.



SIP Server 1

Server IP		Port	5060
Registration Period	1800	(30~65535s)	

Parameter Set-up:

- **Server IP** enter the Server s IP address number or its URL.
- **Port:** set up SIP server port for data transmission

- **Registration Period:** set up SIP account registration time pan. SIP re-registration will start automatically if the account registration fails during the registration time span. The default registration period is "1800", ranging from 30-65535s.

10.5.Outbound Proxy Server configuration

An outbound proxy server is used to receive all initiating request messages and route them to the designated SIP server in order to establish call session via port-based data transmission. To configure outbound Proxy server on **Account > Basic > Outbound Proxy Server** interface.

Outbound Proxy Server

Enable Outbound	Disabled ▼		
Server IP		Port	5060
Backup Server IP		Port	5060

Parameter Set-up:

- **Outbound Enable:** enable or disable to turn on or turn off the outbound proxy server.
- **Preferred Outbound Proxy Server:** enter the SIP address of the outbound proxy server.
- **Preferred Outbound Proxy Port:** enter the Port number for establish call session via the outbound proxy server.
- **Alternate Outbound Proxy Server:** set up Backup Server IP for the backup outbound proxy server.
- **Alternate Outbound Proxy Port:** enter the Port number for establish call session via the backup outbound proxy server.

10.6.SIP Call Configuration

DND (**Do not disturb**) setting allows you not to be disturbed by any unwanted incoming SIP calls. You can set up DND related parameters properly on the device web **Phone > Call Feature > DND** interface to block SIP calls you do not intend to answer. In the meantime, you can also define the code to be sent to the SIP server when you want to reject the call.

DND

Whole Day	Disabled ▼	Schedule	Disabled ▼
DND Start Time	00:00		
DND End Time	00:00		

Parameter Set-up:

- **DND** check **Whole Day** or **Schedule** to enable the DND function. DND function is disabled by default.
- **Schedule:** enable DND schedule for your indoor monitor. To configure a specific time to enable DND feature. If you choose **Schedule** for DND, the **Whole Day** tab is available.
- **DND Start Time:** the start time for DND schedule.
- **DND End Time:** the end time for DND schedule.

10.7.Device Local RTP configuration

For the device network data transmission purpose, device needs to be set up with a range of RTP port (**Real-time Transport Protocol**) for establishing an exclusive range of data transmission in the network. To set up device local RTP on web **Network > Advanced > Local RTP** interface.

Local RTP

Starting RTP Port:	11800	(1024~65535)
Max RTP Port:	12000	(1024~65535)

Parameter Set-up:

- **Starting RTP Port:** enter the Port value in order to establish the start point for the exclusive data transmission range.
- **Max RTP port:** enter the Port value in order to establish the end point for the exclusive data transmission range.

10.8.Data Transmission Type Configuration

SIP message can be transmitted in three data transmission protocols: **UDP** (User Datagram Protocol), **TCP** (Transmission Control Protocol), **TLS** (Transport Layer Security) and **DNS-SRV**. In the meantime, you can also identify the server from which the data come from. To do this configuration on web **Account > Basic > Transport Type** interface.

Parameter Set-up:

- **UDP:** select “UDP” for unreliable but very efficient transport layer protocol. UDP is the default transport protocol.
- **TCP:** select “TCP” for Reliable but less-efficient transport layer protocol.
- **TLS:** select “TLS” for Secured and Reliable transport layer protocol.
- **DNS-SRV:** select “DNS-SRV” to obtain DNS record for specifying the location of services. And **SRV** not only records the server address but

also the server port. Moreover, SRV can also be used to configure the priority and the weight of the server address.

10.9.Call Setting

10.9.1. Call Auto-answer Configuration

C313W-2will auto answer all incoming calls if call auto-answer is enabled andreceive live stream if live stream is enabled.

To enable or disable on web **Account > Advanced > Call > Auto Answer** interface. And set up the corresponding auto answer parameters on web **Phone > Call Feature > Others** interface.

Call	
Auto Answer	Enabled ▼

Others	
Busy Tone	Enabled ▼
Indoor Auto Answer	Disabled ▼

Parameter Set-up:

- **Auto Answer:** turn on the the Auto Answer function by ticking the square box.

10.9.2. Auto-answer Allow List setting

Auto answered can only be applicable to the SIP or IP numbers that are already added in the auto-answer allow list of your indoor monitor. Therefore, you are required to configure or edit the numbers in the white-list on web **Phone > Call Feature > Auto Answer AllowList** interface.

Auto Answer AllowList

☐ Index	Device Location	SIP/IP
☐ 1	door phone 1	1123
☐ 2		
☐ 3		
☐ 4		
☐ 5		
☐ 6		
☐ 7		
☐ 8		
☐ 9		
☐ 10		

1/1

Device Location SIP/IP

SIP/IP numbers can be imported to or exported out of the indoor monitor in batch on web **Phone > Call Feature > Import/Export** interface.

Allowlist Import/Export

Auto Answer AllowList(.XML/.CSV)



Note:

- SIP/IP number files to be imported or exported must be in either .xml or .csv format.
- SIP/IP number must be set up in the phone book of the indoor monitor before they can be valid for the auto-answer function

10.10. Intercom Call Configuration

If you want to see the image at the door station before answering the incoming call, you can enable the intercom preview function on web **Phone > Intercom > Intercom Preview** interface.

Intercom Preview

Intercom Preview

Disabled ▼

Parameter Set-up:

- **Intercom Preview:** select enable to enable the incoming call preview function.



Note:

- Group call is not available when you enable intercom preview function.

10.11. SIP Hacking Protection

Internet phone eavesdropping is a kind of network attack, which aims to eavesdrop on the communication sessions of others in an unauthorized way. Attackers can use this malicious activity to capture and read content containing sensitive and confidential information. SIP hacking prevents SIP call from hacking in the Internet.

Call

Auto Answer	Disabled	▼
Prevent SIP Hacking	Disabled	▼
Is escape non Ascii ...	Enabled	▼

Parameters Set-up:

- **Prevent SIP Hacking:** enable to active this feature during using sip call. This feature is only available for SIP call, not IP call.

10.12. Emergency Call Setting

Emergency call is used to call out three emergency contacts when you are in urgent status. Especially for the elders and children. Press SOS key, the phone will automatically initiate the target SOS numbers.

10.12.1. SOS icon Display

To display SOS softkey on web **Phone > Key/Display** interface. The icon will show in the main interface or more interface after configured.

Home Page Display

Example

Area	Type	Label
Area1	SOS	SOS

More Page Display

Example

Area	Type	Label
Area1	SOS	SOS

10.12.2. SOS Number Settings on web Interface

To set up SOS numbers on device web **Phone > Intercom**.

SOS			
Call Number 01		Call Number 02	
Call Number 03		Call Timeout	60s ▼
Loop Time	3 ▼		

Parameter Set-up:

- **Call Number:** to set up 3 SOS numbers. Once users press SOS key on the home screen (SOS display key shall be set on the web manually), indoor monitors will call out the number in order.
- **Call Timeout:** set up the timeout for each number. Once users call out, if the other side will not answer within the timeout, indoor monitors will continue to call the next number.
- **Loop Times:** to set up number of calls.

10.12.3. SOS Number Settings on device

In addition to configure SOS number on device web interface, you can also configure it on device screen **More > Setting > Advance > SOS**.

10:42:32 AM11-05-2021

←

SOS Settings

Call Number1

Call Number2

Call Number3

Call Timeout60s ▾

Loop Times3 ▾

10.13. Multicast Configuration

C313W-2allows you to conduct one-to-many broadcasting via multicastfunction on web **Phone > Multicast** interface.

Multicast Setting

Multicast Group

Disabled

Multicast List

Multicast Group	Multicast Address
Multicast Group	
Multicast Group	
Multicast Group	

Listen List

Listen Group	Listening Address	Label
Listen Group		
Listen Group		
Listen Group		

Parameter Set-up:

- **Multicast Setting:** to set the indoor monitor in one of the groups or disable this function.
- **Multicast List:** to fill in the parameters of multicast group. Indoor monitor will establish multicast calls to other indoor monitors which are set in multicast group.
- **Listen List:** to fill in the parameters of listen group. Indoor monitor will receive multicast calls if some indoor monitors call the listen group.
- **Label:** To show the label name on the calling interface if users establish all call.

10.14. Call Forwarding Setting

Call Forward is a feature used to redirect an incoming call to the specific third party. Users can redirect the incoming call if it is no answer.

10.14.1. Call Forwarding Configuration on the Device

To do the configuration on the device screen More > Setting > Advance > Direct IP.

10:46:44 AM 11-05-2021

← Direct IP Settings

Auto Answer ☐

No Answer Forward ☐

Forward Target

No Answer Ring Time 30✓

10.14.2. Call Forwarding Configuration on the Web Interface

To set up forward function on web Phone > Call Feature > Forward Transfer interface.

Forward Transfer

Account	Account 1 ▼	
No Answer Forward	Disabled ▼	No Answer Ring Time 30 ▼
Target Number		

Parameter Set-up:


Account: To choose which account shall implement call forwarding feature.

11. Intercom Message Setting

You can read, create, and delete messages on the **Message** screen.

11.1.Manage Text Messages

You can check, create and clear messages as needed on the indoor monitor screen **Message > Text Message**.

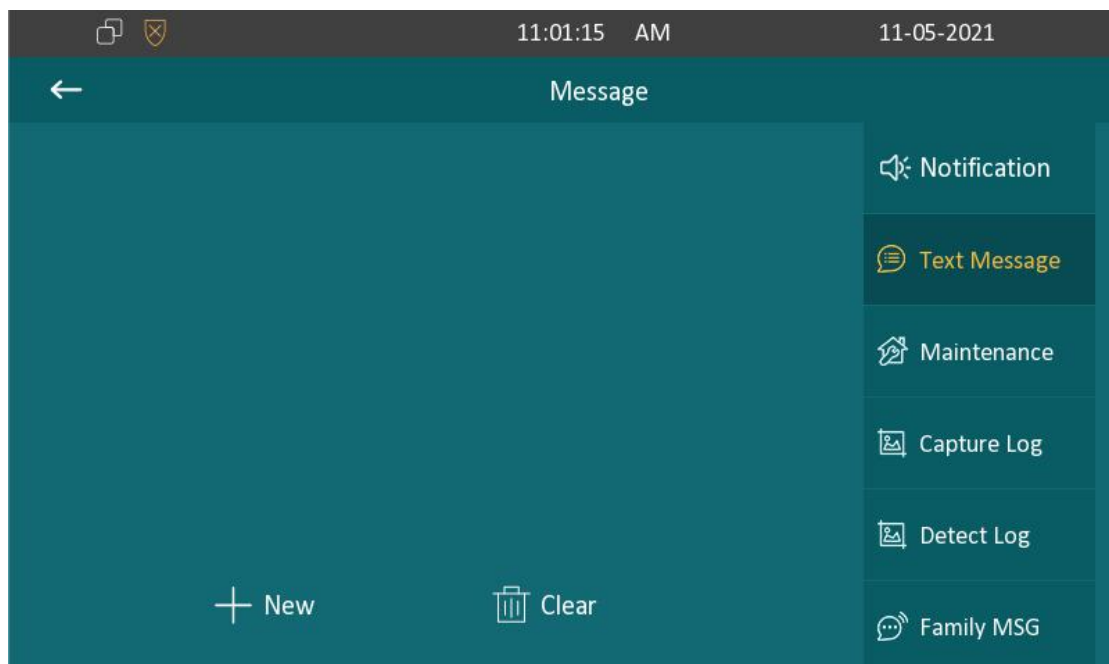


Parameter Set-up:

- **New:** press this icon to create a new message
- **Delete:** press this icon to clear the messages that have been selected.

11.2.Manage Voice Message


You can create, delete and view the audio messages of family members recorded in device screen **Message > Family MSG**.

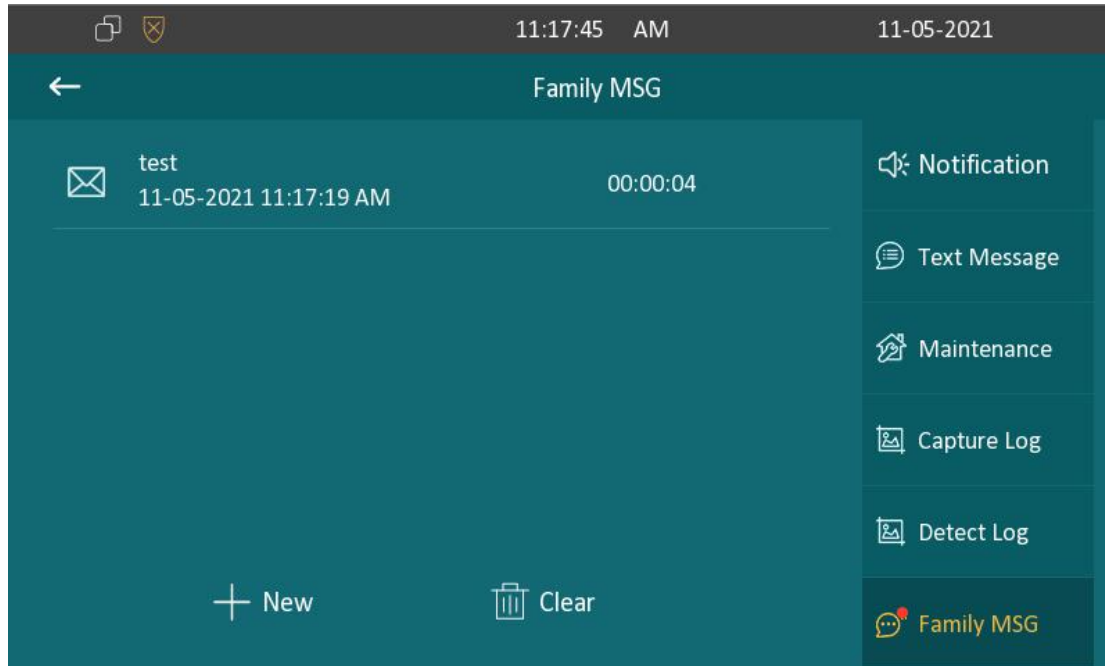

12. Audio& Video Codec Configuration for SIP Calls

12.1.Audio Codec Configuration

Akuvox indoor monitor supports four types of Codec (PCMU, PCMA, G729, G722) for encoding and decoding the audio data during the call session. Each type of Codec varies in terms of sound quality. You can select the specific codec with different bandwidth and sample rate flexibly according to the actual network environment. To do the configuration on web **Account> Advanced > Audio Codecs** interface.

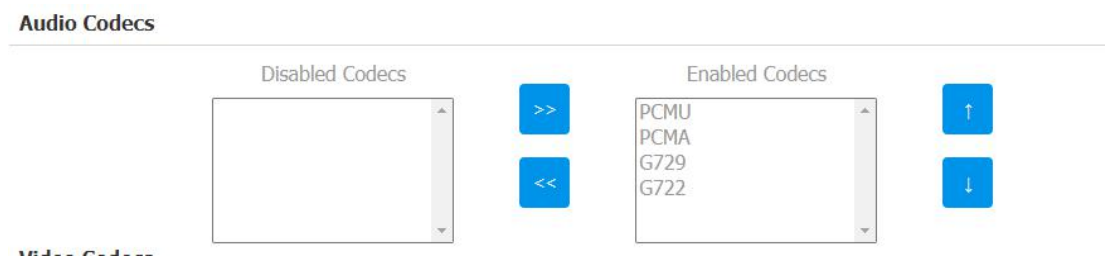

Please refers to the bandwidth consumption and sample rate for the four codecs types below:

Codec Type	Bandwidth Consumption	Sample Rate
PCMA	64 kbit/s	8kHz
PCMU	64 kbit/s	8kHz
G729	8 kbit/s	8kHz
G722	64 kbit/s	16kHz

12.2.Video Codec Configuration

C313W-2 supports H264 codec. To do the configuration on web **Account > Advanced > Video Codecs** interface.

Video Codecs

Disabled Codecs		Enabled Codecs	
	>>	H264	↑
	<<		↓

13. Security

13.1. Monitor and Image

13.1.1. Monitor Setting

You can configure the monitor setting on the web interface **Phone > Monitor > Door phone**.

Door Phone

☐	Index	Number	Name	URL	User Name	Display
☐	1	1001	Doorphone	rtsp://192.168.16.106/live/ch00_0	admin	Enabled
☐	2					
☐	3					
☐	4					
☐	5					
☐	6					
☐	7					
☐	8					
☐	9					
☐	10					

Delete



Delete All



Device Number

Device Name

Destination URL

User Name

Password

Display in Call


Parameter Set-up:

- **Device Number:** To enter the IP address or SIP number of the corresponding camera.
- **Device Name:** To enter the device name of doorphone, which could be set by users.

- **Destination URL:** To set RTSP URL for the doorphone. The RTSP format of Akuvox doorphone is rtsp://device IP/live/ch00_0
- **User Name:** To enter the user name if required.
- **Password:** To enter the password if required.

Display in Call: Enable or Disable to display this monitor during the call. If enabled, when there is an incoming call from the monitor, the video will be displayed.

You can also import or export the monitor list in batch in the same interface. Import file can only support .xml format.

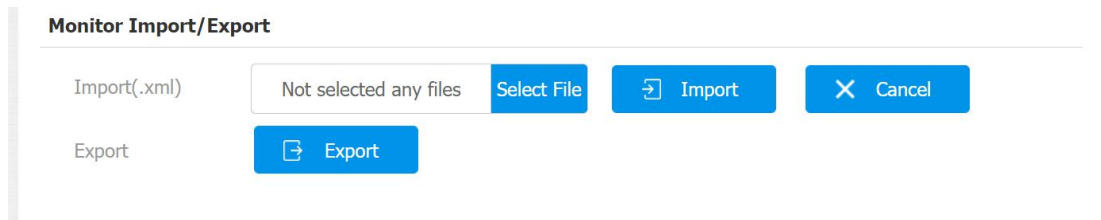

Monitor Import/Export

Import(.xml) Not selected any files Select File Import Cancel

Export Export

13.1.2. Web camera Setting

You can configure the monitor information for third party camera on the web interface **Phone > Monitor > Web camera**.

Web Camera

Index	Device Name	Destination URL
☐ 1		
☐ 2		
☐ 3		
☐ 4		
☐ 5		
☐ 6		
☐ 7		
☐ 8		
☐ 9		
☐ 10		

Delete
Delete All
Prev 1/1 Next
1 Page

Device Name
Destination URL

Parameter Set-up:

- **Device Name:** To enter the name of third party camera.
- **Destination URL:** To set the RTSP URL for third party camera

You can also import or export the monitor list in batch in the same interface. Import file can only support .xml format.



Web Camera Import/Export

Import(.xml)

Export

13.1.3. Video Image Capturing

To capture video image by pressing **Capture** during monitor or a video call.

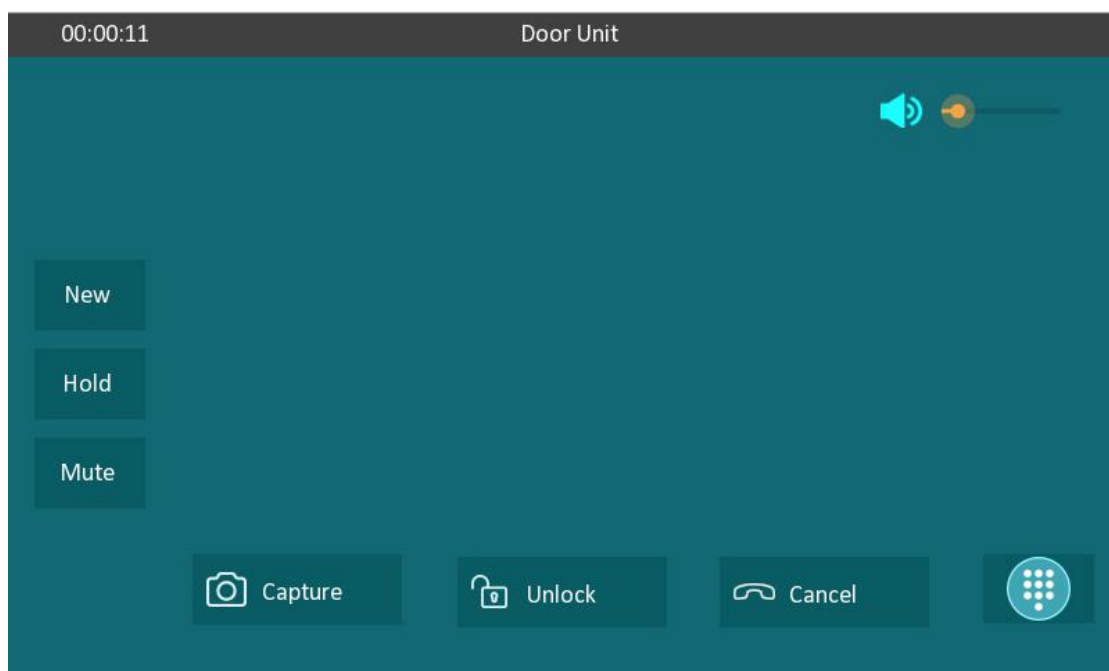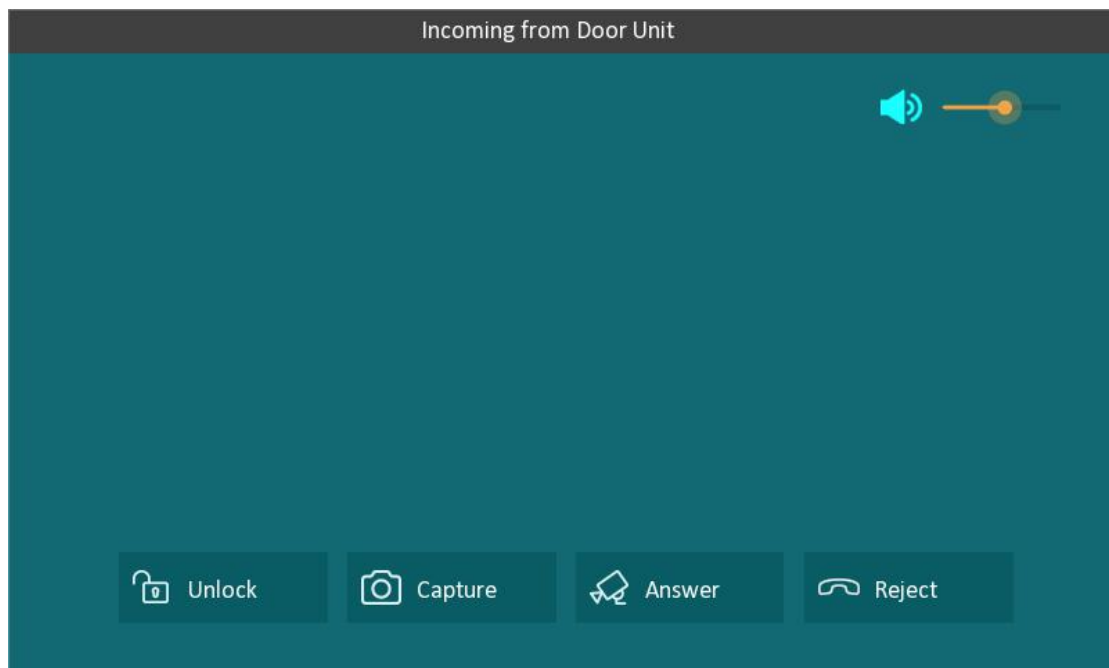



You can also disable capture function on device web interface **Phone > Key/Display > Others**.

Others

Capture

Disabled



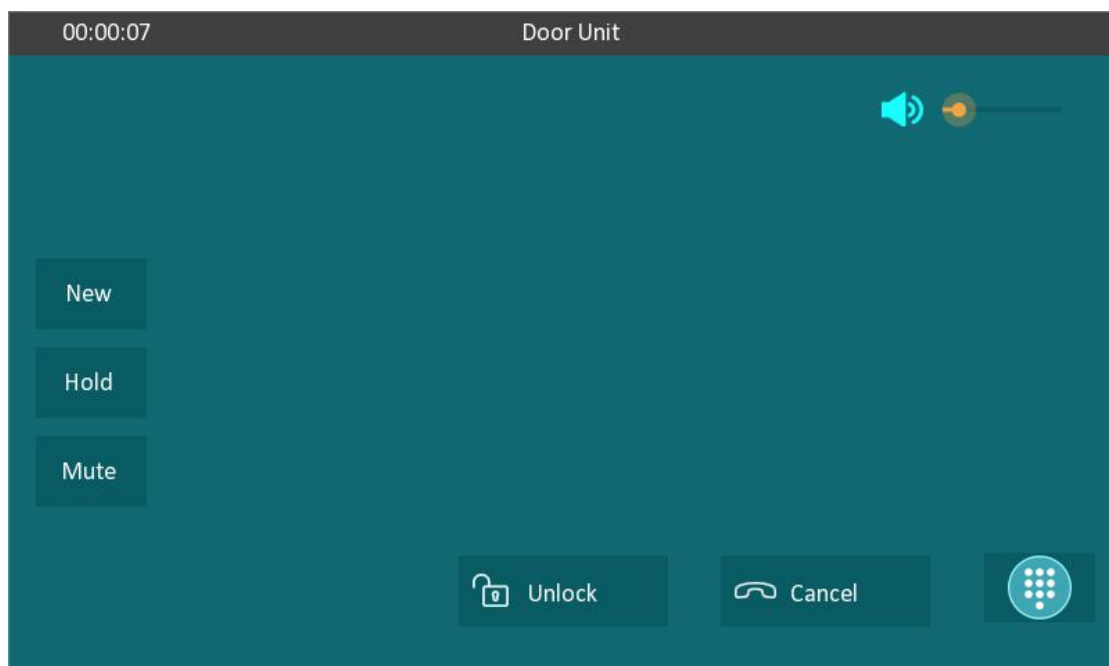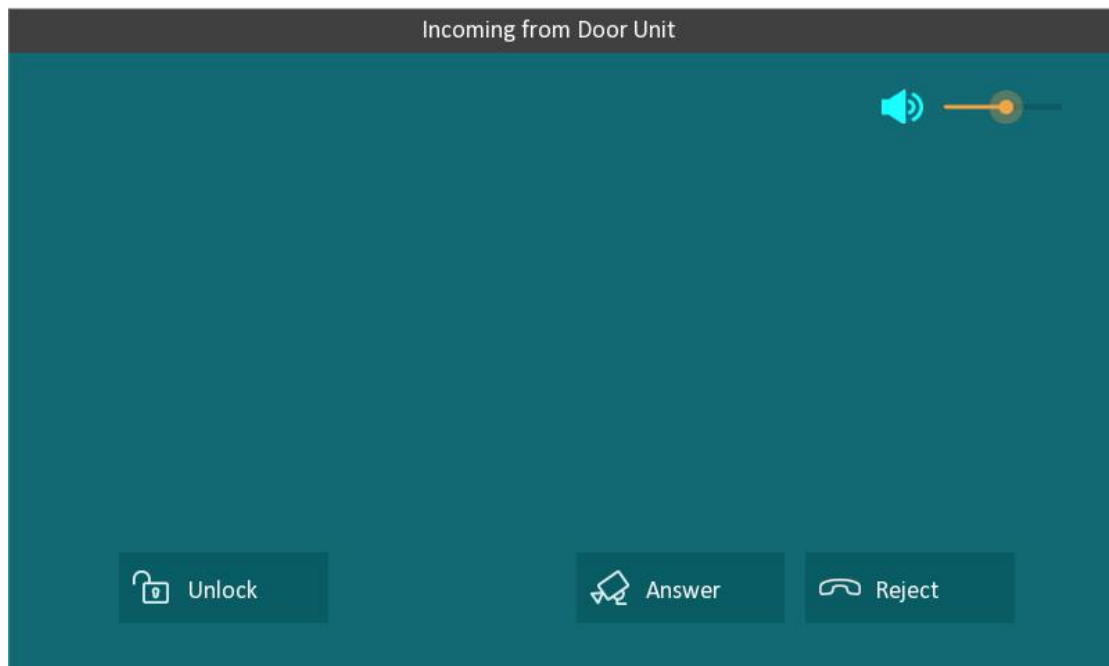

13.2. Alarm and Arming Configuration

Alarm feature is used to connect some alarm detection devices to protect your home safety. Akuvox indoor monitors support 8 alarm connectors which means you can connect 8 different alarm sensors in different rooms of your house. For example, connecting a smoker sensor in your kitchen to detect if

the gas is leaking, the indoor monitor will ring and send the alarm message to the target, like community property. Before checking Alarm feature on the device screen, you need to setup the Arming icon on the home page or more page on device web **Phone > Key/Display** interface.

Home Page Display

Example

Area	Type	Label
Area1	Arming ▼	Arming
Area2	Message ▼	

More Page Display

Example

Area	Type	Label
Area1	Arming ▼	Arming

13.2.1. Configure Alarm and Arming on the Device

To set up a location-based alarm sensor on device screen **More > Setting > Advance > Zone Settings**.

07:04:57 AM 13-05-2021

Zone Settings

Zone 1

Zone 2 Location Bedroom ▼

Zone 3 Zone Type Infrared ▼

Zone 4 Trigger Mode NC ▼

Zone 5 Status Disabled ▼

Zone 6

Zone 7

Zone 8

Parameter Set-up:

- **Location:** set up the location according to where the alarm sensor is stalled. You can select among ten location types: "**Bedroom**", "**Gate**", "**Door**", "**Guest room**", "**Hall**", "**Window**", "**Balcony**", "**Kitchen**", "**Study**" and "**Bathroom**".
- **Zone Type:** set up the alarm sensor types. You can select among four sensor types: "**Infrared**", "**Drmagnet**", "**Smoke**", "**Gas**", "**Urgency**".
- **Trigger Mode:** set sensor trigger mode between "**NC**" and "**NO**" according to your need.
- **Status:** set the alarm sensor status among three options: "Enable", "Disable", "24H". Select "Enable" if you want to enable to the alarm, however you are required to set the alarm again after an alarm is disarmed. Select "Disable" if you want to disable the alarm and select "24H" if you want alarm sensor to stay enabled for 24 hours without needing to set up the alarm manually again after the alarm is disarmed.

To configure the disarm code on device screen **Arming**. Change the current password and save it.

To check the zone status on **Arming > Zone Status** screen.

Zone Status				
Zone	Location	Zone Type	Trigger Mode	Status
Zone 1	Bedroom	Infrared	NC	Disabled
Zone 2	Bedroom	Infrared	NC	Disabled
Zone 3	Bedroom	Infrared	NC	Disabled
Zone 4	Bedroom	Infrared	NC	Disabled
Zone 5	Bedroom	Infrared	NC	Disabled
Zone 6	Bedroom	Infrared	NC	Disabled

13.2.2. Configure Alarm and Arming on the Web Interface

To set up a location-based alarm sensor on the device web interface **Arming> Zone Setting > Zone Setting**.

Zone Setting				
Zone	Location	Zone Type	Trigger Mode	Status
Zone1	Bedroom ▼	Infrared ▼	NC ▼	Disabled ▼
Zone2	Bedroom ▼	Infrared ▼	NC ▼	Disabled ▼
Zone3	Bedroom ▼	Infrared ▼	NC ▼	Disabled ▼

Parameter Set-up:

- **Location:** set up the location according to where the alarm sensor is stalled. You can select among ten location types: "**Bedroom**", "**Gate**", "**Door**", "**Guest room**", "**Hall**", "**Window**", "**Balcony**", "**Kitchen**", "**Study**" and "**Bathroom**".

- **Zone Type:** set up the alarm sensor types. You can select among four sensor types: "Infrared", "Drmagnet", "Smoke", "Gas", "Urgency".
- **Trigger Mode:** set sensor trigger mode between "NC" and "NO" according to your need.
- **Status:** set the alarm sensor status among three options: "Enable", "Disable", "24H". Select "Enable" if you want to enable to the alarm, however you are required to set the alarm again after an alarm is disarmed. Select "Disable" if you want to disable the alarm and select "24H" if you want alarm sensor to stay enabled for 24 hours without needing to set up the alarm manually again after the alarm is disarmed.

13.2.3. Configure Location-based Alarm on the device screen

Configure the location-based alarm on device screen **Arming > Arming mode**.

Arming Mode					
Home			Night		Away
Zone	Location	Zone Type	Defence delay	Alarm Delay	Status
Zone1	Bedroom	Infrared	0s delay	0s delay	☒
Zone2	Bedroom	Infrared	90s delay	90s delay	☒
Zone3	Bedroom	Infrared	90s delay	90s delay	☐
Zone4	Bedroom	Infrared	90s delay	90s delay	☐
Zone5	Bedroom	Infrared	90s delay	90s delay	☐
Zone6	Bedroom	Infrared	90s delay	90s delay	☐
Zone7	Bedroom	Infrared	90s delay	90s delay	☐
Zone8	Bedroom	Infrared	90s delay	90s delay	☐

Parameters set up:

- **Location:** to display which location the detection device is located.
- **Zone type:** to display the type of detection device.
- **Defence delay:** it means when users enable the arming mode, there will be 90 seconds delay time for the alarm mode to be activated.
- **Alarm delay:** it means when the sensor triggered, there will be 90 seconds delay time to announce the notification.
- **Status:** To enable or disable Arming mode on the corresponding Zone.

13.2.4. Configure Location-based Alarm on the Web Interface

Configure the location-based alarm on device web interface **Arming > Arming Mode**.

Zone	Location	Zone Type	Defence Delay	Alarm Delay	Status
1	Bedroom	Infrared	30s ▼	90s ▼	☐
2	Bedroom	Infrared	30s ▼	90s ▼	☐
3	Bedroom	Infrared	30s ▼	90s ▼	☐
4	Bedroom	Infrared	30s ▼	90s ▼	☐
5	Bedroom	Infrared	30s ▼	90s ▼	☐
6	Bedroom	Infrared	30s ▼	90s ▼	☐
7	Bedroom	Infrared	30s ▼	90s ▼	☐
8	Bedroom	Infrared	30s ▼	90s ▼	☐

13.2.5. Configure Alarm Text

After the alarm sensor is set up, you are allowed to customize your alarm text shown on the screen when an alarm is triggered on web **Arming> Zone Setting > Customized Alarm** interface. Enter the alarm text for the alarm at each location according to your need.

Customized Alarm


Customized Alarm

Disabled ▼

Zone	Alarm Content
Zone1	Alarm was triggered
Zone2	Alarm was triggered
Zone3	Alarm was triggered
Zone4	Alarm was triggered
Zone5	Alarm was triggered
Zone6	Alarm was triggered
Zone7	Alarm was triggered
Zone8	Alarm was triggered

13.2.6. Configure Arming mode

To switch arming mode, disarm the alarm on **Arming** screen by pressing their respective icons. Press **Disarm** icon if you want to clear the Arming Mode.

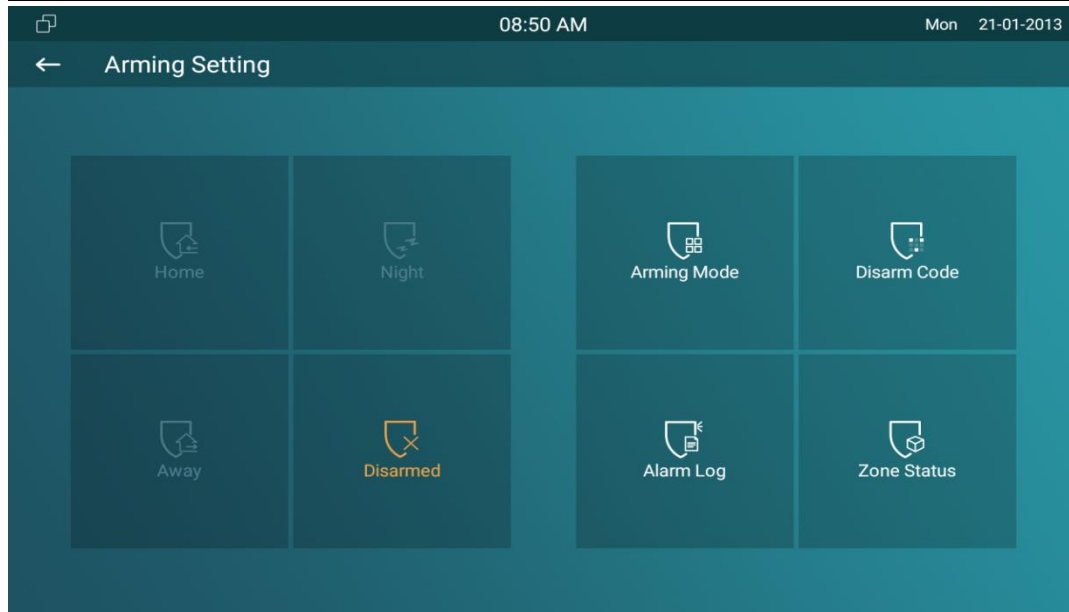

13.2.7. Alarm Action Configuration

The triggering of the alarm sensor can be accompanied by the actions you configured in forms of HTTP command, SIP Message, Call, Local Relay for different security purposes.

13.2.7.1. Select Alarm Action Types

To select and set up actions on web **Arming > Alarm Action** interface.



Parameter Set-up:

- **HTTP Command:** enable HTTP command if you want the action to be implemented on a designated third party device

- **SIP Message:** enable SIP message if you want the SIP message to be sent to a designated SIP account as an action
- **Call:** enable Call if you want you a call to go to a designated SIP or IP number.
- **Local relay:** enable local relay if you want to trigger local relay as an action.

13.2.7.2. Configure Alarm Action via HTTP Command

To set up the HTTP Command action, you can click **"Enable"** in the **Send HTTP** field to enable the actions for the alarm sensor installed in different locations. Then enter the HTTP command provided by the manufacturer of the device on which the action is to be carried.

HTTP Command Setting		
Zone	Http Command	Send Http Enabled
Zone 1		Disabled ▼
Zone 2		Disabled ▼
Zone 3		Disabled ▼
Zone 4		Disabled ▼
Zone 5		Disabled ▼
Zone 6		Disabled ▼
Zone 7		Disabled ▼
Zone 8		Disabled ▼

13.2.7.3. Configure Alarm Action via SIP Message

To set up the SIP message action receiver on the same web interface. Enter the SIP account to which you want to send the configured SIP message as an action when the alarm is triggered.

Receiver Of SIP Setting

SIP Account

Zone	SIP Message	
Zone 1		Disabled ▼
Zone 2		Disabled ▼
Zone 3		Disabled ▼
Zone 4		Disabled ▼
Zone 5		Disabled ▼
Zone 6		Disabled ▼
Zone 7		Disabled ▼
Zone 8		Disabled ▼

13.2.7.4. Configure Alarm Action via SIP Call

To set up the call action, you can enter the SIP or IP number of the device to be called as an action, then enable **Alarm Siren** for arming zone as needed.

Call Setting


Call Number

SIP/IP

	Make Call	Alarm Siren
Zone 1	Disabled ▼	Enabled ▼
Zone 2	Disabled ▼	Enabled ▼
Zone 3	Disabled ▼	Enabled ▼
Zone 4	Disabled ▼	Enabled ▼
Zone 5	Disabled ▼	Enabled ▼
Zone 6	Disabled ▼	Enabled ▼
Zone 7	Disabled ▼	Enabled ▼
Zone 8	Disabled ▼	Enabled ▼

13.2.8. Check Alarm Log


To check alarm log on device **Arming > Alarm Log** screen. To delete the existing alarm log by clicking the top right corner delete  icon.

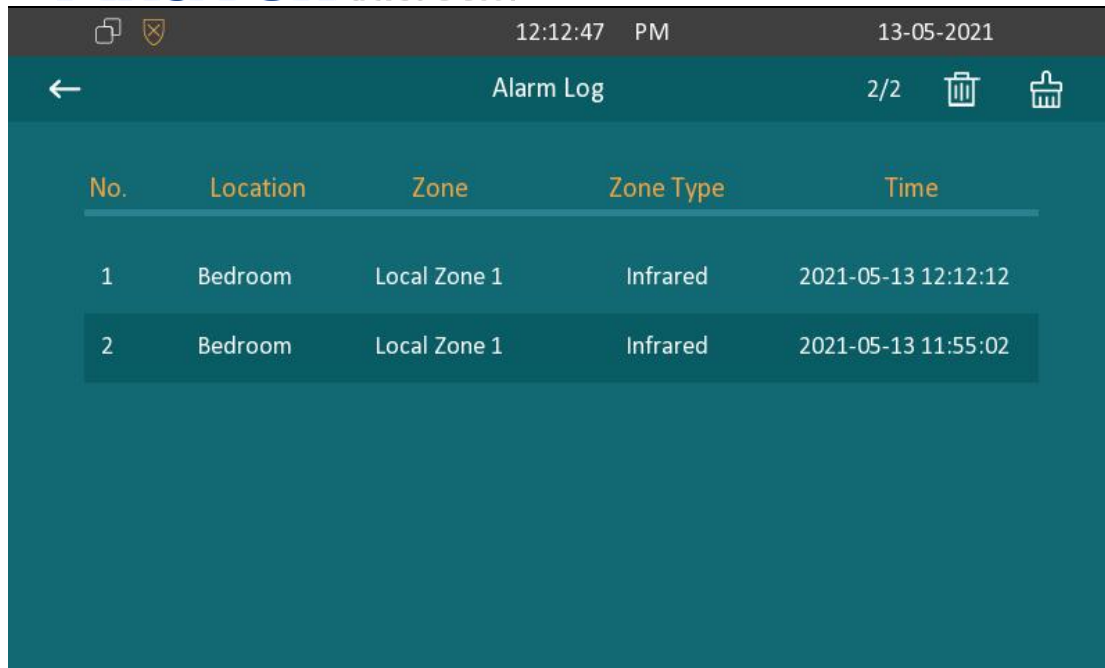

No.	Location	Zone	Zone Type	Time
1	Bedroom	Local Zone 1	Infrared	2021-05-13 12:12:12
2	Bedroom	Local Zone 1	Infrared	2021-05-13 11:55:02


13.3.Screen Unlock Setting

You can enable screenlocker function directly on the device **More > Setting > Display** screen. The device screen will be locked over the sleep time. You are required to wake up the device through the password.

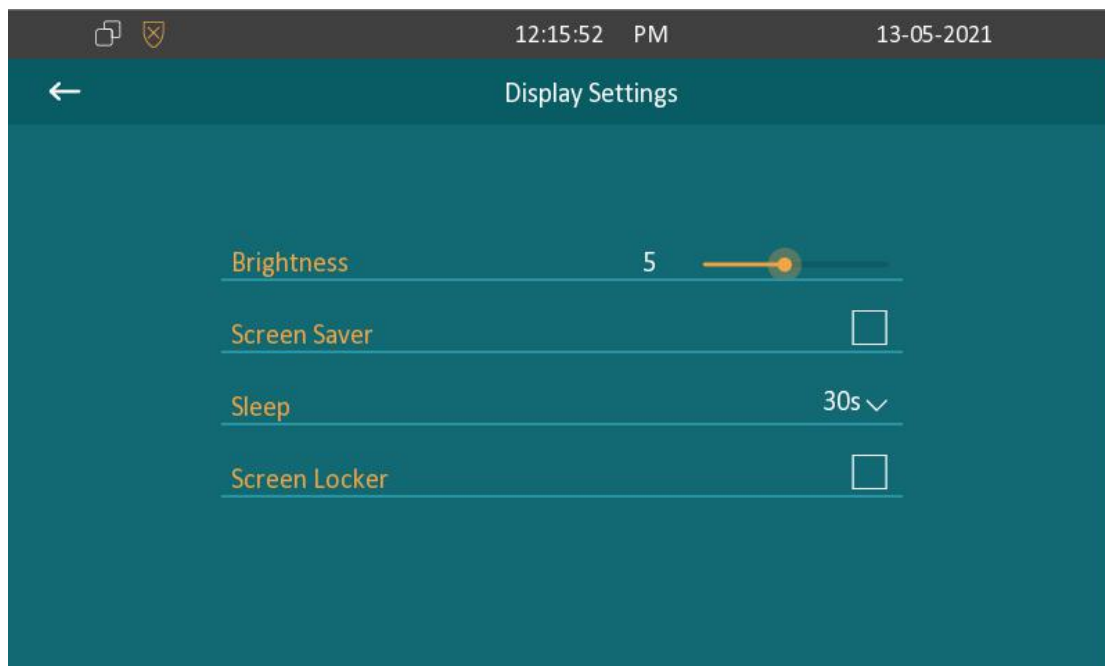

13.3.1. Screen Unlock by PIN Code

You can unlock device screen by entering the pre-configured PIN code when the screen is locked.

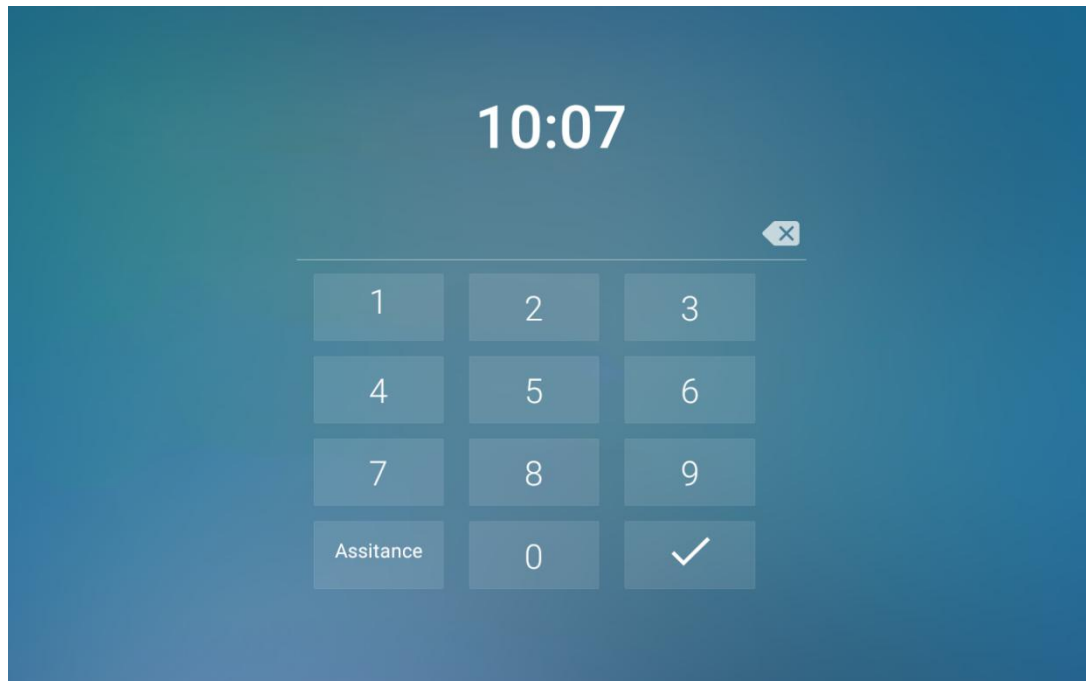**Note:**

- Default unlock PIN is 123456.

13.4. Client Certificate Setting

Certificates can ensure communication integrity and privacy when deploying Akuvox IP phone. So, when user needs to establish SSL protocol, it is necessary to upload corresponding certificates for verification. C313W-2 allow user two types of certificate to be uploaded into phone system.

- **Web Server Certificate:** it is the certificate that send to client for authentication when client require an SSL connection with Akuvox IP Phone. Currently, the format of certificate can be accepted by Akuvox IP Phone is *.PEM file.
- **Client Certificate:** When Akuvox IP Phone required an SSL connection with server, the phone must verify the server to make sure it can be trusted. and the server will send its certificate to the Akuvox IP Phone. Then the Phone will verify this certificate according to client certificate list.

13.4.1. Web Server Certificate

To upload Web Server certificate on the device web interface **Security > Advanced > Web Server Certificate**.

Web Server Certificate

Index	Issue To	Issuer	Expire Time	Delete
1	IPphone	IPphone	Sun Oct 9 16:00:00 2034	Delete 

Web Server Certifica...

Not selected any files

Select File

Submit

Cancel

13.4.2. Client Certificate

To upload and configure client certificate on the same page.

Client Certificate

Index	Issue To	Issuer	Expire Time	
1				☐
2				☐
3				☐
4				☐
5				☐
6				☐
7				☐
8				☐
9				☐
10				☐

Delete 

Delete All 

Client Certificate Upload

Index

Not selected any files

Select File

Only Accept Trusted...

Submit

Auto

Submit

Cancel

Disabled

Cancel

Parameter Set-up:

- **Index:** Select the desired value from drop-down list of Index. If select **Auto** value, the uploaded certificate will be displayed by numeric order. If select value from **1** to **10**, the uploaded certificate will be displayed according to the value that user selected.
- **Select File:** Click Choose file browse local drive, and locate the desired certificate. (*.pem only)
- **Only Accept Trusted certificates:** If select **Enabled**, as long as the authentication success, the phone will verify the server certificate based on the client certificate list. If select **Disabled**, the phone will not verify the server certificate no matter whether the certificate is valid or not.

13.5. Power Output Setting

You can enable power output function for PON interface on device web interface **Device Setting > Basic > Power Output Setting**.

Power Output Setting

Power Output

Disabled ▼



Note:

When the Power Output function is set to enabled, and the PON interface is connected with some particular exchangers, it may cause the device reboots repeatedly.

14. Door Access Control Configuration

14.1. Relay Switch Setting

14.1.1. Local Relay Setting

Local relays in Akuvox indoor monitor can be used to trigger the door access or Chime bell through local relay connector. You can do this configuration on web interface **Phone > Relay > Relay Setting > Local Relay**.

Relay Setting

Local Relay

DTMF

#

Relay Interval

3s

Relay Type

Open Door

Parameter set-up:

- **DTMF:** Set the DTMF code for local relay.
- **Relay Interval:** set the relay delay time after the relay is triggered.
- **Relay Type:** set relay action type. There are two types of relay, chime bell and open door. **Chime Bell**, when there is a call, the chime bell will ring. **Open door**, when press the unlock icon, the local relay will be opened.

14.1.2. Remote Relay Switch Setting

You can use the unlock tab during the call to open the door on web **Phone > Relay > Relay Setting > Remote Relay** interface. You are required to set up the same DTMF code in the door phone and indoor monitor.

Remote Relay

DTMF	#
DTMF Code1	#
DTMF Code2	#
DTMF Code3	#

Parameter Set-up:

- **DTMF Code:** To set DTMF code for the remote relay, which is "#" by default.

14.2.Web Relay Setting

In addition to the relay that is connected to indoor monitor, you can also control the door access using the network-based web relay. To do this configuration on web **Phone > Relay > Web Relay** interface.

WebRelay Setting

IP Address		UserName	
Password		WebRelay Action	1 ▼

WebRelay Action Setting

ActionId	WebRelay Action
1	
2	

Parameter Set-up:

- **IP address:** enter the web relay IP address.
- **User Name:** enter the User name provided by the web relay manufacturer.
- **Password:** enter the password provided by the web relay manufacturer.
The passwords is authenticated via HTTP and you can define the passwords using "http get" in Action.
- **Web Relay Action:** enter the specific web relay action command provided by the web manufacturer for different actions by the web relay.

14.3.Door Unlock Configuration

14.3.1. Door Unlock by DTMF Code

DTMF codes can be configured on the web **Account > Advanced > DTMF** interface where you can set up identical DTMF code on the corresponding intercom devices, which allows residents to enter the DTMF code on the soft keypad or press DTMF code attached unlock tab on the screen to unlock the door for visitors etc., during a call.

DTMF	
Type	RFC2833 ▼
How To Notify DTMF	Disabled ▼
DTMF Payload	101 (96~127)

Parameter Set-up:

- **Type** select DTMF type among four options: "Inband", "RFC2833", "Info+Inband" and "Info+RFC2833" according to your need.

- **How to Notify DTMF** select among four options: "**Disable**" "**DTMF**" "**DTMF-Relay**" "**Telephone-Event**" according to your need.
- **DTMF Payload** select the payload 96-127 for data transmission identification.


Note:

- Please refer to the chapter **Relay Switch Setting** for the specific DTMF code setting. Intercom devices involved must be consistent in the DTMF type, otherwise DTMF code cannot be applied.

14.3.2. Door Unlock via HTTP Command

You can unlock the door remotely without approaching the device physically for the door access by typing the created the HTTP command (URL) on the web browser to trigger the relay when you are not available by the door for the door access. To do this configuration on web interface **Phone > Relay > Open Relay Via HTTP**.

Remote Relay By HTTP

Index	IP/SIP	URL	UserName
☐ 1			
☐ 2			
☐ 3			
☐ 4			
☐ 5			

1/1

IP/SIP

URL

UserName

Password

Parameter Set-up:

- **IP/SIP:** To configure IP address or SIP account to trigger a certain remote relay of doorphone by sending HTTP message.
- **Username:** Enter the device username to be used as a part of HTTP command to trigger the local relay.
- **Password:** Enter the device password to be used as part of HTTP command to trigger the local relay.

Please refer to the following example:

<http://192.168.35.127/fcgi/do?action=OpenDoor&UserName=admin&Password=12345&DoorNum=1>



Note:

- DoorNum in the HTTP command above refers to the relay number #1 to be triggered

14.3.3. Unlock by Icon Button

To setup the unlock key in C313 for unlocking on web interface
Phone > Key/Display > Key Setting.

Softkey In Talking Page

Key	Status	Label	Type
Key1	Enabled ▼	Unlock 1	Remote Relay By DTMF ▼

Softkey In Call-Preview Page

Key	Status	Label	Type
Key	Enabled ▼	Unlock	Remote Relay By HTTP

Softkey In Homepage or More Page

Key	Status	Label	Type
Key	Enabled ▼	Unlock	Remote Relay By HTTP

Softkey In Monitor Page

Key	Status	Label	Type
Key	Enabled ▼	Unlock	Remote Relay By HTTP

15. Device Integration with Third Party Device

15.1.Lift Control

You can summon lift at home via lift control feature.

15.1.1. Configure Lift Control

To enable and set the display status Lift icon on device web **Phone > Lift> Lift Control** interface.

Lift Control

Index	Status	Icon	Label	Http Command
Lift 1	Disabled ▾	Up ▾		
Lift 2	Disabled ▾	Down ▾		

Parameter set-up:

- **Status:** click to enable or disable the lift1 button.
- **Icon:** click to select icon for the button.
- **Label:** enter the title for the button.
- **HTTP Command:** select http:// or https:// for head of http command and enter http command.

15.1.2. Configure Lift Control Prompt

When the lift controller receives the HTTP command, it will feedback the current lift status with a prompt. To do this configuration on web **Phone > Lift > Hints** interface. Edit the **HTTP Status Code**, feedback code from Lift control board.

Hints				
☐	Index	HTTP Status Code	Lift	Hints
☐	1	200	Lift 1	Lift is coming to your floor
☐	2	200	Lift 2	Lift has been sent to Ground Floor
☐	3			

If there are huge amounts of prompts need to be add, you can click **Export** tab to export a template, after editing to import/export.

Hints Import/Export	
Import(.xml)	Not selected any files Select File Import Cancel
Export	Export

15.2.Smart Living Setting

You can control the home sensor through HTTP command on device web interface **Phone > Smart Living**.


Smart Living				
Index	Status	Icon	Label	HTTP Command
Button1	Enabled ▼	Light ▼	Light On	http://192.168.16.223/fcgi/do?action=On
Button2	Enabled ▼	Light ▼	Light Off	http://192.168.16.223/fcgi/do?action=Off

Parameter Set-up:

- **Status:** **Enable** or **Disable** this button. If disable, the button won't be appeared on home control page.
- **Icon:** Select **On** or **Off**. If **On** is selected, the icon display as yellow button. Select **Off**, the icon is white button.
- **Label:** It is used to custom the button display name.
- **HTTP command:** Setup the http command to trigger the sensor.

**Note:**

- To configure Smart Living button on **Phone > Key/Display**.

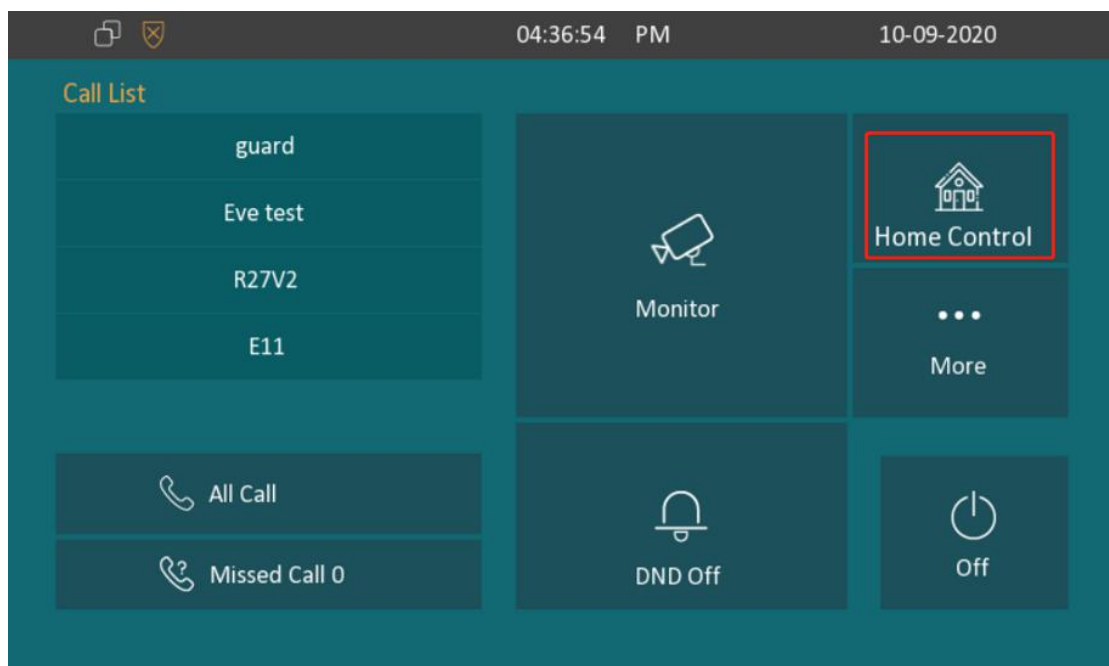

16. Firmware Upgrade

Firmware of different versions for indoor monitor can be upgraded on the device web **Upgrade > Basic** interface.

Firmware Version	113.30.6.49	Hardware Version	113.0.7.0.0.0.0
Upgrade	Not selected any files Select File	Submit	Cancel

**Note:**

- Firmware files should be **.rom** format for upgrade.

17. Backup

Configuration files can be imported to or exported out of the device to your local PC on the device web **Upgrade > Advanced > Others** interface if needed.

Others

Config File(.tgz/.con...)

Not selected any files

Select File

Export (Encrypted)

Import


Cancel

18. Auto-provisioning

18.1. Provisioning Principle

Auto-provisioning is a feature used to configure or upgrade the devices in batch via third party servers. **DHCP, PNP, TFTP, FTP, HTTPS** are the protocols used by the Akuvox intercom devices to access the URL of the address of the third-party server which stores configuration files and firmware, which will then be used to update the firmware and the corresponding parameters on the door phone.

Please see the flow chart below:

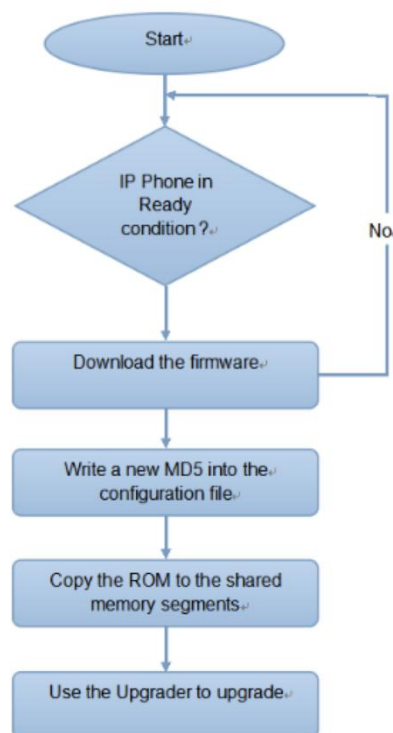

18.2. Introduction to the Configuration Files for Auto-Provisioning

Configuration files have two formats for the auto-provisioning. one is the general configuration files used for the general provisioning and other one is the MAC-based configuration provisioning.

The difference between the two types of configuration files is shown as below:

- **General configuration provisioning:** a general file is stored in a server from which all the related devices will be able to download the same configuration file to update parameters on the devices. For example : cfg.
- **MAC-based configuration provisioning:** MAC-based configuration files is used for the auto-provisioning on a specific device as distinguished by its unique MAC number. And the configuration files named with device MAC number will be matched automatically with the device MAC number before being downloaded for the provisioning on the specific device.




Note:

- If a server has these two types of configuration files, then IP devices will first access the general configuration files before accessing the MAC-based configuration files.

18.3. Autop Schedule

Akuvox provides you with different Autop methods that enable the indoor monitor to perform provisioning for itself in a specific time according to your schedule. To set up the schedule on device web **Upgrade > Advanced > Automatic Autop** interface.

Please see the picture below:

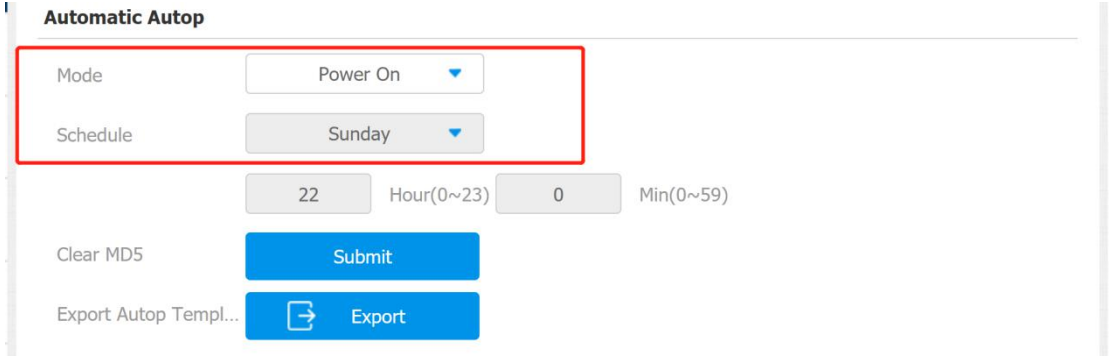

Automatic Autop

Mode: Power On

Schedule: Sunday

Hour(0~23): 22 Min(0~59): 0

Clear MD5: Submit

Export Autop Templ...: Export

Parameter Set-up:

- **Power On:** select "**Power on**", if you want the device to perform Autop every time it boots up.
- **Repeatedly:** select "**Repeatedly**", if you want the device to perform autop according to the schedule you set up.
- **Power On + Repeatedly:** select "**Power On + Repeatedly**" if you want to combine **Power On** Mode and **Repeatedly** mode that will enable the device to perform Autop every time it boots up or according to the schedule you set up.
- **Hourly Repeat:** select "**Hourly Repeat**" if you want the device to perform Autop every hour.

18.4. Static Provisioning Configuration

You can manually set up a specific server URL for downloading the firmware or configuration file on device web **Upgrade > Advanced > Automatic Autop** interface. If an autop schedule is set up, the indoor monitor will perform the auto provisioning on a specific timing according to autop schedule you set up. In addition, TFTP, FTP, HTTP, and HTTPS are the protocols that can be used for upgrading the device firmware and configuration.

Automatic Autop

Mode

Power On

Schedule

Sunday

22

Hour(0~23)

0

Min(0~59)

Clear MD5

Submit

Export Autop Templ...

Export

Manual Autop

URL

tftp://192.168.35.77

User Name

admin

Password

.....

Common AES Key

.....

AES Key(MAC)

.....

AutoP Immediately

Parameter set-up:

- **URL:** set up TFTP, HTTP, HTTPS, ftp server address for the provisioning
- **User Name:** set up a user name if the server needs an user name to be accessed to otherwise leave it blank.
- **Password:** set up a password if the server needs a password to be accessed to otherwise leave it blank.
- **Common AES Key:** set up AES code for the intercom to decipher general Auto Provisioning configuration file.
- **AES Key (MAC):** set up AES code for the intercom to decipher the MAC-based auto provisioning configuration file.

**Note:**

- AES is one type of encryption, it should be configured only when the config file is encrypted with AES, otherwise leave the field blank.

**Note:**

- **server Address format:**

- TFTP: tftp://192.168.0.19/
- FTP: ftp://192.168.0.19/ (allows anonymous login)
- ftp://username:password@192.168.0.19/ (requires a user name and password)
- HTTP: http://192.168.0.19/ (use the default port 80)
- http://192.168.0.19:8080/ (use other ports, such as 8080)
- HTTPS: https://192.168.0.19/ (use the default port 443)

**Tip:**

- Akuvox do not provide user specified server.
- Please prepare TFTP/FTP/HTTP/HTTPS server by yourself.

**Note:**

- The general configuration file for the in-batch provisioning is with the format "**cfg**" taking C313W-2 as an example "r000000000313.cfg" (9 "zeros" in total while the MAC-based configuration file for the specific device provisioning is with the format "MAC_Address of the device.cfg, for example "**0C110504AE5B.cfg**."

19. Call Log

If you want to check on the calls inclusive of the dial-out calls, received calls, and missed calls in a certain period of time, you can check and search the call log on the device web **Contacts > Call Logs** interface and export the call log from the device if needed.

Call Log						
Call History		All ▼		 Export		
☐ Index	Type	Date	Time	Local Identity	Name	Number
☐ 1	Received	2021-05-13	10:32:39	192.168.16.1 69@192.168.1 6.169	Door Unit	192.168.16.1 48@192.168.1 6.148
☐ 2	Received	2021-05-13	10:31:28	192.168.16.1 69@192.168.1 6.169	Door Unit	192.168.16.1 48@192.168.1 6.148
☐ 3	Received	2021-05-13	05:07:00	192.168.16.1 69@192.168.1 6.169	Door Unit	192.168.16.1 96@192.168.1 6.196

Parameter Set-up:

- **Call History:** select call history among four options: "All", "Dialed" "Received", "Missed", "Forwarded" for the specific type of call log to be displayed.

20. Debug

20.1. System Log for Debugging

System log in the indoor monitor can be used for debugging purpose. If you want to export the system out to a local PC or to a remote server for debugging, you can set up the function on the web **Upgrade > Advanced > System Log** interface.

The screenshot shows the 'System Log' configuration page. It includes a 'LogLevel' dropdown menu currently set to '3'. Below it is an 'Export Log' section with a blue button labeled 'Export' that has a document icon. Further down is the 'Remote System Log' section, which has a dropdown menu set to 'Disabled' and a text input field labeled 'Remote System Ser...'. At the bottom of this section are two blue buttons: 'Submit' and 'Cancel'.

Parameter Set-up:

- **LogLevel:** select log levels from 1 to 7 levels. You will be instructed by Akuvox technical staff about the specific log level to be entered for debugging purpose. The default log level is "3". The higher the level is, the more complete the log is.
- **Export Log:** click the **Export** tab to export temporary debug log file to a local PC.
- **Export Debug Log:** click the Export tab to export debug log file to a local PC.
- **Remote System Log:** select "Enable" or "Disable" if you want to enable or disable the remote system log.
- **Remote System Server:** enter the remote server address to receive the device and the remote server address will be provided by Akuvox technical support.

20.2. PCAP for Debugging

PCAP in Akuvox indoor monitor is used to capture the data package going in and out of the devices for debugging and troubleshooting purpose. You can set up the PCAP on the device web **Upgrade > Advanced > PCAP** interface properly before using it.


Parameter Set-up:

- **Specific Port:** select the specific ports from 1-65535 so that only the data packet from the specific port can be captured. You can leave the field blank by default.
- **PCAP:** click **Start** tab and **Stop** tab to capture a certain range of data packets before clicking **Export** tab to export the data packets to your Local PC.
- **PCAP Auto Refresh:** select "**Enable**" or "**Disable**" to turn on or turn off the PCAP auto refresh function. If you set it as "**Enable**" then the PCAP will continue to capture data packet even after the data packets reached its 50M maximum in capacity. If you set it as "**Disable**" the PCAP will stop data packet capturing when the data packet captured reaches the maximum capturing capacity of 1MB.

21. Password Modification


21.1. Modify Device Advanced Setting Password

This password is used to enter the advanced settings of the device, including password settings, account numbers, SOS numbers, network settings, etc. To modify the advanced setting password on device screen **More > Setting > Advance > Password**. The default password is 123456.

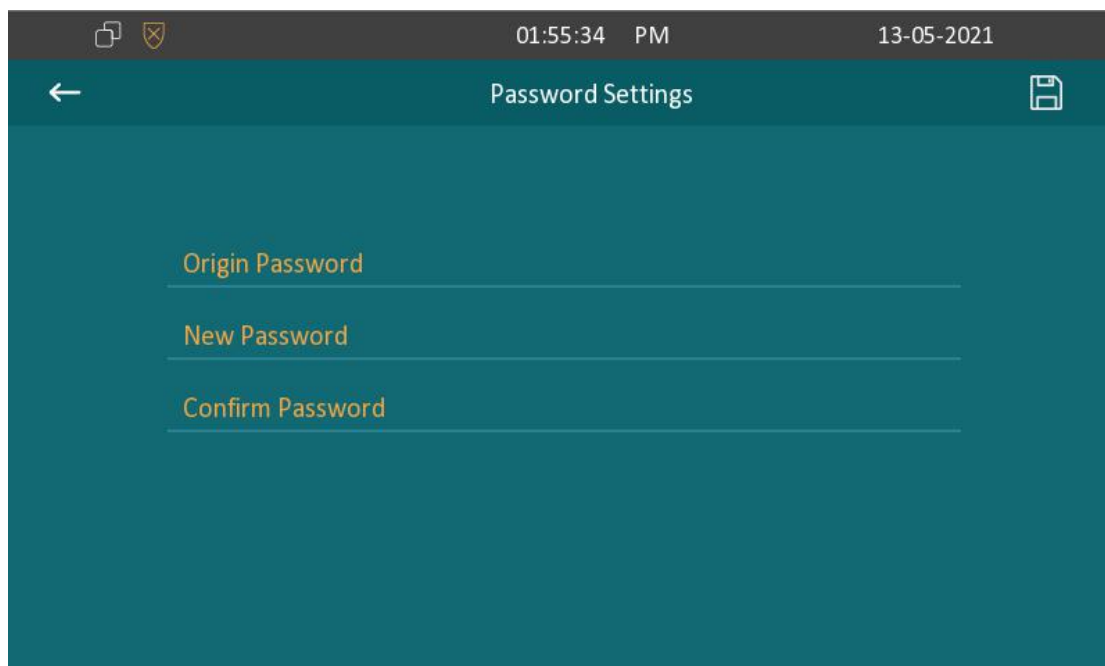

21.2. Modify Device Web Interface Password

To modify web interface password, you can do it on device web interface **Security > Basic > Web Password Modify**. Select "Admin" for the administrator account and "User" for the User Account.

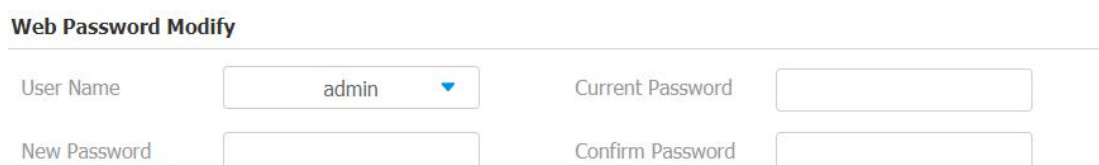

**Note:**


- There are two accounts, one is admin, its password is admin, the other is user, its password is user.

22. System Reboot&Reset

22.1.Reboot

22.1.1. Reboot on the Device

If you want to reboot the system setting of the device, you can operate it directly on the device setting screen or on the device web interface. To reboot to the system setting on device **Settings >Reboot** screen.

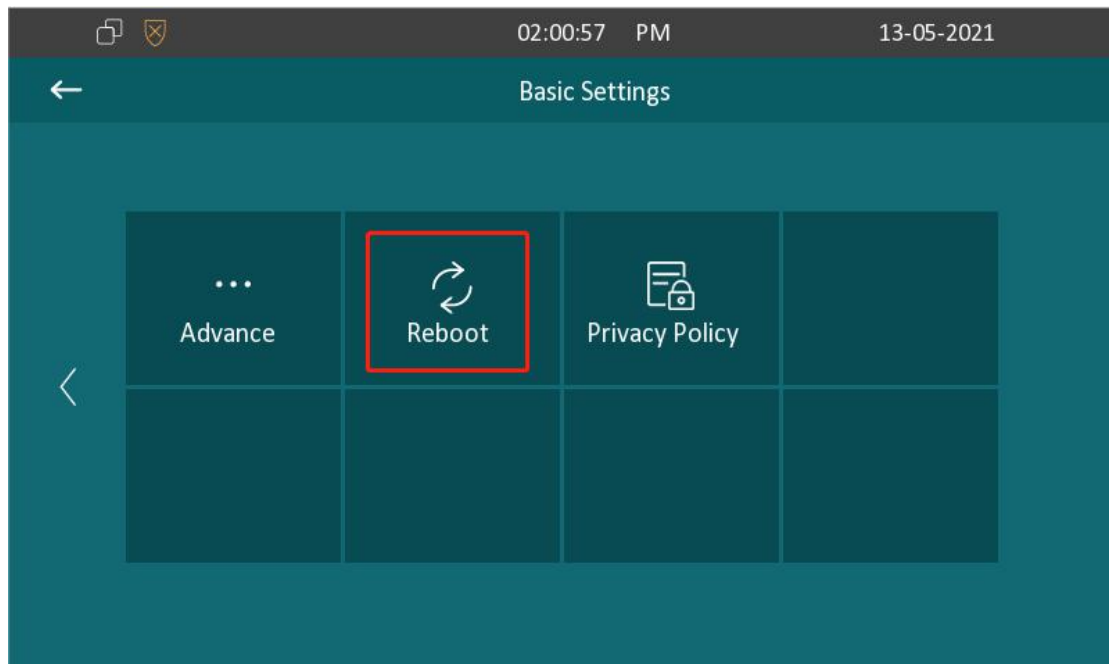

22.1.2. Reboot on the Web Interface

If you want to reboot the device system, you can operate it on the device web **Upgrade > Basic** interface as well. Moreover, you can set up schedule for the device to be restarted.

Firmware Version	113.30.6.49	Hardware Version	113.0.7.0.0.0.0.0
Upgrade	Not selected any files Select File Submit Cancel		
Reset To Factory Setting	Submit		
Reset Config To Factory Setting	Submit		
Reboot	Submit		

To set up the device reboot schedule on web **Upgrade > Advanced > Reboot Schedule** interface.

Reboot Schedule

Mode


Schedule

Hour(0~23)

22.2. Reset


22.2.1. Reset on the Device

If you want to reset the whole device system to the factory setting, you can operate it directly on the device screen **More > Setting > Advance > Reset**.

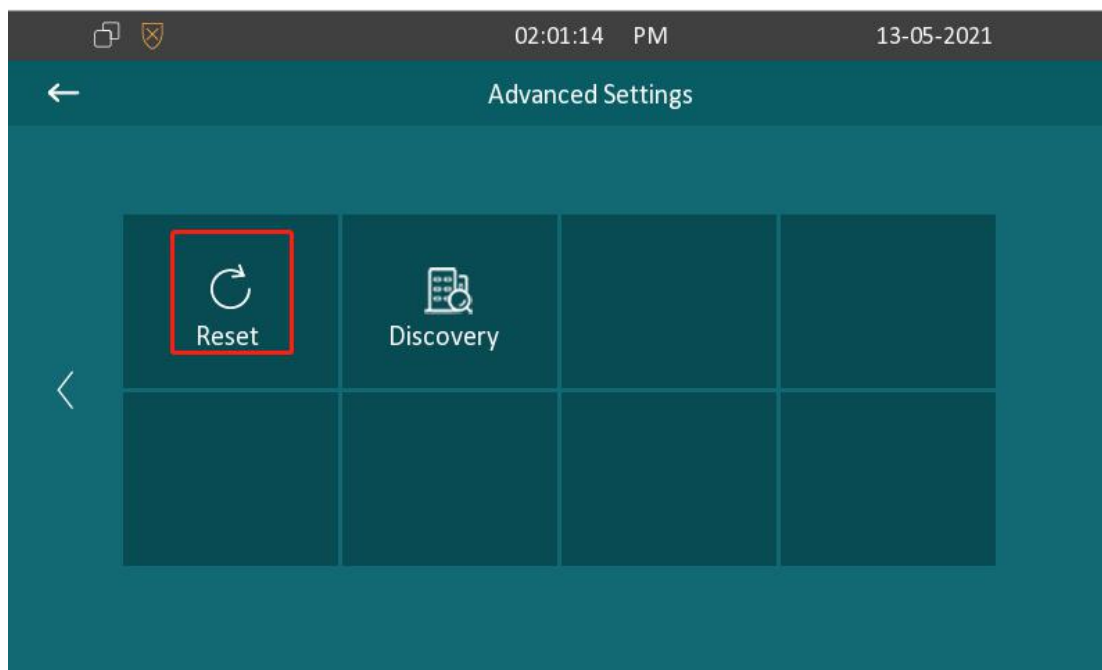

22.2.2. Reset on the Web Interface

Device system can also be reset on device web Upgrade > Basic interface without approaching the device. If you only want to reset to the configuration file to the factory setting, you can click **Reset Config To Factory Setting** on the same page.

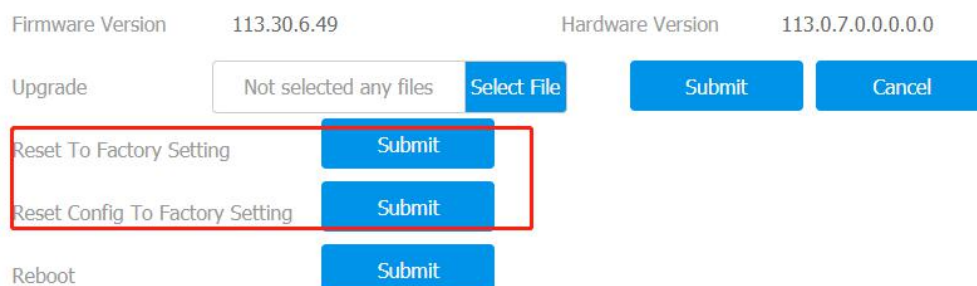

23. Abbreviations

ACS: Auto Configuration Server

Auto: Automatically

AEC: Configurable Acoustic and Line Echo Cancelers

ACD: Automatic Call Distribution

Autop: Automatic Provisioning

AES: Advanced Encryption Standard

BLF: Busy Lamp Field

COM: Common

CPE: Customer Premise Equipment

CWMP: CPE WAN Management Protocol

DTMF: Dual Tone Multi-Frequency

DHCP: Dynamic Host Configuration Protocol

DNS: Domain Name System

DND: Do Not Disturb

DNS-SRV: Service record in the Domain Name System

FTP: File Transfer Protocol

GND: Ground

HTTP: Hypertext Transfer Protocol

HTTPS: Hypertext Transfer Protocol Secure Socket Layer

IP: Internet Protocol

ID: Identification

IR: Infrared

LCD: Liquid Crystal Display

LED: Light Emitting Diode

MAX: Maximum

PCMA: Pulse Code Modulation A-Law

PCMU: Pulse Code Modulation μ -Law

PCAP: Packet Capture

PNP: Plug and Play

RFID: Radio Frequency Identification

RTP: Real-time Transport Protocol

RTSP: Real Time Streaming Protocol

MPEG: Moving Picture Experts Group

MWI: Message Waiting Indicator

NO: Normal Opened

NC: Normal Connected

NTP: Network Time Protocol

NAT: Network Address Translation

NVR: Network Video Recorder

ONVIF: Open Network Video Interface Forum

SIP: Session Initiation Protocol

SNMP: Simple Network Management Protocol

STUN: Session Traversal Utilities for NAT

SMTP: Simple Mail Transfer Protocol

SDMC: SIP Devices Management Center

TR069: Technical Report069

TCP: Transmission Control Protocol

TLS: Transport Layer Security

TFTP: Trivial File Transfer Protocol

UDP: User Datagram Protocol

URL: Uniform Resource Locator

VLAN: Virtual Local Area Network

WG: Wiegand

24. Contact US

For more information about the product, please visit us at www.akuvox.com or feel free to contact us by

Sales email: sales@akuvox.com

Technical support email: support@akuvox.com

Telephone: +86-592-2133061 ext.7694/8162

We highly appreciate your feedback about our products.



The equipment is installed on the wall by default, and the wall bracket is matched when we ship. If customers need a desktop, whether for presentations or other purposes, they can buy a separate desktop stand.