




USE AND CARE GUIDE

4000 LUMENS 9FT WORK LIGHT WITH
TELESCOPING TRIPOD

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

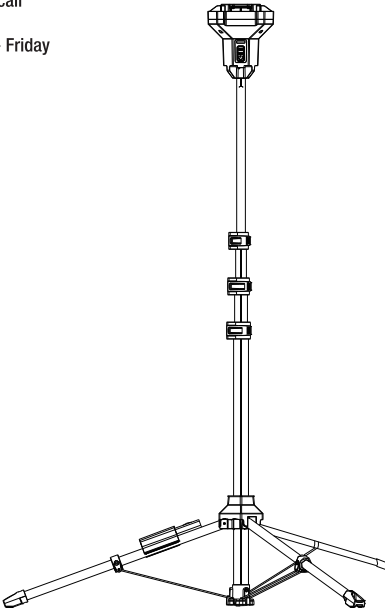

THANK YOU
We appreciate the trust and confidence you have placed in Husky through the purchase of this telescoping area light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents			
Table of Contents	2	Pre-Operation	5
Safety Information	2	Operation	6
Warranty	4	Care and Cleaning	9
Specifications	5	Maintenance	9

Safety Information	
Read all safety warnings and instructions.	WARNING: Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents. - Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack. - Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. - Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. - Do not expose a battery pack or appliance to fire or excessive temperature. Do not operate in temperatures above 113F. Do not subject batteries to temperatures above 140F. - Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire. - Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained. - Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care. - Use only with Listed/Certified Information Technology (Computer) Equipment, ITE Power Supply and Class 2 Power Unit. - When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a	

Safety Information(continued)	
connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire. WARNING – When using lanterns, additional precautions should always be followed, including the following: - To reduce the risk of injury, close supervision is necessary when a product is used near children. - Only use attachments recommended or sold by the manufacturer. - Do not use in the rain while charging. - To reduce the risk of electrical shock, do not put work light in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink. WARNING: To reduce the risk of injury, do not stare at operating lamp. Serious eye injury could occur.	
SAVE THESE INSTRUCTIONS.	

FCC Compliance Statement	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

FCC Warning	
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.	


FCC Warning(continued)	
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment. Light: EL2600-40W7-G1 The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation. Remote: DYRF12 The device has been evaluated to meet general RF exposure requirement. The device can be used in probable exposure condition without restrictionn.	
Responsible Party-U.S. Contact Information Elecwish Inc/Add: 4225 Etiwanda Avenue,Suite 1 mira loma, California 91752, USA/Elecwish.com	

Warranty	
The manufacturer warrants the product to be free from defects in materials and workmanship for a period of Three (3) years from date of purchase. We take pride in the design and construction of each of our products and work to maintain the quality of our materials and craftsmanship to assure your satisfaction. If any problems appear, the purchaser may return the item, freight prepaid, together with a copy of your original purchase receipt to place of purchase and it will be replaced with the same or comparable model free of charge. This warranty does not cover fixtures that have been altered in any way; it is void if damage or defect has resulted from accident, abuse, misuse or faulty repair. In no event will the manufacturer be liable for any incidental or consequential damages. No charge will be acceptable for unauthorized repairs, parts or service. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation of incidental or consequential damages may not apply to you. Legal warranty rights will vary from state to state and you may have other rights. Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.HUSKYTOOLS.COM .	

Specifications			
Product Weight	1.49 lb	Input Voltage	DC12V
Product Width	5.16 in.	Input Current	3A
Product Depth	5.16 in.	Recharge time	6H
Product Height	5.79 in.		
Run Time	4hrs (100% brightness) / 8hrs (50% brightness) / 16hrs (25% brightness) / 96hrs (1% brightness)		
CCT	5000K / 4000K / 3000K		
Lumen Output	4000lm / 2000lm / 1000lm / 40lm		

Pre-Operation

PACKAGE CONTENTS

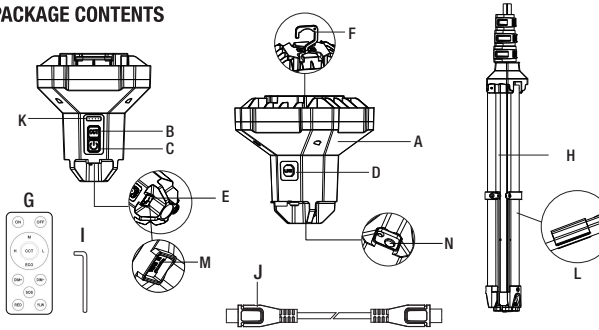

The diagram illustrates the components included in the package. It features a central view of the camp light (A) with various buttons labeled B, C, D, and E. A hook (F) is shown attached to the top. To the left, a remote control (G) and a ground stake (I) are depicted. Below the main unit, a USB cable (J) is shown. To the right, a tripod (H) and a remote holder (L) are shown. A detailed view of the USB input and output port (M) is also provided.

Part	Description	Part	Description
A	Camp light	H	Tripod
B	CCT button	I	Ground stake
C	ON/OFF & Mode button	J	USB cable (C-C)
D	Linkable button	K	Battery indicator
E	Protective cap	L	Remote holder
F	Hook	M	USB input & output port (type-c)
G	RF remote	N	DC input port

