

	ARWORK INFORMATION PANEL
ARTWORK TITLE: Shower Speaker	
ARTWORK TYPE: ☐ PACKAGING ☒ MANUAL ☐ STICKER	
MATERIAL: 90gsm	
FINISH: Uncoated	
CUTTER GUIDE SIZE: H 67mm x W 52mm (Per page)	
PRODUCT CODE:	
BARCODE: TYPE: EAN 13, 80%	

CMYK	SPECIFIC PANTONE COLOURS	FOLDING GUIDE	CUTTER GUIDE
	 XXX	 Spot Colour 'Folding'	 Spot Colour 'Cutter guide'
	 XXX		
	 XXX		
	 XXX		

FONT LISTING:		
	WHERE	WHAT
1.	Product Title	Myriad PRO
2.	General Text	Myriad PRO
3.	Details	Myriad PRO
4.	Warnings	Myriad PRO

NOTES:
Folded, black and white print.

VERSION DATE:	
DATE	DESIGNER
1/06/2018	OLGA SAWICKA

APPROVAL:			check and tick
STAGE	DATE	SIGNATURE	COPY
DESIGNER	___ / ___ / ____	_____	☐
COPY	___ / ___ / ____	_____	☐
MANAGER	___ / ___ / ____	_____	☐
DIRECTOR	___ / ___ / ____	_____	☐

PLEASE MAKE SURE ALL FONTS HAVE BEEN OUTLINED, AND ALL IMAGES EMBEDDED.

EN Instructions	Note: The speaker can be mounted to any smooth flat surface, using the sucker on the base -always ensure that the speaker is firmly attached before use. Primark assumes no liability for damage as a result of using this product. Connecting to Bluetooth 1. Turn the speaker ON. 2. Turn on your device and make sure the Bluetooth function is activated. 3. Search for "BT-4020 TAATN" and select it to pair. (If a password is needed, use "0000"). The speaker will emit a sound to indicate that it has connected 4. You can now play music from your device and listen to it through the speaker. Once you turn your devices Bluetooth off, the speaker will emit a sound to indicate that it has disconnected. Note: Once the speaker is paired with a device, it will recognise that device whenever they're within range. Charging the Splash Speaker 1. Plug the USB charging cable (supplied) into the Speaker and connect to a USB charging port. 2. A red LED indicator light will appear to indicate that the Speaker is charging. 3. Once charging is complete, the red LED indicator light will turn blue.	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.	Instructions CLOTH SPEAKER 
------------------------	--	---	---

52mm

67mm