

thumbsUp!

ARWORK
INFORMATION
PANEL

PRODUCT NAME: Wireless Headphones MANUAL

ARTWORK TYPE:

☐ PRODUCT

☐ PACKAGING

☒ MANUAL

☐ STICKER

MATERIAL: 90gsm

FINISH: uncoated

CUTTER GUIDE SIZE: 80 X 95mm (when folded)

PRODUCT CODE: CARWCDBLKPRM

BARCODE: TYPE: EAN 13, 80%

CMYK

SPECIFIC PANTONE COLOURS

FOLDING GUIDE

CUTTER GUIDE

Spot Colour Folding

Spot Colour Cutter guide

FONT LISTING:	
WHERE	WHAT
1.	Product Title
2.	General Text
3.	TU Details
4.	Warnings

NOTES:

Black and white print.
Double sided print
Folded manual.

VERSION DATE:	
DATE	DESIGNER
19/10/2018	ALYCE KOHLER

WHEN SENDING FINAL ARTWORK TO FACTORY
PLEASE MAKE SURE ALL FONTS HAVE BEEN
OUTLINED, AND ALL IMAGED EMBEDDED.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Prismark Limited
PO Box 464
Arthur Ryan House
22-24 Penzance Street
Dublin
Prismark Tendas S.L.U
Gran Via, 32, 5
28013 Madrid
Spain
CIF – B63679427

Made in China / Fabricado en China
Fabrizado na China / hergestellt in China
Fabricat în China / Wyprodukowano w Chinach
Prodotto in Cina / Wyprodukowano w Chinach
تولید شده در چین / 中国制造

Wireless
HEADPHONES

INSTRUCTIONS

EN

Wireless Headphones

Product Specifications

- Bluetooth range: 10m
- Talking/music-playing time: approx. 4hours
- Charging time: approx. 2 hours
- Power button/Play/Pause/Answer and hang up calls
- Previous track (press once) / Volume + (hold down)
- Next track (press once) / Volume - (hold down)
- 3.5mm headphone jack for wired use (included)
- 1.5m long headphone cable
- USB Charging Cable (included)
- Microphone

Turning ON: Hold the power button down for 3 seconds to turn the headphones ON. You will hear the prompt: "Bluetooth Mode" and the LED light will flash Blue & Red consistently (waiting for Bluetooth connection).

Turning OFF: Hold the power button down again for 3 seconds to turn the headphones OFF. You will hear the prompt: "Power OFF" and the LED light will switch off.

Connecting to Bluetooth

1. Turn the earphones ON.
2. Turn on your device and make sure the Bluetooth function is activated.
3. Search for "WRHSHPoPRM" and select it to pair. The headphones will make a sound and the LED light will flash blue, slowly.
4. You can now play music from your device and listen using the headphones.
5. Once you turn your device Bluetooth off, the earphones will make a noise and the LED light will flash Blue & Red fast again to show it's waiting to be connected.

Listening to music

- Press the ON/OFF once to pause and play tracks
- Press the - button to skip to previous track
- Press the + button to skip to the next track
- Press the + / - buttons down for 2 seconds to increase and decrease volume.

Answer/end calls

Press the ON/OFF button once to answer and again to end a call.

Charging the Earphones

1. Switch the headphones OFF before charging.
2. Plug the Micro USB cable (supplied) into the headphones and connect to a USB charging port.
3. A red LED light within the earphone will illuminate to indicate charging.
4. Once charging is complete, the red LED light within the earphone will turn blue.

Note:

- Charge the earphones fully before using for the first time.
- The headphones will turn off automatically if the device is not paired within 15 minutes of switching them on.
- If the headphones fail to connect, restart the headphones or try charging them to ensure decent battery level.

Troubleshooting:

If the device fails to pair more than twice:

1. Double check that the product is compatible with your device
2. Charge it in case of low battery
3. Check if the headphones are in pairing mode
4. Restart the headphones
5. If surrounded by too many Bluetooth devices this might be causing interference.

If the volume is too low,

1. Check and adjust the volume on the connected device
2. Charge the headphones in case of low battery

If the sound won't work:

1. Ensure that the distance between the headphones and the paired device is with valid distance.
2. Check for interference

If the LED Light is not working:

1. Please check again after fully charging the headphones
2. Restart the headphones

Technical Specifications

Bluetooth Range	V5.0
Transmitting Frequency	20Hz-20KHz
Sensitivity	-94dB (AT 1KHz)
Output	32 Ohm
Protocols	AVRCP, HSP, HFP, A2DP
Standby Time	180 Hours
Charging Time	2 Hours
Playback/Talk Time	4 Hours
Connection Distance	10 meters

Safety Recommendations

Do not use the earphones whilst they are charging. Adjust volume to an appropriate level.

Loud sounds may damage your hearing. Volume restricted in line with EU guidelines. For traffic safety, never use your earphones while riding a bicycle, motorcycle or driving. Any signs of wear and tear please discard immediately. Do not use if connections are loose.