


料号：623000091

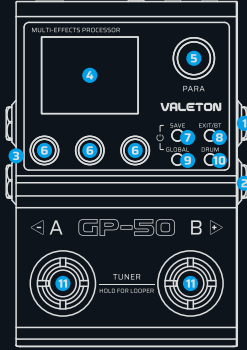

技术要求：
157g铜版纸，400*120mm(折后80*120mm) ，四色印刷，双面覆防刮花哑膜，风琴折

版本	修改前	修改后	日期
V02	Product Name/产品名称: Multi-Effects Processor/综合效果器 Model Number/产品型号: GP-50 Adapter/电源适配器: 9V  500mA Polarity/极性:   FCC ID: 2AHJ5-GP50 IC: 30142-GP50 HVIN: GP-50 CMIIT ID:      RoHS 长沙幻音科技有限公司 Changsha Hotone Audio Co., Ltd	Product Name/产品名称: Multi-Effects Processor/综合效果器 Model Number/产品型号: GP-50 Adapter/电源适配器: 9V  500mA Polarity/极性:   FCC ID: 2AHJ5-GP50 IC: 30142-GP50 HVIN: GP-50 CMIIT ID:     RoHS 长沙幻音科技有限公司 Changsha Hotone Audio Co., Ltd 删除蓝框处巴西认证标识	25/08/11
V03	Panel Introduction  1. IN Jack 1/4" (6.35mm) mono input connection for guitar or other instruments. 2. EXP/FS Jack 1/4" (6.35mm) TRS input for connecting an external expression pedal or footswitch controller. 3. OUT L (MONO)/R Jack 1/4" (6.35mm) pair of TS stereo unbalanced output connections. For mono output, use only the L (MONO) jack. 4. LCD Display The color LCD displays the GP-50's patch numbers, patch names, and other operational information. 5. PARA Knob (with enter button) On the main display screen, turn to switch patches, press to edit the effect chain, and then hold to change the order of effect modules. 6. Quick Access Knobs Turn to adjust parameters displayed on the lower part of the screen. Each knob's function varies depending on the parameter shown. 7. SAVE Button Whenever a patch is modified, the main display will show a symbol indicating that the parameter has been changed. Use the SAVE button to store, rename, or copy the patch. Press the SAVE button again to save the changes. 8. EXIT/BT Button Press to return to the previous screen, hold to toggle the BT wireless function on/off. 9. GLOBAL Button Press to enter the Global Settings menu, where you can edit the GP-50's global parameters. Hold the GLOBAL and SAVE buttons simultaneously to power on/off when using battery power. 10. DRUM Button Press to play drums. Hold to enter the Drum Machine Edit menu, where you can edit drum parameters. 11. 2 Footswitches Use to change patches, turn effects on/off, tap tempo, or tuner the GP-50, etc.	Panel Introduction  1. IN Jack 1/4" (6.35mm) mono input connection for guitar or other instruments. 2. EXP/FS Jack 1/4" (6.35mm) TRS input for connecting an external expression pedal or footswitch controller. 3. OUT L (MONO)/R Jack 1/4" (6.35mm) pair of TS stereo unbalanced output connections. For mono output, use only the L (MONO) jack. 4. LCD Display The color LCD displays the GP-50's patch numbers, patch names, and other operational information. 5. PARA Knob (with enter button) On the main display screen, turn to switch patches, press to edit the effect chain, and then hold to change the order of effect modules. 6. Quick Access Knobs Turn to adjust parameters displayed on the lower part of the screen. Each knob's function varies depending on the parameter shown. 7. SAVE Button Whenever a patch is modified, the main display will show a symbol indicating that the parameter has been changed. Use the SAVE button to store, rename, or copy the patch. Press the SAVE button again to save the changes. 8. EXIT/BT Button Press to return to the previous screen, hold to toggle the BT wireless function on/off. 9. GLOBAL Button Press to enter the Global Settings menu, where you can edit the GP-50's global parameters. Hold the GLOBAL and SAVE buttons simultaneously to power on/off when using battery power. 10. DRUM Button Press to play drums. Hold to enter the Drum Machine Edit menu, where you can edit drum parameters. 11. 2 Footswitches Use to change patches, turn effects on/off, tap tempo, or enter the tuner, etc. 修改蓝框处文字内容	25/09/24