


SACK^{it}®

MOVEit

Wi-Fi & BLUETOOTH SPEAKER

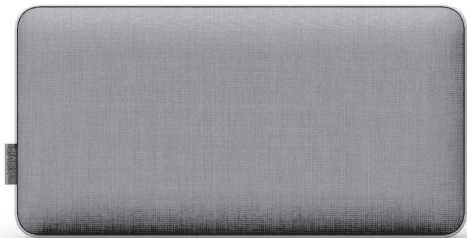

Multi-room feature



Danish design



Free audio control app



Stationary use



Changeable front



Portable

Quick start-guide

1. Oplad højttaleren i minimum 4 timer
2. Hent appen "SACKit Player" i App Store eller Google Play
3. Tænd højttaleren ved at holde Power knappen i bund
4. Følg instruktionerne i appen

Brugermanual

Advarsel: Læs brugsanvisningen før du tager produktet i brug.

Hent brugermanual online på følgende link:
sackit.dk/support

Her kan du downloade brugermanualen og gemme den til senere brug. I brugermanualen finder du instruktioner og vigtige sikkerhedsoplysninger.

Quick start-guide

1. Lad høyttaleren i minimum 4 timer
2. Last ned appen "SACKit Player" i App Store eller Google Play
3. Slå på høyttaleren ved å holde strømknappen i bunnen
4. Følg instruksjonene i appen

Brukermanual

Advarsel: Les instruksjonene før du bruker dette produktet. Last ned bruksanvisningen på følgende link:

sackit.no/support

Her kan du laste ned bruksanvisningen og oppbevare den for senere bruk. I bruksanvisningen finner du instruksjoner og viktig sikkerhetsinformasjon.

Quick start-guide

1. Charge the speaker for at least 4 hours
2. Download the free app “SACKit Player” from App Store or Google Play
3. Turn on the speaker by pressing the Power Button
4. Follow the instructions in the app

User manual

Warning: Read the user manual thoroughly before using the product.

Download user manual online at:

sackit.eu/support

Please download the user manual and save it for future use. In the user manual, you will find instructions and important safety information.

Quick start-guide

1. Laden Sie den Lautsprecher für mindestens 4 Stunden lang auf
2. Laden Sie die App „SACKit Player“ im App Store oder auf den Google Play herunter
3. Schalten Sie den Lautsprecher durch Drücken auf die Powertaste ein
4. Folgen Sie die Hinweise in der App

Bedienungsanleitung

Warnung: Lesen Sie bitte diese Bedienungsanleitung vor Gebrauch sorgfältig durch. Laden Sie die Bedienungsanleitung unter folgendem Link herunter:

sackitshop.de/support

Hier können Sie die Bedienungsanleitung herunterladen und für späteren Gebrauch aufbewahren. In der Bedienungsanleitung finden Sie technische Beschreibungen und wichtige Sicherheitshinweise.

Quick start-guide

1. Cargue el altavoz por lo menos durante 4 horas
2. Descargue la aplicación "SACKit Player" de App Store o Google Play
3. Encienda el altavoz pulsando el botón de encendido
4. Siga las instrucciones de la aplicación

Manual

Advertencia: Lea el manual antes de utilizar el producto.

Descargue el manual online:

sackit.es/support

Por favor, descargue el manual y guárdelo para uso futuro. En el manual encontrará instrucciones importantes e información de seguridad.

Safety information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

1. Battery

- A. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type
- B. batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like

2. Adapter

- A. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- B. Use only power supplies listed in the user instructions: Trade mark: fujia, Model name:FJ-SW1502400N, Input:100-240V~50/60Hz 1.5A Max, Output:15V 2400mA

SACK^{it}®



The Spotify software is subject to third party licenses found here: www.spotify.com/connect/third-party-licenses.