 


deeper

 
 
pro

pro+


pro+ 2

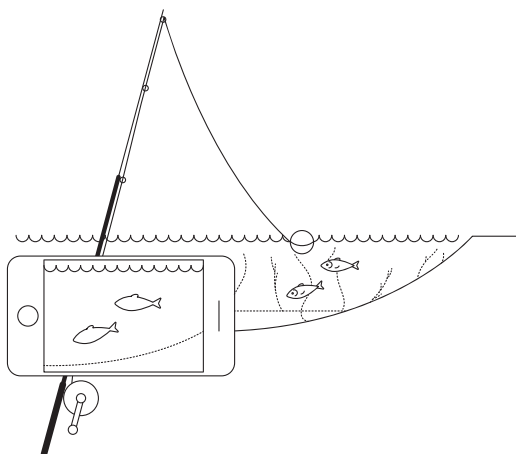

1

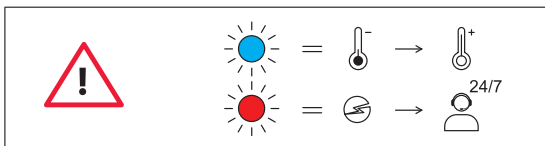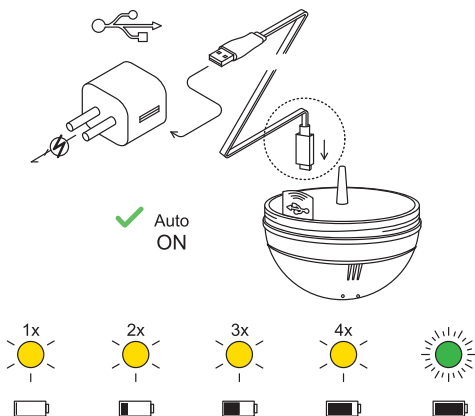

2

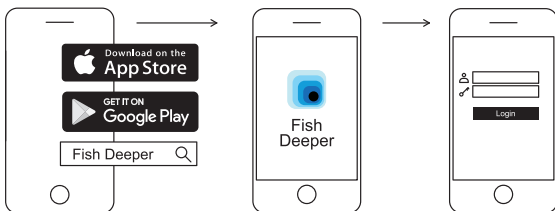 


3



Auto
ON



 Auto
OFF

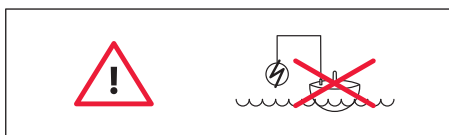


4




Settings → Mobile Data

 1

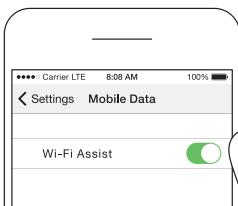


2

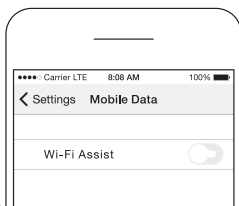 


Settings → Wi-Fi

✓ OK

 1

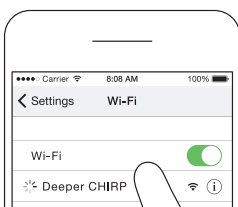


2

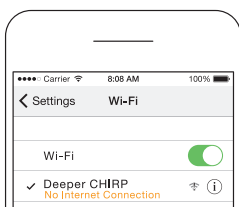 

5

 
1

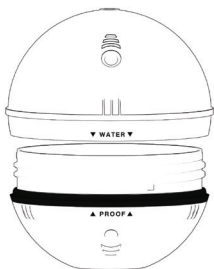


2



 
1

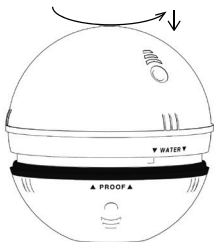





2

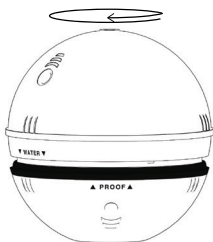 


6

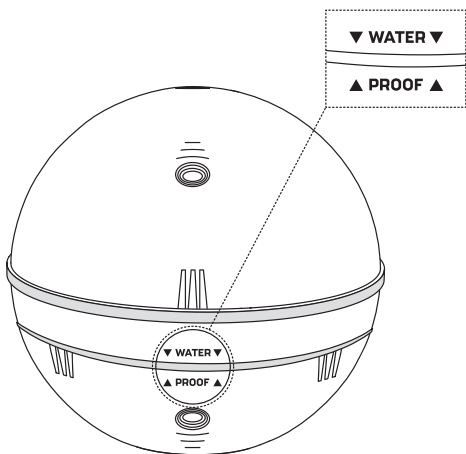 


7

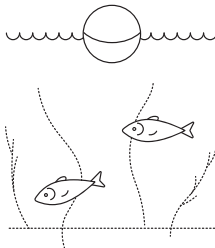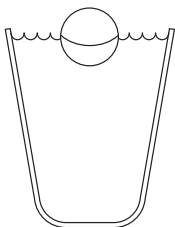    


8

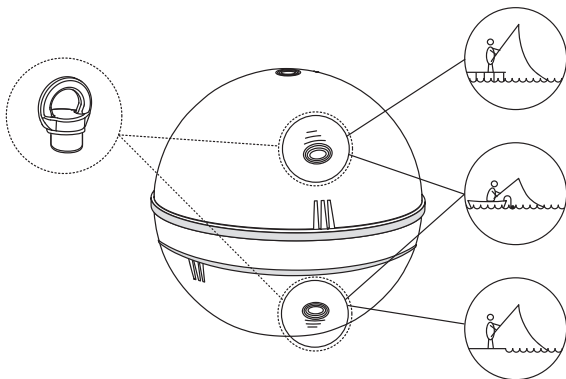 


9

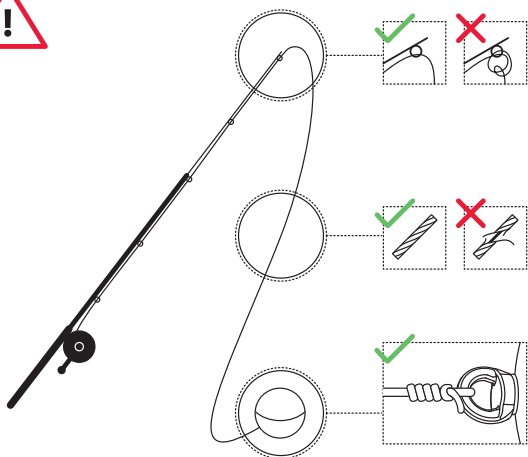 


10

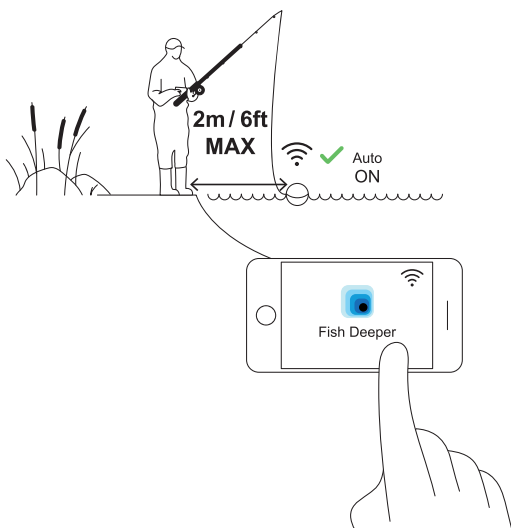 



11

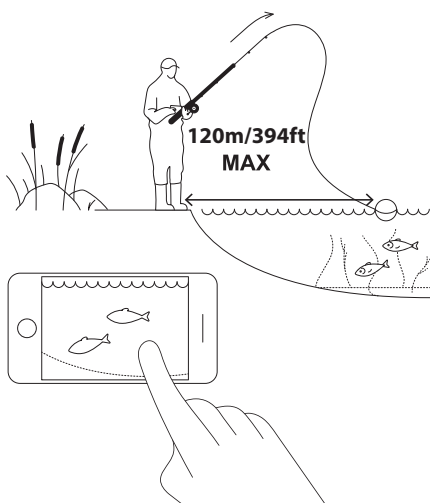 



12

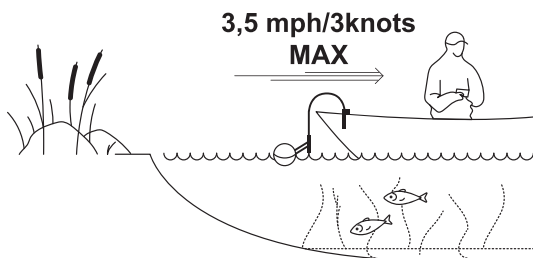 


13

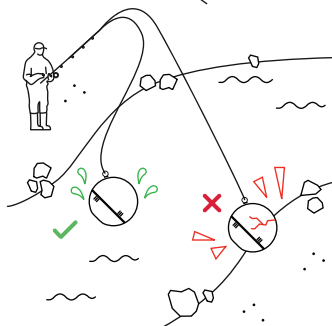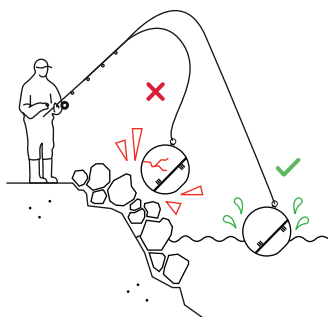  


14

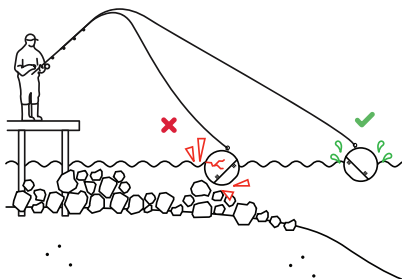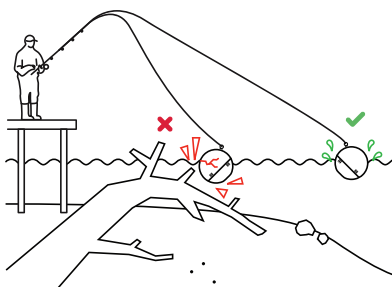  

15


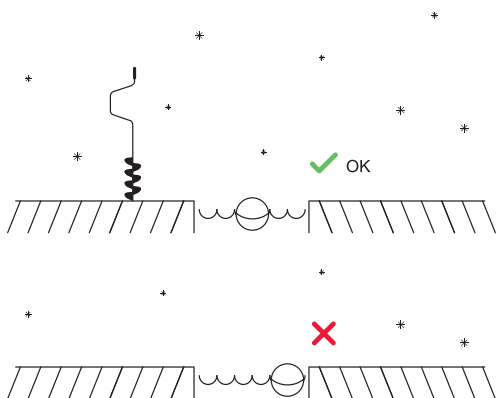 


16

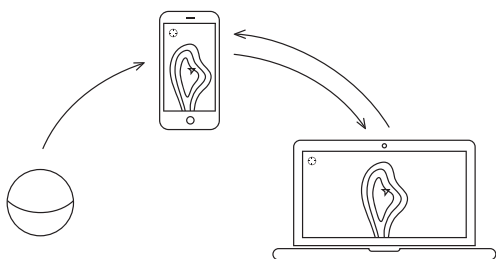 

MAPS.FISHDEEPER.COM

  17

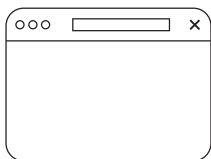

support@deeper.eu
www.deepersonar.com

18



deepersonar.com/support