 



使用说明书

感谢您选择我们的复古收音机蓝牙音箱。
在开始操作本机前，请阅读本说明书。本机已采用智能化设计，操作非常简单！

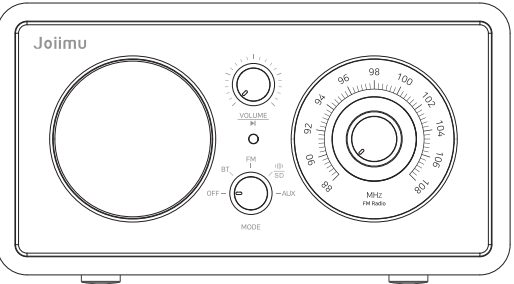

包装清单

 - JM 2 音箱*1
- TYPE C 线*1
- 音频线*1
- 使用说明书*1

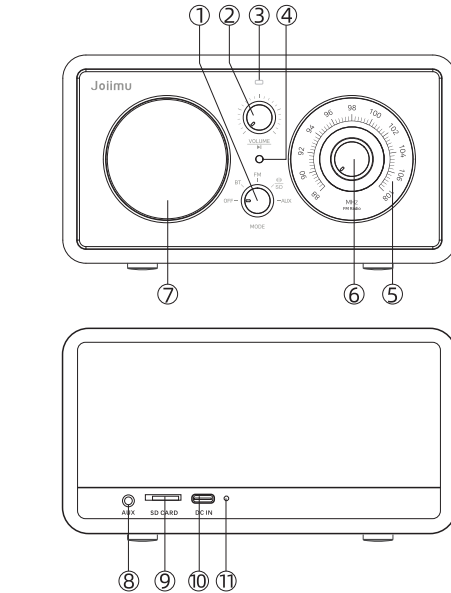

外观示意图

- | | | |
|-------------|----------|----------|
| 1、模式旋钮 | 2、音量旋钮 | 3、状态指示灯 |
| 4、FM信号指示灯 | 5、FM频率表 | 6、FM调频旋钮 |
| 7、扬声器 | 8、音频输入 | 9、SD卡槽 |
| 10、Type C 口 | 11、充电指示灯 | |

操作方法

模式旋钮	音量旋钮		
	短按	长按	双击
BT	▶	断开蓝牙连接	下一曲
FM	静音	定时播放30分钟	
/SD	▶	定时播放30分钟	下一曲
AUX	▶		

蓝牙（BT）

- 1、将模式旋转动至“BT”模式，状态指示灯开始闪烁。
- 2、打开蓝牙设备的配对列表，选择“JM 2”配对连接。

收音机（FM）

- 1、将模式旋钮转动至“FM”模式，频率表背景灯常亮。
 - 2、转动FM调频旋钮，搜索电台，当FM信号指示灯绿灯常亮，表示信号最强。
- 注：本机在充电状态下，充电器可能干扰某些收音频道。

白噪音/内存卡（SD卡）

白噪音模式：将模式旋转动至“|||/SD”模式,本机将自动播放内置白噪音。
内存卡模式：将SD卡插入“SD CARD”口，本机将自动播放SD卡内音乐。
注：本机支持文件格式FAT32，支持音乐格式MP3、WAV、WMA、FLAC、APE。

音频输入（AUX）

将模式旋钮转动至“AUX”模式。
PC模式：将电脑通过USB-TYPE C线连接至本机TYPE C口播放，同时电脑将对本机充电。
其他音源模式：将手机、平板、电脑、MP3等音源设备通过音频线连接至本机AUX口播放。
注：手机、平板不可用TYPE C 线接本机，如连接，手机将对本机充电。

关机

请将功能旋钮转到关机（OFF）。

充电

- 1、当状态指示灯变为红色时，即表示音箱电量为低电状态，此时需为音箱充电。
- 2、充电时，充电指示灯红灯常亮，充满电后指示灯熄灭。
- 3、音箱长期不使用时，建议每三个月充电一次，延长电池使用寿命

产品规格

产品名称	复古收音机蓝牙音箱
型号	JM2
重量	680G
尺寸	170*90*90MM (W*H*D)
蓝牙版本	V6.0
功率	10W
总谐波失真	<1%
频响范围	40Hz-18KHz
FM频率	87.5-108MHz
电池容量	聚合物锂电池2600Mah
充电输入	5V 1A
充电时间	>4H
播放时间	10H
操作温度	-10℃~50℃

常见问题：

- 1、蓝牙模式，搜索不到音箱。
原因：已有其他设备连接了音箱。
解决方法：长按音量钮强制取消配对，然后在蓝牙配对列表中选择“JM2”配对。
- 2、充不进电,充电指示灯不亮。
原因：充电器可能不良，或者使用多输出口充电器充电。
解决方法：请使用手机充电器充电。

有毒有害物质或元素附表

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
主机	X	○	○	○	○	○
配件	X	○	○	○	○	○

本表格依据SJ/T11364的规定编制

○:表示该有毒有害物质在该部件所有均值材料中的含量均在 GB/T26572 标准规定的限量要求以下。

X:表示该有毒物质至少在该部件的某一均值材料中的含量超出GB/T26572 标准规定的限量要求。

注:本产品标有“X”的原因是现阶段没有可供选择的替代技术或部件。

温馨提示

- 1.为了延长电池寿命，建议你每三个月至少让音箱充电一次。
- 2.请使用符合标准和本产品输入规格的充电器为音箱充电,使用其他劣质充电器可能导致危险。

生产企业:深圳市爱昊科技有限公司

地址:深圳市宝安区航城街道华丰第二工业区丰润楼B座4楼

执行标准:GB 4943.1-2022

 
网址:www.ihold.cc

服务热线: 0755-29172660





User manual

Thank you for purchasing the Retro FM Radio Bluetooth Speaker . please read this manual carefully before starting to operate the speaker. This speaker has been intelligently designed for very simple operation!

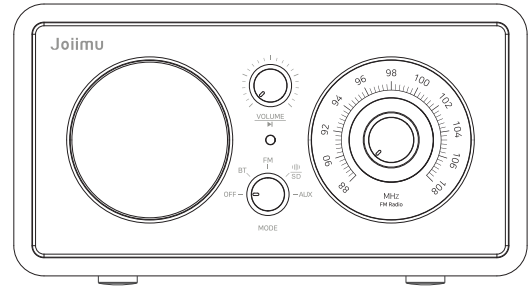

Packing Accessories

  - JM 2 speaker*1
- Type-C cable*1
- AUX cable*1
- User Manual*1

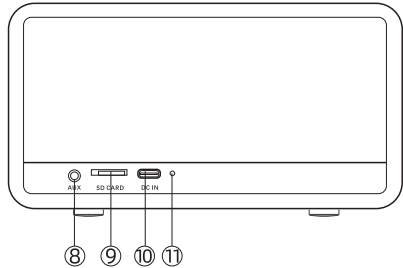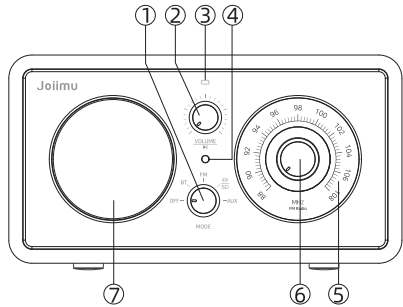

Appearance outline

1. Mode knob

4. FM signal indicator

7. Speaker driver

10. Type C port
2. Volume knob

5. FM Frequency dial

8. Aux input

11. Charging indicator
3. Status indicator

6. FM knob

9. SD card slot

Operating Guide

Mode knob	Volume knob		
	Short press	Long press	Double click
BT	▶	Disconnect pairing	next
FM	silent	Timed playback 30 minutes	
/SD	▶	Timed playback 30 minutes	next
AUX	▶		

Bluetooth (BT)

1. Turn the function knob to the "BT" mode, the status indicator starts to flash.
2. Open the Bluetooth list of your device and select "JM 2" to connect and pair.

FM radio (FM)

1. Turn the mode knob to the " FM " mode, he background light of the frequency dial will light.
2. Turn the FM knob manually to search for the FM stations, when the green light of the FM signal indicator is on, means the signal is the strongest.

Note: Some radio stations maybe interfered by the charger while charging the speaker.

White noise & SD card (|||/SD)

White noise: Turn the mode knob to the " |||/ SD " mode, The machine will automatically play the built-in white noise.

SD card: Insert the SD card into the "SD Card" port, and the machine will automatically play the music on the SD card.

Note: The speaker only supports file format FAT32, music format MP3, WAV, WMA, FLAC, APE.

Audio input (AUX)

Turn the mode knob to the " AUX " mode.

PC Audio Mode : Connect the computer to the TYPE C port of this machine via a USB-TYPE C cable for playback. At the same time, the computer will be

able to charge this machine.

Other Audio mode: Connect audio source devices such as mobile phones, tablets, computers and MP3 players to the AUX port of this machine via AUX cable for playback.

Turn OFF

Turn the function knob to OFF mode.

Charging

1. When the status indicator light turns red, it indicates that the speaker is in a low battery state. At this time, the speaker needs to be charged.
2. When charging, the red light of the charging indicator light remains on constantly. Once the battery is fully charged, the indicator light goes out.
3. To extend the battery life, if the speaker is not used for a long time, it is recommended to charge every three months.

Specification

Product	Retro FM Radio Bluetooth Speaker
Model	JM 2
Weight	680g
Size	170*90*90MM (W*H*D)
Bluetooth version	V6.0
Power	10W
Distortion	<1%
Frequency Response	40Hz-18KHz
FM frequency	87.5-108MHz
Battery capacity	Polymer lithium battery 2600Mah
Rated input	5V1A
Charging time	>4H
Working time	10H
Operating Temp	-10℃~50℃
Manufacturer	shenzhen iHold technology co.ltd www.ihold.cc Made in China

Common Questions

In Bluetooth mode, the speaker cannot be found

Reason: Other devices have already been connected to the speaker.

Solution: Long Press the volume knob to disconnect pairing, and then select "JM2" in the Bluetooth list for pairing

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.