

FUNCTIONS & ACTIONS

FUNCTION	ACTION	
MULTIFUNCTION CALLING	CALLER ID	WHEN RECEIVING AN INCOMING CALL, THE NUMBER WILL BE HEARD ALSO.
	ANSWER A CALL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON ON EITHER SIDE WHILE HOLDING A CALL.
	ANSWER A CALL (SINGLE MODE)	PRESS AND HOLD THE MULTIFUNCTION BUTTON DURING A CALL.
	END A CALL (SINGLE MODE)	PRESS EITHER SIDE'S MULTIFUNCTION BUTTON DURING A CALL.
	REJECT/POUNCE A CALL	PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER SIDE FOR 1-2 SECONDS.
LAST CALL (SINGLE MODE)	END A CALL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON DURING A CALL.
	LAST NUMBER CALLED	TO REMIND THE LAST NUMBER IN YOUR SMARTPHONE'S CALL HISTORY, DOUBLE-TAP THE MULTIFUNCTION BUTTON ON THE RIGHT OR LEFT EARBUD. THE NUMBER WILL AUTOMATICALLY DIAL.
MUSIC & AUDIO	PLAY OR PAUSE	PRESS THE MULTIFUNCTION BUTTON ON EARBUDS ARE PAIRED TO CONTROL.
	VOLUME & PLAYLIST CONTROLS	USE YOUR SMARTPHONE (SUCH AS A SMARTPHONE OR TABLET) TO CONTROL.

SAFETY PRECAUTIONS/WARNINGS

IF YOU HAVEN'T USED YOUR EARBUDS IN A WHILE OR PLAN TO GO LONG PERIODS OF TIME WITHOUT USING THEM, BE SURE TO CHARGE THE UNIT FIRST A MONTH TO PREVENT DAMAGE TO THE LITHIUM-ION BATTERIES OVER TIME. DO NOT ATTEMPT TO PIERCE, STRIKE, OR APPLY STRONG PRESSURE WITH SHARP OR HEAVY OBJECTS. STRONG IMPACT OR SHAKES COULD CAUSE IRREVERSIBLE DAMAGE TO THE UNIT.

AVOID PROXIMITY TO HIGH FREQUENCY AND STRONG MAGNETIC DEVICES WHEN POSSIBLE. DROPPING OR MISHANDLING THE EARBUDS MAY CAUSE IRREPARABLE DAMAGE TO THE UNIT AND ITS BATTERIES. DO NOT EXPOSE TO OR SUBMERGE IN WATER.

KEEP EARBUDS AWAY FROM HEATING APPLIANCES AND SOURCES OF ELECTRICAL NOISE, SUCH AS FLUORESCENT LAMPS OR MOTORS. KEEP HANDS DRY AND CLEAN WHEN TOUCHING THE EARBUDS AND BUTTONS.

KEEP THE EARBUDS AWAY FROM SMALL CHILDREN AT ALL TIMES OR UNDER STRICT SUPERVISION BY AN ADULT AT ALL TIMES. THE UNIT CONTAINS SMALL PARTS AND MAY PRESENT A CHOKING HAZARD.

DO NOT EXPOSE THE EARBUDS OR ANY ELECTRICAL PARTS TO EXTREMELY HIGH OR EXTREMELY LOW TEMPERATURES OR HIGH PRESSURE. DO NOT EXPOSE THE EARBUDS OR CASE TO DIRECT SUNLIGHT, RAIN, OR OTHER LIQUIDS OF ANY KIND, OR OTHER HOT LIQUIDS. THIS MAY CAUSE THE BATTERY TO GENERATE HEAT, SCORCH, OR EXPLODE. USING THE EARBUDS OR CHARGING CASE IN THIS MANNER MAY ALSO RESULT IN A LOSS OF PERFORMANCE OR A SHORTENED LIFE EXPECTANCY.

DO NOT ATTEMPT TO DISASSEMBLE OR MODIFY THE TWO EARBUDS, EARBUDS OR CASE IN ANY WAY. IMMEDIATELY DISCONTINUE USE IF THE UNIT HAS ANY VISIBLE OR PHYSICAL PARTS THAT APPEAR MALFUNCTIONAL IN ANY WAY.

IF THE BUDS BECOME OVERHEATED, STOP USING THE EARBUDS IN A SAFE PLACE AND CONTACT THE SERVICE CUSTOMER SUPPORT TEAM AT HEL@GENTEK.COM.

GEN TEK

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

GEN TEK

FCC ECE

© 2024 GEN TEK. ALL RIGHTS RESERVED. GEN TEK IS A REGISTERED TRADEMARK OF GEN TEK INC. THIS PRODUCT IS A TRADEMARK OF GEN TEK INC. IN THE UNITED STATES AND IN OTHER COUNTRIES. THE DESIGN AND APPEARANCE OF THE PRODUCT MAY VARY WITHOUT NOTICE. GEN TEK MAKES NO WARRANTIES OR ENDORSEMENTS BY THE BATTERY CASE, INC. FOR THE USE OF THE PRODUCT IN ANY MANNER.

GEN TEK

TW2

TWS EARPHONE

Model: EP-014D

 


Bluetooth

Includes: 1x Pair TW2 1x Portable Charging case 1x Micro-USB Charging Cable

TW2 ERGONOMIC IN-EAR DESIGN

1. MULTIFUNCTION BUTTON
2. MICROPHONE
3. CHARGING PORT

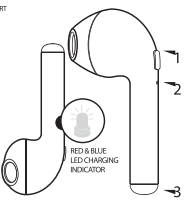

RED & BLUE LED CHARGING INDICATOR

TECHNICAL SPEC

BLUETOOTH 4.2	Playtime: 24 hours (with the charging case)	Standby Time: Up to 180 hours	Charges Provided: Case/Power 1/Power 4
Battery Type: Polygraphene Lithium-ion	Input: 500mAh	Self-discharge Life: 12 months (at 25°C)	Frequency Response: 20Hz-20KHz

*NOTE: USING YOUR EARBUDS AT LOWER VOLUMES WILL HELP PROLONG THE BATTERY LIFE BETWEEN CHARGES

PAIRING AND POWERING OFF EARBUDS

WITH THE PAIRING

- KEEP THE EARBUDS IN THE CHARGING CASE UNTIL THE EARBUDS ARE FULLY CHARGED.
- THE EARBUDS WILL BE POWERED ON WHEN YOU PULL THEM OUT OF THE CHARGING CASE.
- BEFORE ATTEMPTING TO PAIR, MAKE SURE THE EARBUDS HAVE BEEN RESET TO FACTORY DEFAULTS. FOR DETAILED INFORMATION ON FACTORY RESET, PLEASE REFER TO YOUR USER MANUAL.

STEP 1: PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EACH EARBUD FOR 3 SECONDS. YOU WILL SEE THE RED/BLUE LED INDICATOR ON EACH SIDE, INDICATING THAT THE POWER IS ON. YOUR EARBUDS ARE NOW IN PAIRING MODE.

STEP 2: OPEN YOUR SMARTPHONE'S SETTINGS MENU AND ACTIVATE BLUETOOTH PAIRING. YOUR SMARTPHONE WILL SEARCH FOR AVAILABLE DEVICES AND LIST THE EARBUDS. SELECT THE EARBUDS TO PAIR. THE EARBUDS WILL BE PAIRED TO YOUR SMARTPHONE.

STEP 3: SELECT THIS OPTION. ONCE THE PAIRING IS COMPLETE, YOUR TWO EARBUDS ARE READY TO USE.

*YOU MAY WANT TO TRY USING ONE EARBUD SINGLE MODE INSTEAD OF USING THE PAIR TO CHECK YOUR BUD'S MODE WHEN THEY ARE IN THE CASE. Simply turn on the EARBUD you wish to use and follow the same steps while keeping the OTHER EARBUD TURNED OFF. YOU WILL HAVE THE SAME FUNCTIONALITY.

TO TURN YOUR EARBUDS OFF: PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUD IS POWERED OFF. TO STOP THE PROCESS FOR THE SECOND EARBUD TO POWER OFF AS WELL.

WITH THE PAIRING

IF YOU HAVE SUCCESSFULLY PAIRED YOUR EARBUDS TO A BLUETOOTH EARBUD DEVICE, THAT DEVICE WILL REMEMBER AND PRESET YOUR EARBUDS FOR AUTOMATIC RE-PAIRING. THIS MEANS THAT THE NEXT TIME YOU WISH TO USE YOUR EARBUDS WITH THAT SMART DEVICE, PAIRING WILL HAPPEN AUTOMATICALLY AND YOU WON'T NEED THE NEED FOR YOU TO REPEAT THE PAIRING PROCESS AGAIN.

TECHNICAL SPEC

POWER OFF EACH EARBUD

PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUDS ARE POWERED OFF.

 
IF YOU WANT TO STOP THE PAIRING PROCESS, PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUDS ARE POWERED OFF.

POWER OFF EACH EARBUD

PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUDS ARE POWERED OFF.

IF YOU WANT TO STOP THE PAIRING PROCESS, PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EITHER EARBUD FOR 3 SECONDS UNTIL EARBUDS ARE POWERED OFF.

400mAh CHARGING CASE

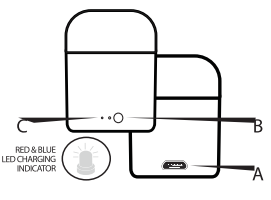


RED & BLUE LED CHARGING INDICATOR

A MICRO-USB CHARGING PORT
B POWER BUTTON
C LED INDICATOR

Battery Type: Rechargeable Lithium-ion	Charges Provided: Case/Power 1/Power 4	Charging Case/Battery Output: 500mAh/100mAh	Impedance: 32Ω
--	--	---	----------------

 CHARGING YOUR EARBUDS & CASE*

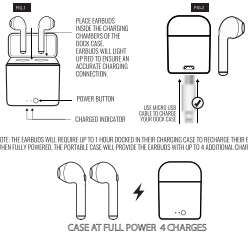

NOTE: THE EARBUDS WILL CHARGE UP TO 100% WHEN DOCKED IN THEIR CHARGING CASE TO RECHARGE THEIR BATTERIES. WHEN FULLY POWERED, THE CHARGING CASE WILL PROVIDE THE EARBUDS WITH UP TO 4 ADDITIONAL CHARGES.

CASE AT FULL POWER 4 CHARGES

1. INSERT THE EARBUDS INTO THEIR CORRESPONDING CHARGING PORTS IN THE CASE, RESPECTIVELY MARKED L AND R PLUGS.
2. PRESS EACH EARBUD'S POWER BUTTON UNTIL YOU FEEL A "CLICK" TO INDICATE THAT IT IS SECURE. CLOSE THE CASE.
3. INSERT THE RED/BLUE MICRO-USB CHARGING CABLE INTO THE BACK OF THE CHARGING CASE AND CONNECT TO A POWER SOURCE (SUCH AS A POWER BANK, AC WALL ADAPTER, ETC.) PLUGS.
4. YOU WILL SEE THE EARBUDS FLASH RED TO INDICATE THAT AUTOMATIC CHARGING HAS BEGUN. THE CASE'S EXTERIOR LED WILL FLASH A STRONG BLUE.
5. WHEN THEY HAVE FINISHED CHARGING, ALL LEDS WILL TURN OFF TO INDICATE THAT THE EARBUDS AND CASE ARE FULLY CHARGED.