

A vertical red line with a red upward-pointing triangle at the top and a red downward-pointing triangle at the bottom, indicating a range or interval.



Notice:
Please read user manual carefully and keep it for your records.

Package includes:

- 1 Mini Karaoke Machine Speaker
- 5.0x3.0x1.5, 3.5in, 14cm x 9.7cm x 4.6cm
- 2 Mini Wireless Mini Karaoke Microphones
- 3.5in x 1in x 1in, 8.6cm x 2.5cm x 2.5cm
- 1 Type-C USB charging cable 1.81m, (60cm)
- 1 User Manual

Specifications

- Bluetooth®: V5.3
- Input: 5V
- Sound output: 5W
- Charge time: up to 2 hours
- Play time: up to 3 hours
- Battery of Speaker: 500mAh
- Battery of Microphone: 200mAh
- Operating range: 33 Feet (10m)



Features

- Can be used as speaker
- Compatible with various music applications
- Clear audio quality
- Multi-color RGB lights with 4 light modes
- Ultra portable with built-in handle
- 2-in-1 charging port: USB Type-C, 3.5mm Audio, USB/TX card & TWS function
- True Wireless Stereo Function

when paired with another Karaoke Machine speaker

Function	Instruction	Initial Light	Sound Notification
Turn On Karaoke Machine	Long press the power button for 3 seconds	2 times red and green LEDs Blue light flashes A continuous sound of 3 seconds	Tone
Power Off Karaoke Machine	Long press the power button for 3 seconds	Blue light goes out	Tone
Pair Karaoke Machine with the Mobile Phone	Turn on the Bluetooth® on the phone, select BT-004047, and click to pair	-	Tone
Press the Bluetooth function	Press the power button	-	-
Switch the Light mode with the microphone	Press the "M" button to alternate between 4 light modes. The light alternates from 1 to 4 and then from 4 to 1. Press the "M" button for 3 seconds to switch CHOCOP! the light effect.	1. No connection with other Bluetooth devices. 2. Continuous sound of Bluetooth connection	-
Recharge battery	Press the "+" button	-	-
Recharge USB	Press the "+" button	-	2 times when USB recharge
Volume up	Long press the "+" button	-	-
Auto shut down	Long press the "+" button	-	-
Auto shut down	The Karaoke Machine will automatically shut down after 10 minutes without the Bluetooth® connection. If 10 minutes, the device will not automatically power on.	Blue light flashes	Tone
Blue light does not illuminate	Manual turn the Bluetooth® function on your phone, and the Karaoke Machine will automatically connect to the phone. If 10 minutes, the device will not automatically power on.	Blue light flashes	Tone
Automatic shutdown/ reconnection if long distance	The speaker will automatically shut down after 10 minutes if it is not in the Bluetooth® range, and it will automatically reconnect when the effective range is 10 meters, the device will not automatically power on (not recommended).	Blue light flashes	-

Function	Instruction	Indicator Light	Sound Notification
Display of battery percentage	Accessories process accordingly display battery level of Karaoke Machine	-	-
Volume adjustment synchronization	Adjust process volume is synchronized	-	-
Karaoke Machine charging	Connect the TPMS cable to DC 5V 1A power adapter (not included)	Red light is constantly on.	-
Low battery warning	Low battery, prompt, soon energy trouble.	-	Tone
Microphone function	Power Button: Long press to turn on/off the device, and double press to make the microphone mute. Speaker: Long press to switch between 2 speakers and short press to switch the original sound effect (such as bass, treble, etc.) Microphone: Press of original volume. Function: It supports auto mute and auto sleep. * When in the microphone mode, short press increases the volume (long press stops the previous task).	-	Tone A low connection after starting the Karaoke Machine, 5 Connection with the TPMS cable is constantly on.
Microphone charging	Connect the TPMS cable to DC 5V 1A power adapter (not included)	Charging, that light stays on.	Charging, light goes on.
Karaoke Mode	Click the TPMS button on Karaoke Machine to choose the sound from four items, Click the TPMS button again to return to the previous page.	-	Tone
Mode switching FM	Click the TPMS button to enter mode, Tap/press the USB button (left) sequentially.	-	Tone
TWS Mode	Power on both speakers simultaneously, double-click the power button on either speaker to enter TWS mode. For the receiver (left) and both speakers, double-click the power button on both speakers, double-click again on each one, the	Red light on both speakers off and off	Tone

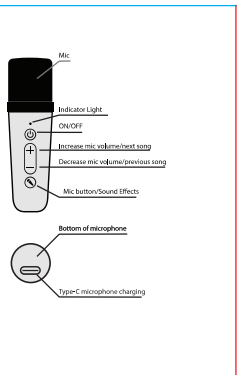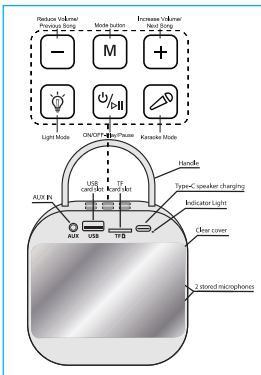

HANDLING OF COMMON ISSUES

1. If the Indicator Light does not light up after turning on the Karaoke Machine's power, please check whether the Karaoke Machine's power is sufficient, or connect the Karaoke Machine to the 3V/1A power supply for charging. The charging time is about 2 hours.

2. There is no sound coming from the microphone: it may be that the Power is not turned On, the Mode is incorrect, or the Volume is not adjusted. Please adjust the microphone's Volume.

3. If there is noise in the microphone, it may be due to ambient noise, signal interference, microphone too close to the speaker, etc. Please readjust the direction of the microphone.

4. If Bluetooth® playback is interrupted, it may be because the Bluetooth® device is too far away from the Karaoke Machine, the mobile phone and the amplifier which affects the transmission of the signal, please approach the connected mobile phone and the other devices.

5. If Bluetooth® cannot be connected, it may be because the Karaoke Machine is too far away from the mobile phone. After the mobile phone, please approach the phone to avoid obstacles and disconnect Bluetooth® from previously connected devices.

6. If the Karaoke Machine is not working properly, please check the charging port and whether the Red Indicator light of the charging port is on when the Karaoke Machine is charging.

TIPS

This product is sold without a power adapter. If the power adapter is used for this product, it should meet the requirements of the standard IEC 62369-1.

SAFETY INSTRUCTIONS

- Never disassemble the Karaoke Machine especially in an attempt to make any repairs as this could result in electric shock, burns or product failure.
- Use extra caution in high temperatures.
- Do not use product in the presence of a fire or airplane.
- Do not expose the device to direct sunlight, heat or flame.
- Product is not covered under warranty, when the product has metal dust, surface spalling and any other natural oxidation.
- Damage, shock, and/or injury can occur if these warnings are not heeded.
- Do not use machine when power will be charging.
- Make sure the product is not damaged and the power outlet of completely before unplugging the product.
- Make sure the product has plenty of ventilation.
- Do not press the power button too hard as it could damage the product.
- Only use dry cloth on this product clean from dust.
- Only use dry cloth to keep the product clean.
- Never try to repair this product yourself; take it to a certified technician. Trying to remove panels or repairing the unit yourself is not covered under warranty.
- If the product is damaged, do not use it, make sure it is correctly turned off and stored in a cool dry place.
- Do not insert foreign objects into the product.
- Avoid dropping the product as hard impacts could damage the product.

TIPS

This product is sold without a power adapter. If the power adapter is used for this product, it should meet the requirements of the standard IEC 62369-1.

SAFETY INSTRUCTIONS

- Never disassemble the Karaoke Machine especially in an attempt to make any repairs as this could result in electric shock, burns or product failure.
- Use extra caution in high temperatures.
- Do not use product in the presence of a fire or airplane.
- Do not expose the device to direct sunlight, heat or flame.
- Product is not covered under warranty, when the product has metal dust, surface spalling and any other natural oxidation.
- Damage, shock, and/or injury can occur if these warnings are not heeded.
- Do not use machine when power will be charging.
- Make sure the product is not damaged and the power outlet of completely before unplugging the product.
- Make sure the product has plenty of ventilation.
- Do not press the power button too hard as it could damage the product.
- Only use dry cloth on this product clean from dust.
- Only use dry cloth to keep the product clean.
- Never try to repair this product yourself; take it to a certified technician. Trying to remove panels or repairing the unit yourself is not covered under warranty.
- If the product is damaged, do not use it, make sure it is correctly turned off and stored in a cool dry place.
- Do not insert foreign objects into the product.
- Avoid dropping the product as hard impacts could damage the product.

WARRANTY - 12 MONTH
Please visit our website bytechintl.com/warranty

60225 BYTECH™ INC.
BYTECH™ is a registered trademark of Bytech Inc.
NetBios™ is a registered trademark of Bytech Inc.

*All trademarks and copyrights are the property of the respective companies.
*Photos are for illustration purposes only.

BYTECH
2566 West 17th Street
Surrey, BC V4N 1V2
BYTECH
INTERNATIONAL INC.

CE

Made in China

USB Cable noting Supplied 30-150 CM
100% Guarantee on your safety, the company will
refund you the item in question for use with this
product only

FCCID: 2AHM6-A10B043
FCCID: 3AHM6-A00001

© ByteFichini.com/warranty

Remark of ByteFichini INC.
remark of B2B Inc.

It is the property
passes only

USB Cable rating Input/output 5V 1A 5W Max

⚠ CAUTION: FOR YOUR SAFETY. The charging cable
is subject with this sign is incompatible use with this
product only

FCC ID : 2A996-AUM0043
FCC ID : 2A996-AUM0043