

372 mm



90 mm



- Notice:** Please read user manual carefully and keep it for your records.
- Package includes:**
- 1 Mini Karaoke Machine Speaker 5.5in. x 3.8in. x 3.3in. (14cm x 9.7cm x 8.4cm)
 - 2 Mini Wireless Mini Karaoke Microphones 3.5in. x 1in. x 1in. (8.9cm x 2.5cm x 2.5cm)
 - 1 Type-C USB charging cable 11.61in. (30cm)
 - 1 User Manual
- Specifications**
- Bluetooth®: V5.4
 - Input: 5V
 - Sound output: 5W
 - Charge time: up to 2 hours
 - Play time: up to 3 hours
 - Battery of Speaker: 500mAh
 - Battery of Microphone: 200mAh
 - Operating range: 33 feet (10m)
- Features**
- Can be used as speaker
 - Compatible with various music applications
 - Clear sound quality
 - Multi-color RGB lights with 6 light modes
 - Ultra portable with built-in handle
 - DC 5V charging port, FM Radio, 3.5mm AUX-in, USB/TF card & TWS function
 - "True Wireless Stereo Function" when paired with another Karaoke Machine speaker

Function	Instruction	Indicator Light	Sound Notification
Turn On Karaoke Machine	Long press the power button for 3 seconds	1. Power on but no connection 2. Light Red 3. Connection successful (Blue light remains on constant)	Tone
Power OFF Karaoke Machine	Long press the power button for 3 seconds	Blue light goes out	Tone
Pair Karaoke Machine with mobile phone	Turn on the Bluetooth® on the phone, select BYTECH and click to pair	-	Tone
Power the playback function	Press the power button	-	-
Switch the Light mode	Press the Light button to operate between 6 light modes (Auto, Alternating, gradient 1, gradient 2, gradient 3, twinkling, breathing), and long press for 2 seconds to switch (Long Press to Exit effect)	-	-
Pair Karaoke Machine with the microphone	Press the Microphone button on the phone, and the Karaoke Machine will automatically connect to the microphone	1. No connection upon startup: the light flashes 2. Connection successful (Blue light remains on constant)	-
Reduce Volume	Press the "+" button	-	-
Increase Volume	Press the "-" button	-	2 Steps when max volume
Previous song	Long press the "+" button	-	-
Next song	Long press the "-" button	-	-
Auto shut down	The Karaoke Machine will automatically shut down after 10 minutes without Bluetooth connection (If TWS mode, the device will not automatically power off when disconnected)	Blue light flashes	Tone
Shut down without connection	Press the Light button on the phone, and the Karaoke Machine will automatically shut down (If TWS mode, the device will not automatically power off when disconnected)	Blue light flashes	Tone
Automatic shutdown (if long distance)	The speaker will automatically shut down after 10 minutes if it is connected to the Bluetooth® mode, and will automatically reconnect within the effective range (If TWS mode, the device will not automatically power off when disconnected)	Blue light flashes	Tone

Function	Instruction	Indicator Light	Sound Notification
Display of battery percentage	Activated/OS process accordingly display battery level of Karaoke Machine	-	-
Volume adjustment synchronization	Apple phone volume is synchronized	-	-
Karaoke Machine charging	Connect the Type-C cable to DC 5V 1A power adapter (not included)	Red light is constantly on	-
Low battery warning	Low battery prompts once every minute	-	Tone
Microphone function	Power Button: Long press to turn on/off the device and press to take the microphone Microphone key: Short press to toggle design voice effects, long press to switch between original sound & design sound (sound effects on/off, changing the microphone sound effects) 3. Microphone mute: Short press to mute the microphone, long press steps to read music, volume key & microphone mute, short press decreases mic volume, long press steps to previous track	1. No connection upon startup: the light flashes 2. Connection successful (Blue light remains on constant)	Tone
Microphone charging	Connect the Type-C cable to DC 5V 1A power adapter (not included)	Charging: Red light stays on Fully charged: Red light goes out	-
Karaoke Mode	Click the Light button (on Karaoke Machine) to activate the vocal track, or a song, click the Light button again, and Karaoke Machine will turn on the vocal track again	-	Tone
Mode switching FM	Click the Light button to switch between Bluetooth® and FM (Long Press TF card/AUX mode)	-	Tone
TWS Mode	Power on both speakers simultaneously, Double-click the power button on either speaker to enter TWS mode (The indicator light on both speakers will flash twice), connect the two speakers via Bluetooth, Double-click again to exit this mode	Blue light on both speakers will flash	Tone

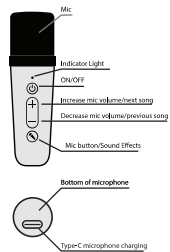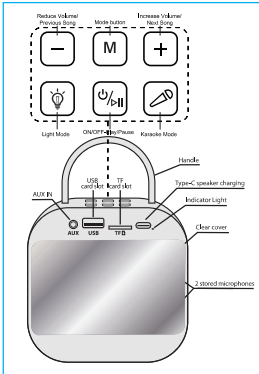

- HANDLING OF COMMON ISSUES**
1. If the Indicator Light does not light up after turning on the Karaoke Machine speaker, please check whether the Karaoke Machine's power is sufficient, or connect the Karaoke Machine to the 5V/1A power supply for charging. The charging time is about 2 hours.
 2. There is no sound coming from the microphone: it may be that the Power is not turned ON, the Mode is incorrect, or the Volume is not adjusted. Please adjust the microphone's Volume.
 3. If there is noise in the microphone, it may be due to ambient noise, signal interference, microphone too close to the speaker, etc., please re-adjust the direction of the microphone.
 4. If Bluetooth® playback is interrupted, it may be because the Bluetooth® distance is too far, or there is an obstacle between the mobile phone and the amplifier which affects the transmission of the signal, please approach the connected mobile phone and avoid the obstacle.
 5. If Bluetooth® cannot be connected, it may be because the distance is too far, there are obstacles, or it is connected by other mobile phones, please approach the phone to avoid obstacles and disconnect Bluetooth® from previously connected devices.
 6. If the Karaoke Machine speaker cannot be charged, check charging adapter and whether the Red Indicator Light of the charging port is on when the Karaoke Machine is charging.

- TIPS**
- This product is sold without a power adapter. If the power adapter is used for power supply, it should meet the requirements of the standard (DC 5V 1A).
- SAFETY INSTRUCTIONS**
- Never disassemble the Karaoke Machine speaker in an attempt to make any repairs as this could result in electric shock, burns or product failure.
 - Use extra caution in high temperatures.
 - Do not use product in a hospital or on an airplane.
 - Do not expose the device to direct sunlight, heat or flame.
 - Product is not covered under warranty when the product has metal nail, surface spalling and any other natural oxidation.
 - Damage, shock, and/or injury can occur if these warnings are not heeded.
 - Device may become warm while charging.
 - Make sure you always turn the product off and the power outlet off completely before unplugging the product.
 - Make sure the product has plenty of ventilation.
 - Do not press the buttons too hard as it could damage the product.
 - Only use dry cloth to keep product clean from dust.
 - Do not use chemicals on this product.
 - Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
 - Do not insert foreign objects into the product.
 - Avoid dropping the product, as harsh impacts could damage the product.

WARRANTY- 12 MONTH
Please visit our website [bytechind.com/warranty](http://www.bytechind.com/warranty)
©2023 BYTECH INC.
BYTECH is a registered trademark of Bytech INC.
Bluetooth® is a registered trademark of Intel Corp.
All trademarks and copyrights are the property of the respective companies.
Please visit our website for more information.

BYTECH
Contact Info:
2008 West 10th Street,
Bozeman, MT 59717
BYTECH INC.
1000 S. GARDEN AVENUE, SUITE 100
FCC ID: 2AH96-AU18B243
FCC ID: 2AH96-AU18C01
Made in China

