



BY-SF-SH-102-BK



PHONE REMOTE

USER MANUAL

FEATURES:

FEATURES AND BENEFITS:

- Compatible with mobile phones & tablets supporting functions such as taking pictures, watching & recording videos, and reading digital books.
- Compatible with most iOS and Android™ devices.
- Start/Stop video recording.
- Page turner for Ebook Reader apps.
- Frequency: 2.402GHz-2.48GHz
- Battery type: 1 x CR2032
- Bluetooth® connection up to 33 feet.

INCLUDES: 1(One) Phone Remote; 1(One) User Manual.


SAFETY INSTRUCTIONS & MAINTENANCE:

- When disposing of batteries, please take into account the protection of the environment and strictly follow your local laws and regulations for disposal of these batteries.
- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician.
- Do not puncture or harm the exterior surface of the product in any way.
- Keep the unit free from dust, lint, etc.
- Do not use unit for anything other than its intended use or purpose. Doing so may damage the device.

SAFETY INSTRUCTIONS & MAINTENANCE:

- This product is not a toy. Keep out of reach of children.
- Do not dispose of the unit in fire.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

CONTROLS:

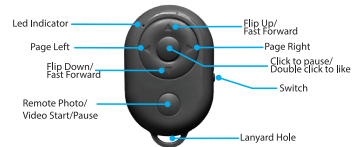

PAIRING INSTRUCTIONS:

1.Power On: Slide the switch on the right side to the ON position. A blue LED light will start flashing to indicate it is in pairing mode. **2.**Connect to Device: Open the Bluetooth settings on your smartphone. Look for a device name such as "**BY-SH-102**" and select it to pair. **3.**LED Status: Once successfully paired, the flashing blue light will stop and stay steady or turn off.

BATTERY REPLACEMENT INSTRUCTIONS:

1. Turn off the device.
2. Unscrew the screw from the battery compartment, carefully lift open battery door cover.
3. Slip the battery out from under the holding arm. Replace old battery with new battery.
4. Replace the top cover, and secure the battery door cover with original screw.



OPERATING THE REMOTE:

This product is compatible with iOS and Android systems. If individual iOS devices can not be controlled, you need to open AssistiveTouch and turn it off, then try to reconnect and pair your device again.

For iOS users: 1. Go to Settings - Accessibility - Zoom and turn on the Zoom switch. (The screen will zoom in after enabling. If no personalized settings are made, double tap the screen with three fingers to restore the normal display.

2. Open settings - Accessibility - Touch - AssistiveTouch: on scroll down to find "Tracking sensitivity". Press the remote controller Camera Button and adjust the sensitivity so that the cursor (small dot) is centered below the screen.

NOTE: Enable Zoom and AssistiveTouch in Settings - Accessibility to use all functions. (Double-tap with three fingers to reset zoomed screen).

For Android users: Most Android phones can directly use the remote control function after connecting with the remote controller. If you need to enable the cursor follow these steps:

Settings - System Version number - Click on developer option several times to enter developer mode - Search in settings to enter developer option - Open display Touch operation - Press the remote controller Camera Button to confirm the cursor.

FUNCTIONS:



*This product is in TikTok mode by default.

1.TikTok mode: UP, DOWN, LEFT and RIGHT for the phone to turn the page (You need to position small dot at the bottom right of the screen in order to use up/down/left/right function. See "Adjustment key" instruction); **A** for pause or play, **B** for the video & camera button.

2.AssistiveTouch: iOS and android system can adjust the click position via built-in Assistive Touch function in operating system. Android will appear mouse pointer, iOS new system will appear small dot. (Requires iOS 14 or newer).

3.LED indicator will stay on once device is paired. If the device is not working properly please open (Settings -Accessibility -touch -Assistive Touch Pointer Devices) to pair device.

4. Adjustment key: "**Long press the B photo key**": Press and hold the main circular shutter button at the bottom of the remote ("**B**"). Do not release the button yet, keep holding it down. "**Up, down, left and right**": While still holding the bottom button ("**B**"), use the directional arrow keys on the top d-pad to move the cursor around your phone screen. "**Set to the position you want**": Move the cursor until it is hovering directly over the on-screen button you want to control (like the center of a video for "Liking"). "**Release the button**": Once the cursor is in the right spot, let go of the bottom button ("**B**") to "save" that position.

-Large Center Button (A): Press once to take a photo or start/stop a video recording. In apps like TikTok, a double-click typically "likes" the video. **Bottom Circular Button (B):** Often functions as a return or "home" button within specific app interfaces.

Directional Arrows:

-Up/Down: Used to scroll through video feeds (like TikTok) or turn pages in e-book apps.

-Left/Right: Can adjust brightness or switch between pages in compatible reading apps.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



-Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

-Even used batteries may cause severe injury or death.

-Call a local poison control center for treatment information.

-Compatible battery type 3V CR2032.

-Non-rechargeable batteries are not to be recharged.

-Do not force discharge, recharge, disassemble, heat above.

(77° F / 25° C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

-Ensure the batteries are installed correctly according to polarity (+ and -)."

-Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

-Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

-Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

REMINDER:

1.If you are unable to connect or use the device properly, delete or disconnect the device, and try reconnecting again.

2.When taking photos or recording a video, if the cursor does not stay on the phone's photo button area, adjust the position of the small dot by simultaneously pressing the Camera Button and up/down/left/right button.

3.Turn the device off after use to avoid battery power consumption.

REMINDER:

4.This product contains a button cell battery. Please keep battery out of the reach of children

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

©2026 *All Trademarks and copyrights are the property of the respective companies.

*Bluetooth® is a registered trademark of SIG.Inc.

*iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and regions and is used under license.

*Android is a trademark of Google LLC.

*Smartphone not included. *Tripod not included.

Distributed By:
1616 Holding, Inc
701 Market Street, Suite 200
Philadelphia, PA 19106

FCC ID:2AHN6-SFSH102

WARRANTY- 12 MONTH
Please visit our website
Bytechintl.com/warranty

RoHS CE FCC
Made In China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.