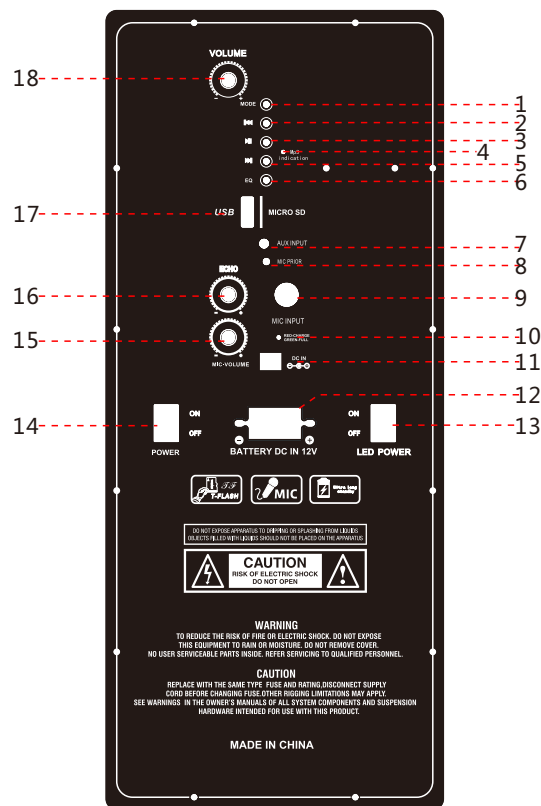


USER MANUAL	INFO IWAVE  WIRELESS KARAOKE TROLLEY SPEAKER FC CE Bluetooth®	MANUAL CAUTION: No user serviceable parts inside. Please return to the agents or a similar qualified service center for repair. SAFETY INSTRUCTIONS 1.Before using, please carefully read the user manual. Retain for future reference. 2.All WARNINGS on the speaker and in the user manual should be adhered to. 3.Do not use the speaker near water. 4.For Ventilation Purposes: ~ Do Not block any of the ventilation openings. ~ Do Not install near any heat sources or fire. ~ Do Not install in an airtight location. 5.Keep the cord and plugs in good order. 6.The speaker may be wiped down with a damp cloth once the unit has been switched off and the plug removed. 7.Unplug the speaker during lightning storms or when not in use for long periods of time. 8.Keep foreign objects and liquid from entering the unit to avoid a short circuit, fire and electrical accidents. 9.Keep the speaker in a dry location. 10.Refer all servicing to the agent or a similar qualified service center for repair. 1	MANUAL SPECIFICATIONS: AMP Power Output -----1500Watt (P.M.P.O) Impedance -----4ohms Frequency Response-----45Hz-20 KHz S/N Ratio-----93dB±3dB OTHER ITEMS: Electricity supply-----AC 120V-240V/ 60Hz-50 Hz PACKING LIST: Wireless microphone-----1 Piece Audio cable-----1 piece Manual-----1 book Adapter-----1 piece 2														
	MANUAL FUNCTION OF CONTROL PANEL  Function of Control Panel 1. AUX/USB/ TF/ FM/ BT selected 2. MP3 last song/ FM last frequency / Volume - 3. MP3 pause or play / FM Auto scan frequency 4. MP3 status indicator light 5. MP3 next song/ FM next frequency / Volume + 6. EQ mode 7. AUX MP3 input 8. Press to control Microphone Priority(long press 3 seconds to choose wireless or external Microphone) 9. Mic input jack 10. Charge indicator light 11.Electricity supply DC 13.5V/1.5A 12. Receive the 12 v input port 13. Light ON/OFF 14. Power ON/OFF 15. Mic volume adjustment 16. Mic echo adjustment 17. USB/TF card connector 18. Power ON/OFF, Volume adjustment 3	MANUAL WIRELESS MICROPHONE USING  1.When the noise occurs during use, staccato, or distortion, please replace the battery. 2.After use, please turn off the power switch. 3.When not in use for a long time, please remove the batteries to avoid leakage of battery acid corrosion of internal parts. 4.When turn on the power switch, such as the power indicator does not light or too dark, check whether the battery polarity is placed correctly or not. 4	MANUAL Simple Troubleshooting: Try the troubleshooting steps below if you are having problems while using your speaker. If problems still exist, please look for a qualified technician or contact our company. To prevent electric shock or expand the scope of the malfunction, do not repair by yourself. <table><tr><th>Symptom</th><th>Possible Problem(s)</th><th>Solution</th></tr><tr><td rowspan="2">No function light & no sound</td><td>1. Plug is not well connected</td><td>Insert the plug into electrical outlet</td></tr><tr><td>2.Speaker power button is not turned on</td><td>Turn on the button</td></tr><tr><td rowspan="3">Function light on but no sound</td><td>1. Cable is misconnected</td><td>Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack</td></tr><tr><td>2.Speaker is not connected or it is misconnected</td><td>Power off, then check and confirm the cable connection again</td></tr><tr><td>3.Audio signal is not transmitted to speaker</td><td>Check all speakers to see if there is an audio signal output</td></tr></table> If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assume no responsibility. 5	Symptom	Possible Problem(s)	Solution	No function light & no sound	1. Plug is not well connected	Insert the plug into electrical outlet	2.Speaker power button is not turned on	Turn on the button	Function light on but no sound	1. Cable is misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack	2.Speaker is not connected or it is misconnected	Power off, then check and confirm the cable connection again	3.Audio signal is not transmitted to speaker
Symptom	Possible Problem(s)	Solution															
No function light & no sound	1. Plug is not well connected	Insert the plug into electrical outlet															
	2.Speaker power button is not turned on	Turn on the button															
Function light on but no sound	1. Cable is misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack															
	2.Speaker is not connected or it is misconnected	Power off, then check and confirm the cable connection again															
	3.Audio signal is not transmitted to speaker	Check all speakers to see if there is an audio signal output															

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body