



Edison logo are registered trademarks of Britelite Inc in the U.S. and other countries, used under license.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Printed in China

EDISON
.....
PROFESSIONAL™
SN-8201
USER MANUAL



We greatly appreciate your purchase of the Speaker. To be sure you take maximum advantage of all the Speaker has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference should any questions or problems arise.

Safety Precautions

Points to observe for safe usage

Read this manual carefully before using the product. They contain instructions on how to use this product in a safe and effective manner. Britelite will not be responsible for problems resulting from failure to observe the instructions in this manual.

Turn off the device immediately in case of a problem.

Failure may cause personal injury or damage to the product. Return it to your authorized Britelite dealer for repairing.

Product cleaning.

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Any other product such as alcohol, benzene, may damage the paint or the plastic.

⚠ Temperature

Make sure before using the product, the room temperature is between +35°C (+95°F) and -10°C (+14°F)

⚠ Maintenance.

If you have problems, do not attempt to repair the unit yourself.

⚠ Heat.

Do not place the product near any heat sources or to direct sunlight.

⚠ Accessories.

Use only supplied accessories

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Main technical specifications

Basic Specifications

- 2*10" plastic speaker
- USB/TF/FM/Bluetooth function
- Microphone input
- LED display
- Remote control
- RGB light on woofer and around grill
- With MIC/Aux input/ Mic Priority
- With front handle, can be placed horizontally

USB/TF card Specifications

- 2.0 USB Port (Max Capacity: 32GB)
- TF Card Slot (Max Capacity: 32GB)
- Compatible Audio Formats in USB: MP3 / WMA / WAV
- Compatible Audio Formats in TF: MP3 / WMA / WAV

- Output power: 60W RMS.
- Output power: 420W PMPO
- Bluetooth Specifications
- Bluetooth Module: AC 4601
- Bluetooth Version: V2.1 + EDR
- Bluetooth Support: 2.1

Technical Specifications

- Output power: 420W PMPO
- Output power: 60W RMS
- SNR: 93dB±3dB
- Frequency response: 100-20 KHz
- Power supply: AC115~230V, 60/50Hz
- Driver unit: 2 x10"woofer


AMP

- .Output Power.....420 W a t t (p . m . p . o)
- .Impedance.....40mhs
- .Frequency Response.....100-20KHz
- .S/N Ratio.....93db±3db
- .Electricity Supply.....AC115~230V, 60/50Hz

Accessories

- .Manual.....1 Book
- .Remote Control.....1 piece
- .Audio Cable..... 1 piece
- .Power Cord.....1 piece
- .Warranty Card.....1 piece

FUNCTION OF FRONT BOARD

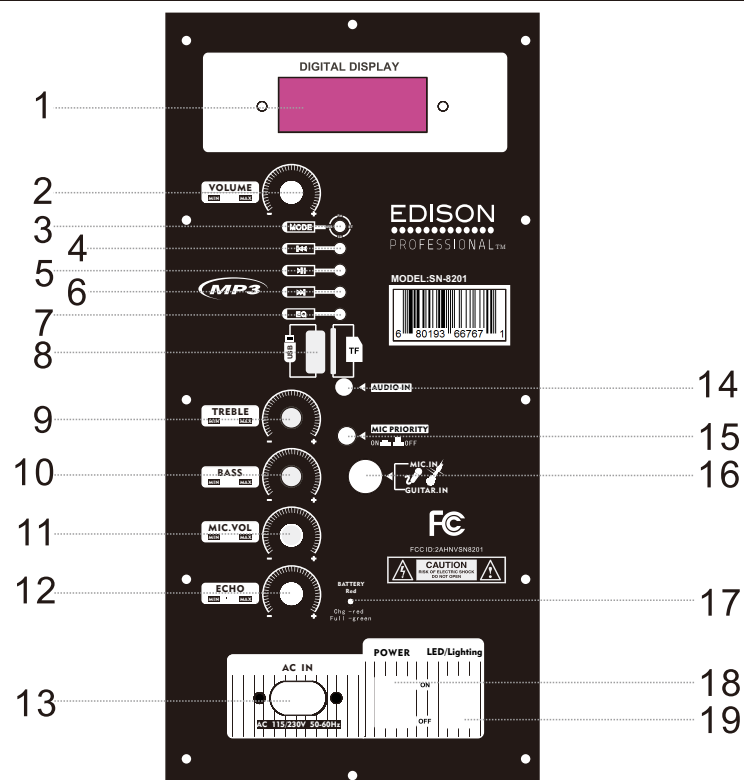

1. Working status display window
2. Volume adjustment
3. USB/ TF/ FM/ BT selected
4. MP3 Previous song/FM previous frequency
5. MP3 pause/play
6. MP3 next song/FM next frequency
7. EQ input display
8. USB/TF cord connector
9. Treble adjustment
10. Bass adjustment
11. Mic volume adjustment
12. Mic echo adjustment
13. Electricity supply AC 115~230V,60/50Hz
14. AUX input select
15. MIC priority
16. MIC input / Guitar input
17. Charge indicator light(Red:charging/Green:full)
18. Power on/off
19. LED light ON/OFF

USB & SD Slot

USB FUNCTION:

- Insert the USB flash into the USB port of the Sound system
- The unit should detect the USB automatically and play the first track
- If in the case the USB does not start automatic playback, press the Input button (8) and select USB mode.
- If you wish to pause the music, simply press the pause button (5)
- To select the next track, simply press the "Next" button (6)
- To select the previous track, simply press the "Previous" button (4)
- While listening to the tracks, adjust the EQ setting as per your desire.

Note:

1. Make sure the music files are MP3, WMA format or else the music system will not be able to read the files.
2. Make sure the music files are recorded to the root directory.
3. It is advisable to remove unnecessary files for faster reading of the content.

TF FUNCTION:


- Make sure your TF card is formatted as FAT32.
- Insert the TF card into the TF slot of the Sound system
- The unit should detect the TF card automatically and play the first track
- If in the case the TF card does not start automatic playback, press the Input button (8) and select TF mode.
- If you wish to pause the music, simply press the pause button (5)
- To select the next track, simply press the "Next" button (6)
- To select the previous track, simply press the "Previous" button (4)
- While listening to the tracks, adjust the EQ setting as per your desire.

FM Radio function

- Press the "INPUT" button (8) to switch to FM mode.
- Press the "Pause/Play" button to start the automatic search of the stations.
- The unit will start to search all the main stations and will store them automatically.
- Once the scan search has finalized, press the "NEXT" (6) or "PREVIOUS" (4) buttons to access to the stored channels.

Note: The FM stations can only be stored automatically. The position of the channel store number will start from the lowest FM frequency to the highest.

REMOTE CONTROL FUNCTIONS

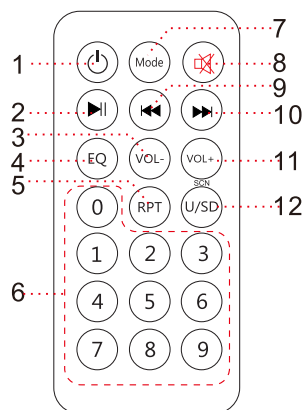

- 1.Standby
- 2.MP3 pause or play/FM auto scan frequency
- 3.To decrease sound volume of main channel
- 4.EQ mode
- 5.Repeat play
- 6.Song selected 0-9
- 7.AUX/USB/TF/FM/BT input selected
- 8.Mute
- 9.MP3 last song / FM last frequency
- 10.MP3 next song/FM next frequency
- 11.To increase sound volume of main channel
- 12.USB/TF switch

WIRED USING



Wired microphone using

After use,please turn off the power switch.

REAR CONNECTION

Try the troubleshooting steps below if you are having problems while using your speaker. If problems still exist, please look for a qualified technician or contact our company. To prevent electric shock or expand the scope of the malfunction, do not repair by yourself.

Symptom	Possible problem	Solution
No function light & No sound	1.Plug is not well connected	Insert the plug into electrical outlet
	2.Speaker power button is not turned on	Turn on the button
Function light on but no sound	1.Cable misconnected	Turn off the power,check the input jack to ensure proper audio signal is connected to relevant input jack
	2.Speaker are not connected or misconnected	Power off ,then check and confirm the cable connection again
	3.Audio signal is not transmitted to speaker	Check all the speaker if there is audio signal output
Remote control does not work	1.Before you press any function button,first select the correct source with the remote control instead of the main unit	
	2.Reduce the distance between the remote control and the unit	
	3.Insert the battery with its polarities(+/-signs) aligned as indicated	
	4.Replace the battery	
	5.Aim the remote control directly at the sensor on the front of the unit	
If the problem exists after checking related procedures above , please refer to the appointed service agent or professional technician to fix it.Do not attempt to open the cover, otherwise we assumes no responsibility.		

Limited Warranty

This Limited Product Warranty is Provide by BriteLite Enterprises. BriteLite warrants to Customer that the product is free from defects in the materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then BriteLite or its authorized service will either repair or replace any nonconforming product, provide that Customer gives notice of noncompliance within the Warranty Period to BriteLite by emailing service@britelite.net or calling 310-363-7110(Mexico customers can call 0155 4624 0251). Please retain the original dated receipt as evidence of proof of purchase.