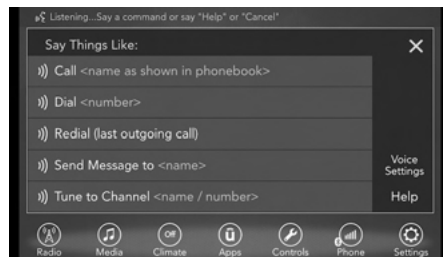


NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - a. Increase the separation between the equipment and receiver.
 - b. Consult an authorized dealer or an experienced radio technician for help.

Uconnect VOICE RECOGNITION QUICK TIPS**Introducing Uconnect**

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect system.

**Uconnect 4****Uconnect 4C/4C NAV****NOTE:**

If you see the NAV icon on the bottom bar, or in the Apps menus, of your touchscreen, you have the Uconnect 4C NAV system. If not, you have a Uconnect 4C system.

Get Started

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

Helpful hints for using Voice Recognition:

- Visit UconnectPhone.com to check mobile device and feature compatibility and to find phone pairing instructions.
- Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
- Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.
- Each time you give a Voice Command, you must first push either the Voice Recognition (VR) or Phone button, wait until after the beep, then say your Voice Command.

- You can interrupt the help message or system prompts by pushing the VR or Phone button and saying a Voice Command from the current category.



Uconnect Voice Command Buttons

- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
- 2 — For All Radios: Push To Begin Radio, Media, Or Climate Functions. For Uconnect 4C NAV System Only: Push To Begin Navigation Function
- 3 — Push To End Call

Basic Voice Commands

The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button . After the beep, say:

- **“Cancel”** to stop a current voice session
- **“Help”** to hear a list of suggested Voice Commands
- **“Repeat”** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system’s status. Cues appear on the touchscreen.

Radio

Use your voice to quickly get to the AM, FM, or SiriusXM® Satellite Radio stations you would like to hear. (Subscription or included SiriusXM® Satellite Radio trial required.)

Push the VR button . After the beep, say:

- “**Tune to** ninety-five-point-five FM”
- “**Tune to Satellite Channel** Hits 1”

TIP:

At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  and say, “**Help.**” The system provides you with a list of commands.

Media

Uconnect offers connections via USB, Bluetooth® and auxiliary ports (if equipped). Voice operation is only available for connected USB and AUX devices.

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- “**Change source to** Bluetooth®”
- “**Change source to** AUX”
- “**Change source to** USB”
- “**Play artist** Beethoven”; “**Play album** Greatest Hits”; “**Play song** Moonlight Sonata”; “**Play genre** Classical”

TIP:

Press the Browse button on the touchscreen to see all of the music on your USB device. Your Voice Command must match exactly how the artist, album, song, and genre information is displayed.

Phone

Making and answering hands-free phone calls is easy with Uconnect. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check UconnectPhone.com for mobile phone compatibility and pairing instructions.

Push the Phone button . After the beep, say one of the following commands:

- “**Call** John Smith”
- “**Dial** 123-456-7890 and follow the system prompts”
- “**Redial** (call previous outgoing phone number)”
- “**Call back** (call previous incoming phone number)”

TIP:

When providing a Voice Command, push the Phone button  and say “**Call,**” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call** John Smith **work.**”

Voice Text Reply

Uconnect announces **incoming** text messages. Push the Phone button  and say “**Listen.**” (Must have compatible mobile phone paired to Uconnect system.)

- Once an incoming text message is read to you, push the Phone button . After the beep, say: “**Reply.**”
- Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Yes.	Stuck in traffic.	See you later.
No.	Start without me.	I'll be late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	
I'm lost.		Thanks.

TIP:

Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit UconnectPhone.com.

Apple® iPhone® iOS 6 or later supports reading **incoming** text messages only.

TIP:

Voice Text Reply is not compatible with iPhone®, but if your vehicle is equipped with Siri® Eyes Free, you can use your voice to send a text message.

Climate

Adjust vehicle temperatures hands-free and keep everyone comfortable while you keep moving ahead. (If vehicle is equipped with climate control.)

Push the VR button . After the beep, say one of the following commands:

- “**Set driver temperature to 70 degrees**”
- “**Set passenger temperature to 70 degrees**”

TIP:

Voice Command for Climate may only be used to adjust the interior temperature of your vehicle. Voice Command will not work to adjust the heated seats or steering wheel if equipped.

Navigation (4C NAV)

The Uconnect navigation feature helps you save time and become more productive when you know exactly how to get to where you want to go.

1. To enter a destination, push the VR button . After the beep, say: “**Find address** 800 Chrysler Drive Auburn Hills, Michigan.”
2. Then follow the system prompts.

TIP:

To start a POI search, push the VR button . After the beep, say: “**Find nearest** coffee shop.”

Siri® Eyes Free — If Equipped

Siri lets you use your voice to send text messages, select media, place phone calls and much more. Siri uses your natural language to understand what you mean and responds back to confirm your requests. The system is designed to keep your eyes on the road and your hands on the wheel by letting Siri help you perform useful tasks.

To enable Siri, push and hold, then release the Uconnect Voice Recognition (VR) button on the steering wheel. After you hear a double beep you can ask Siri to play podcasts and music, get directions, read text messages and many other useful requests.

Using Do Not Disturb

With Do Not Disturb, you can disable notifications from incoming calls and texts, allowing you to keep your eyes on the road and hands on the wheel. For your convenience, there is a counter display to keep track of your missed calls and text messages while you were using Do Not Disturb.

Do Not Disturb can automatically reply with a text message, a call or both, when declining an incoming call and send it to voicemail.

Automatic reply messages can be:

- “I am driving right now, I will get back to you shortly.”
- Create a custom auto reply message up to 160 characters.

While in Do Not Disturb, Conference Call can be selected so you can still place a second call without being interrupted by incoming calls.

NOTE:

- Only the beginning of your custom message will be seen on the touchscreen.
- Reply with text message is not compatible with iPhones®.
- Auto reply with text message is only available on phones that supporting Bluetooth® MAP.

Android Auto™ — If Equipped

NOTE:

Feature availability depends on your carrier and mobile phone manufacturer. Some Android Auto™ features may or may not be available in every region and/or language.

Android Auto™ allows you to use your voice to interact with Android's™ best-in-class speech technology through your vehicle's voice recognition system, and use your smartphone's data plan to project your Android™ powered smartphone and a number of its apps onto your Uconnect touchscreen. Connect your Android™ 5.0 (Lollipop), or higher, to one of the

media USB ports, using the factory-provided USB cable, and press the new Android Auto™ icon that replaces your “Phone” icon on the main menu bar to begin Android Auto™. Push and hold the VR button on the steering wheel, or press and hold the “Microphone” icon within Android Auto™, to activate Android’s™ VR, which recognizes natural voice commands, to use a list of your smartphone’s features:

- Maps
- Music
- Phone
- Text Messages
- Additional Apps

Refer to your Uconnect Owner’s Manual Supplement for further information.

NOTE:

Requires compatible smartphone running Android™ 5.0 (Lollipop) or higher and download app on Google Play. Android™, Android Auto™, and Google Play are trademarks of Google Inc.

Apple CarPlay® — If Equipped

NOTE:

Feature availability depends on your carrier and mobile phone manufacturer. Some Apple CarPlay® features may or may not be available in every region and/or language.

Apple CarPlay® allows you to use your voice to interact with Siri through your vehicle’s voice recognition system, and use your smartphone’s data plan to project your iPhone® and a number of its apps onto your Uconnect touchscreen. Connect your iPhone® 5, or higher, to one of the media USB ports, using the factory-provided Lightning cable, and press the new Apple CarPlay® icon that replaces your “Phone” icon on the main menu bar to begin Apple CarPlay®. Press and hold the VR button on the steering wheel, or press and hold the “Home” button within Apple CarPlay®, to activate Siri, which recognizes natural voice commands to use a list of your iPhone’s® features:

- Phone
- Music
- Messages

- Maps
- Additional Apps

Refer to your Uconnect Owner’s Manual Supplement for further information.

NOTE:

Requires compatible iPhone®. See dealer for phone compatibility. Data plan rates apply. Vehicle user interface is a product of Apple®. Apple CarPlay® is a trademark of Apple® Inc. iPhone® is a trademark of Apple® Inc., registered in the US and other countries. Apple® terms of use and privacy statements apply.

General Information

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Additional Information

© 2019 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android™ is a trademark of Google Inc. SiriusXM® and all related marks and logos are trademarks of SiriusXM® Radio Inc.

Uconnect System Support:

- US residents visit www.DriveUconnect.com or call: 1-877-855-8400(24 hours a day 7 days a week)
- Canadian residents visit www.DriveUconnect.ca or call: 1-800-465-2001(English) or 1-800-387-9983(French)

SiriusXM Guardian™ services support:

- US residents visit www.siriusxm.com/guardian or call: 1-844-796-4827
- Canadian residents visit www.siriusxm.ca/guardian or call: 1-877-324-9091

CUSTOMER ASSISTANCE

SUGGESTIONS FOR OBTAINING SERVICE FOR YOUR VEHICLE

Prepare For The Appointment

If you are having warranty work done, be sure to have the right papers with you. Take your warranty folder. All work to be performed may not be covered by the warranty. Discuss additional charges with the service manager. Keep a maintenance log of your vehicle's service history. This can often provide a clue to the current problem.

Prepare A List

Make a written list of your vehicle's problems or the specific work you want done. If you've had an accident or work done that is not on your maintenance log, let the service advisor know.

Be Reasonable With Requests

If you list a number of items and you must have your vehicle by the end of the day, discuss the situation with the service advisor and list the items in order of priority. At many authorized dealers, you may obtain a rental vehicle at a minimal daily charge. If you need a rental, it is advisable to make these arrangements when you call for an appointment.

IF YOU NEED ASSISTANCE

The manufacturer and its authorized dealers are vitally interested in your satisfaction. We want you to be happy with our products and services.

Warranty service must be done by an authorized dealer. We strongly recommend that you take the vehicle to an authorized dealer. They know your vehicle the best, and are most concerned that you get prompt and high quality service. The manufacturer's authorized dealers have the facilities, factory-trained technicians, special tools, and the latest information to ensure the vehicle is fixed correctly and in a timely manner.

This is why you should always talk to an authorized dealer service manager first. Most matters can be resolved with this process.

- If for some reason you are still not satisfied, talk to the general manager or owner of the authorized dealer. They want to know if you need assistance.
- If an authorized dealer is unable to resolve the concern, you may contact the manufacturer's customer center.

Any communication to the manufacturer's customer center should include the following information:

- Owner's name and address
- Owner's telephone number (home, mobile, and office)
- Authorized dealer name
- Vehicle Identification Number (VIN)
- Vehicle delivery date and mileage

FCA US LLC Customer Center

P.O. Box 21-8004

Auburn Hills, MI 48321-8004

Phone: (800) 247-9753

FCA Canada Inc. Customer Center

P.O. Box 1621

Windsor, Ontario N9A 4H6

Phone: (800) 465-2001 English / (800) 387-9983 French

In Mexico Contact

Av. Prolongacion Paseo de la Reforma, 1240

Sante Fe C.P. 05109

Mexico, D. F.

In Mexico City: 800-505-1300

Outside Mexico City: +(52)55 50817568

Puerto Rico And US Virgin Islands

FCA Caribbean LLC

P.O. Box 191857

San Juan 00919-1857

Phone: (800) 247-9753

Fax: (787) 782-3345

Customer Assistance For The Hearing Or Speech Impaired (TDD/TTY)

To assist customers who have hearing difficulties, the manufacturer has installed special TDD (Telecommunication Devices for the Deaf) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with the manufacturer by dialing 1-800-380-CHRY.

Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

Service Contract

You may have purchased a service contract for a vehicle to help protect you from the high cost of unexpected repairs after the manufacturer's New Vehicle Limited Warranty expires. The manufacturer stands behind only the manufacturer's service contracts. If you purchased a manufacturer's service contract, you will receive Plan Provisions and an Owner Identification Card in the mail within three weeks of the vehicle delivery date. If you have

any questions about the service contract, call the manufacturer's Service Contract National Customer Hotline at 1-800-521-9922 (Canadian residents, call (800) 465-2001 English / (800) 387-9983 French).

The manufacturer will not stand behind any service contract that is not the manufacturer's service contract. It is not responsible for any service contract other than the manufacturer's service contract. If you purchased a service contract that is not a manufacturer's service contract, and you require service after the manufacturer's New Vehicle Limited Warranty expires, please refer to the contract documents, and contact the person listed in those documents.

We appreciate that you have made a major investment when you purchased the vehicle. An authorized dealer has also made a major investment in facilities, tools, and training to assure that you are absolutely delighted with the ownership experience. You will be pleased with their sincere efforts to resolve any warranty issues or related concerns.

WARNING!

Engine exhaust (internal combustion engines only), some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

WARRANTY INFORMATION

See the Warranty Information for the terms and provisions of FCA US LLC warranties applicable to this vehicle and market.

MOPAR PARTS

Mopar fluids, lubricants, parts, and accessories are available from an authorized dealer. They are recommended for your vehicle in order to help keep the vehicle operating at its best.

REPORTING SAFETY DEFECTS**In The 50 United States And Washington, D.C.**

If you believe that your vehicle has a defect that could cause a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying FCA US LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, an authorized dealer or FCA US LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153); or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/roadsafety/>.

PUBLICATION ORDER FORMS

To order the following manuals, you may use either the website or the phone numbers listed below.

Service Manuals

These comprehensive Service Manuals provide the information that students and professional technicians need in diagnosing/troubleshooting, problem solving, maintaining, servicing, and repairing FCA US LLC vehicles. A complete working knowledge of the vehicle, system, and/or components is written in straightforward language with illustrations, diagrams, and charts.

Diagnostic Procedure Manuals

Diagnostic Procedure Manuals are filled with diagrams, charts and detailed illustrations. These practical manuals make it easy for students and technicians to find and fix problems on computer-controlled vehicle systems and features. They show exactly how to find and correct problems the first time, using step-by-step troubleshooting and drivability procedures, proven diagnostic tests and a complete list of all tools and equipment.

Owner's Manuals

These Owner's Manuals have been prepared with the assistance of service and engineering specialists to acquaint you with specific FCA US LLC vehicles. Included are starting, operating, emergency and maintenance procedures as well as specifications, capabilities and safety tips.

Call toll free at:

- **1-800-890-4038 (US)**
- **1-800-387-1143 (Canada)**

Or

Visit us on the Worldwide Web at:

- www.techauthority.com (US)

INDEX

A

About Your Brakes	383
Adaptive Cruise Control (ACC) (Cruise Control)	236
Adding Engine Coolant (Antifreeze)	357
Additives, Fuel	385
Adjust	
Down	45
Forward	45
Rearward	45
Up	45
Air Bag	184
Air Bag Operation	185
Air Bag Warning Light	183, 186
Driver Knee Air Bag	190
Enhanced Accident Response	194, 339
Event Data Recorder (EDR)	339
Front Air Bag	186
If Deployment Occurs	193
Knee Impact Bolsters	190
Maintaining Your Air Bag System	195
Maintenance	195
Redundant Air Bag Warning Light	183
Side Air Bags	190
Transporting Pets	213
Air Bag Light	141, 183, 214
Air Cleaner, Engine (Engine Air Cleaner Filter)	348
Air Conditioner Maintenance	349
Air Conditioner Refrigerant	349, 350
Air Conditioner System	349
Air Conditioning Filter	93, 350
Air Conditioning, Operating Tips	92
Air Filter	348
Air Pressure	
Tires	369
Alarm	
Arm The System	22
Disarm The System	22
Security Alarm	143
Alterations/Modifications	
Vehicle	10
Android Auto	490
Antifreeze (Engine Coolant)	357, 387
Disposal	358
Anti-Lock Brake System (ABS)	152
Anti-Lock Warning Light	144
Apple CarPlay	491
Ashtray	121
Assist, Hill Start	157
Audio Jack	461
Audio Settings	439

Audio Systems (Radio)	391
Automatic Dimming Mirror	57
Automatic Headlights	62
Automatic Temperature Control (ATC)	92
Automatic Transaxle	225
Automatic Transmission	226
Adding Fluid	361, 390
Fluid And Filter Change	361
Fluid Change	361
Fluid Level Check	360, 361
Fluid Type	360, 390
Special Additives	360
AUX Cord	461
Aux Mode	442
Auxiliary Electrical Outlet (Power Outlet)	119
Axle Lubrication	390

B

Back-Up Camera	278
Battery	143, 346
Charging System Light	143
Jump Starting	331
Keyless Key Fob Replacement	14
Battery Saver Feature	63
Belts, Seat	214
Blind Spot Monitoring	159

Bluetooth

Connect Or Disconnect Link Between the Uconnect Phone And Mobile Phone	459
Connecting To A Particular Mobile Phone Or Audio Device After Pairing	454
Bluetooth Mode.....	443
Body Mechanism Lubrication.....	351
B-Pillar Location	366
Brake Assist System	153
Brake Control System, Electronic	153
Brake Fluid.....	390
Brake System	359, 383
Anti-Lock (ABS)	383
Fluid Check.....	359, 390
Master Cylinder	359
Parking	222
Warning Light.....	141
Brake/Transmission Interlock.....	226
Brightness, Interior Lights	64
Bulb Replacement	300, 304
Bulbs, Light	215, 300, 304

C

Camera	278
Camera, Rear	278, 279
Capacities, Fluid	387

Caps, Filler

Fuel.....	282, 333
Oil (Engine).....	344
Radiator (Coolant Pressure).....	358
Car Washes.....	380
Carbon Monoxide Warning.....	213, 386
Cargo	
Vehicle Loading	103
Cargo Area Cover.....	103
Cargo Compartment	
Luggage Carrier	122
Cargo Load Floor	103
Cargo Tie-Downs	103
Cellular Phone	485
Center High Mounted Stop Light	305
Certification Label	283
Chains, Tire	377
Change Oil Indicator	130
Changing A Flat Tire	314, 361
Chart, Tire Sizing	362
Check Engine Light (Malfunction Indicator Light).....	151
Checking Your Vehicle For Safety	213
Checks, Safety	213
Child Restraint	196

Child Restraints

Booster Seats	199
Center Seat LATCH.....	205
Child Seat Installation.....	207, 209
How To Stow An unused ALR Seat Belt ...	206
Infant And Child Restraints	198
Lower Anchors And Tethers For Children	201
Older Children And Child Restraints	199
Seating Positions.....	200
Using The Top Tether Anchorage	211
Cigar Lighter	121
Clean Air Gasoline	384
Cleaning	
Wheels.....	376
Climate Control	68
Automatic	80
Manual	68
Rear	77, 89
Coat Hook	118
Cold Weather Operation.....	220
Compact Spare Tire	374
Computer, Trip/Travel	140
Contract, Service.....	494
Cooling Pressure Cap (Radiator Cap)	358

Cooling System	356	Disposal		Engine	344
Adding Coolant (Antifreeze).....	357	Antifreeze (Engine Coolant)	358	Air Cleaner	348
Coolant Level	358	Disturb.....	458, 490	Block Heater	221
Cooling Capacity	387	Door Ajar	142, 143	Break-In Recommendations	222
Disposal Of Used Coolant.....	358	Door Ajar Light	142, 143	Checking Oil Level	345
Drain, Flush, And Refill	357	Driver's Seat Back Tilt	31	Compartment	344
Inspection	356, 358	Driving		Compartment Identification	344
Points To Remember.....	359	Through Flowing, Rising,		Coolant (Antifreeze).....	388
Pressure Cap	358	Or Shallow Standing Water	294	Cooling.....	356
Radiator Cap.....	358	DVD Player (Video Entertainment		Exhaust Gas Caution	213, 386
Selection Of Coolant		System).....	462	Fails To Start	220
(Antifreeze)	357, 387, 388			Flooded, Starting.....	220
Corrosion Protection	380	E		Fuel Requirements	384
Cruise Control (Speed Control)	236	Electric Brake Control System.....	153	Oil	347, 387, 388
Cruise Light	147, 148, 149	Anti-Lock Brake System	152	Oil Filler Cap	344
Customer Assistance	493	Traction Control System.....	158	Oil Filter	348
Cybersecurity.....	391	Electric Parking Brake	222	Oil Selection	347, 387
D		Electric Remote Mirrors	58	Oil Synthetic	347
Daytime Brightness, Interior Lights.....	64	Electronic Speed Control (Cruise Control)	234	Overheating	333
Daytime Running Lights	60	Electronic Stability Control (ESC)	154	Starting.....	216
Dealer Service	346	Electronic Throttle Control Warning Light.....	142	Engine Oil Viscosity	347
Defroster, Windshield	214	Emergency, In Case Of		Engine Oil Viscosity Chart	347
Delay (Intermittent) Wipers	65	Hazard Warning Flasher	296	Enhanced Accident Response	
Diagnostic System, Onboard.....	150	Jacking.....	314, 316, 361	Feature.....	194, 339
Dimmer Switch		Jump Starting	331	Ethanol.....	385
Headlight	60	Overheating.....	333	Exhaust Gas Cautions	213, 386
Dipsticks		Towing	336	Exhaust System	213, 355
Oil (Engine)	345	Emission Control System Maintenance	151	Exterior Lighting.....	60, 304
Disable Vehicle Towing.....	336			Exterior Lights	60, 215, 300, 304

F

Filters	
Air Cleaner.....	348
Air Conditioning	93, 350
Engine Oil.....	348, 388
Engine Oil Disposal	348
Flashers	
Hazard Warning	296
Turn Signals.....	60, 148, 215, 304
Flash-To-Pass	60, 61
Flat Tire Changing.....	314, 361, 374
Flat Tire Stowage	324, 361, 374
Flooded Engine Starting	220
Fluid Capacities.....	387
Fluid Leaks	215
Fluid Level Checks	
Brake	359
Fluid, Brake	390
Fluids And Lubricants	388
Fog Lights	60, 62, 305
Fog Lights, Service	305
Fold In Floor (Stow 'n Go) Seating	39
Fold-Flat Seats	31
Forward Collision Warning.....	164
Freeing A Stuck Vehicle	335
Front Position Light	304

Fuel	384
Additives.....	385
Clean Air	384
Ethanol.....	385
Filler Cap (Gas Cap).....	282
Gasoline	384
Materials Added	385
Methanol	385
Octane Rating.....	384, 388
Requirements	384
Specifications	388
Tank Capacity	387
Fuses	306

G

Garage Door Opener (HomeLink).....	109
Gas Cap (Fuel Filler Cap)	282
Gasoline, (Fuel).....	384
Gasoline, Clean Air.....	384
Gasoline, Reformulated	384
Gear Ranges	227
Glass Cleaning.....	382
Gross Axle Weight Rating.....	285
Gross Vehicle Weight Rating	284
GVWR	283

H

Hazard	
Driving Through Flowing, Rising, Or Shallow Standing Water	294
Hazard Warning Flashers	296
Head Restraints.....	52
Headlights	60
Bulb Replacement	303
Cleaning	380
High Beam/Low Beam Select Switch	60
Lights On Reminder.....	60, 62
Passing	60, 61
Replacing	303
Switch.....	60
Time Delay	60
Washers.....	62
Heated Mirrors	57, 58
Heater, Engine Block.....	221
Hill Start Assist	157
Hitches	
Trailer Towing	286
HomeLink (Garage Door Opener)	109
Hood Prop	98
Hood Release.....	98
Hook, Coat	118

I			
Ignition	16	Key Fob Battery Service	
Switch	16	(Remote Keyless Entry)	14
In Vehicle Help		Key Fob Programming	
Vehicle User Guide	11	(Remote Keyless Entry)	15
Inside Rearview Mirror	57, 296	Keys	12
Instrument Cluster	127	Replacement	21
Descriptions	148	L	
Display	128	Lane Change And Turn Signals	60
Menu Items	133	Lane Change Assist	60, 63
Instrument Panel Lens Cleaning	382	LaneSense	275
Interior And Instrument Lights	63	Lap/Shoulder Belts	173
Interior Appearance Care	381	Latches	215
Interior Lights	63	Hood	98
Intermittent Wipers (Delay Wipers)	65	Lead Free Gasoline	384
Inverter		Leaks, Fluid	215
Power	120	Life Of Tires	372
iPod/USB/MP3 Control	441	Liftgate	99
J		Power	100
Jack Location	314	Light Bulbs	215, 304
Jack Operation	314, 361	Lighter	
Jump Starting	331	Cigar	121
K		Lights	215
Key Fob	12	Air Bag	141, 183, 214
Arm The System	22	Battery Saver	63
Disarm The Alarm	22	Brake Assist Warning	156
Programming Additional Key Fobs	15, 21	Brake Warning	141
		Bulb Replacement	300, 304
		Center Mounted Stop	305
		Cruise	147, 148, 149
		Daytime Running	60
		Dimmer Switch, Headlight	60
		Engine Temperature Warning	142
		Exterior	215, 304
		Fog	62, 305
		Headlights	60, 62, 303
		High Beam/Low Beam Select	60
		Instrument Cluster	60
		Intensity Control	64
		Interior	63
		Lights On Reminder	60, 62
		Malfunction Indicator (Check Engine)	145
		Parade Mode (Daytime Brightness)	64
		Park	148
		Passing	60, 61
		Reading	63
		Seat Belt Reminder	143
		Security Alarm	143
		Service	300
		Side Marker	304
		SmartBeams	61
		Traction Control	156
		Turn Signals	60, 148, 215, 304
		Warning Instrument Cluster	
		Descriptions	142, 148
		Load Floor, Cargo	103
		Load Shed Battery Saver Mode	138
		Load Shed Battery Saver On	138
		Load Shed Electrical Load Reduction	138
		Load Shed Intelligent Battery Sensor	138

Loading Vehicle	103, 283
Tires	366
Low Tire Pressure System	167
Lubrication, Body	351
Lug Nuts	383
Luggage Carrier	122

M

Maintenance Free Battery	346
Maintenance Schedule	340
Malfunction Indicator Light (Check Engine)	145, 151
Manual	
Park Release	334
Service	496
Map/Reading Lights	63
Marker Lights, Side	304
Media Hub	461
Memory Feature (Memory Seats)	31
Memory Seat	31, 58
Memory Seats And Radio	31
Methanol	385
Mini-Trip Computer	140
Mirrors	57
Automatic Dimming	57
Electric Remote	58
Exterior Folding	58
Heated	57, 58
Outside	57

Rearview	57, 296
Vanity	60
Modifications/Alterations	
Vehicle	10
Monitor, Tire Pressure System	167
Mopar Parts	495
MP3 Control	461
Multi-Function Control Lever	60

N

New Vehicle Break-In Period	222
-----------------------------------	-----

O

Occupant Restraints	171
Octane Rating, Gasoline (Fuel)	384, 388
Oil Change Indicator	130
Reset	130
Oil Filter, Change	348
Oil Filter, Selection	348
Oil Pressure Light	144
Oil, Engine	347, 388
Capacity	387
Change Interval	347
Checking	345
Disposal	348
Filter	348, 388
Filter Disposal	348
Identification Logo	347
Materials Added To	347

Pressure Warning Light	144
Recommendation	347, 387
Synthetic	347
Viscosity	347, 387
Onboard Diagnostic System	150
Operating Precautions	150
Operator Manual	
Owner's Manual	9, 496
Outside Rearview Mirrors	57
Overheating, Engine	333
Owner's Manual (Operator Manual)	9

P

Paint Care	380
Parking Brake	222
ParkSense System, Rear	250, 256
Pets	213
Placard, Tire And Loading Information	366
Power	
Brakes	383
Inverter	120
Mirrors	58
Outlet (Auxiliary Electrical Outlet)	119
Seats	45, 46
Steering	231
Power Seats	
Down	45
Forward	45
Rearward	45
Up	45

Power Sliding Door	
On / Off Switch	28, 100
Pregnant Women And Seat Belts	179
Preparation For Jacking.....	315
Pretensioners	
Seat Belts	180

R

Radial Ply Tires.....	371
Radiator Cap (Coolant Pressure Cap).....	358
Radio	
Presets	435
Radio Operation	434, 485
Rear Air Conditioning.....	77, 89
Rear Camera	279
Rear Cross Path	162
Rear ParkSense System	250, 256
Rear Seat Removal	33
Rear View	57
Reclining Front Seats.....	32
Recreational Towing	293
Reformulated Gasoline	384
Refrigerant.....	350
Release, Hood	98
Reminder, Lights On	60
Reminder, Seat Belt	172
Remote Control	
Starting System	18

Remote Keyless Entry	
Arm The Alarm	22
Disarm The Alarm	22
Programming Additional Key Fobs.....	15, 21
Remote Starting	
Exit Remote Start Mode.....	19
Uconnect Customer Programmable	
Features	20
Uconnect Settings.....	20
Remote Starting System.....	18
Replacement Bulbs.....	300
Replacement Keys.....	21
Replacement Tires.....	372
Reporting Safety Defects	495
Restraints, Child	196
Restraints, Head	52
Roof Luggage Rack	122
Rotation, Tires	377

S

Safety Checks Inside Vehicle	214
Safety Checks Outside Vehicle	215
Safety Defects, Reporting	495
Safety Information, Tire.....	361
Safety Tips	213
Safety, Exhaust Gas	213
Schedule, Maintenance	340
Seat Belt Reminder.....	143

Seat Belts	172, 214
Adjustable Shoulder Belt	176
Adjustable Upper Shoulder Anchorage	176
Adjustable Upper Shoulder Belt	
Anchorage.....	176
Automatic Locking Retractor (ALR).....	180
Child Restraints.....	196
Energy Management Feature	180
Extender.....	179
Front Seat.....	172, 173, 175
Inspection.....	214
Lap/Shoulder Belt Operation	175
Lap/Shoulder Belt Untwisting	176
Lap/Shoulder Belts	173
Operating Instructions	175
Pregnant Women.....	179
Pretensioners	180
Rear Seat	173
Reminder	172
Seat Belt Extender.....	179
Seat Belt Pretensioner	180
Untwisting Procedure	176
Seat Belts Maintenance.....	381
Seats	31, 45, 50
Adjustment	31, 32, 33, 45
Bench	33
Heated	50
Power	45, 46

Rear Folding	31	Snow Chains (Tire Chains)	377	Stow 'n Vac.....	103
Reclining	32	Snow Tires	374	Stuck, Freeing	335
Seatback Release	31, 33	Spare Tire Changing.....	314	Sun Roof.....	96
Stow 'n Go (Fold in Floor)	39	Spare Tire Stowage.....	324	Sunglasses Storage	121
Tilting	31, 33	Spare Tires	314, 374, 375	Supplemental Restraint System - Air Bag ...	184
Security Alarm.....	143	Spark Plugs.....	388	Sway Control, Trailer	158
Arm The System.....	22	Specifications		Synthetic Engine Oil.....	347
Disarm The System.....	22	Oil	388	System, Remote Starting	18
Selection Of Coolant (Antifreeze)	388	Speed Control			
Sentry Key		Accel/Decel (ACC Only).....	240	T	
Key Programming.....	21	Cancel.....	236	Telescoping Steering Column	56
Sentry Key (Immobilizer).....	20	Resume.....	236	Temperature Control, Automatic (ATC).....	92
Sentry Key Replacement	21	Speed Control (Cruise Control).....	234, 236	Tie Down Hooks, Cargo.....	103
Service Assistance	493	Starting.....	18, 216	Tilt Steering Column	56
Service Contract.....	494	Button.....	16	Time Delay	
Service Manuals.....	496	Cold Weather	220	Headlight.....	60
Shifting		Engine Fails To Start	220	Tire And Loading Information Placard.....	366
Automatic Transmission.....	226	Remote	18	Tire Markings	361
Shoulder Belts	173	Starting And Operating.....	216	Tire Safety Information	361
Side View Mirror Adjustment.....	57	Starting Procedures	216	Tire Service Kit	324
Signals, Turn	60, 148, 215, 304	Steering	231	Tire Stowage	324
Siri	490	Tilt Column.....	56	Tires	215, 369, 374, 378
Sirius Satellite Radio	436	Wheel, Heated	56	Aging (Life Of Tires)	372
Favorites.....	437	Wheel, Tilt	56	Air Pressure	369
Replay	437	Steering Wheel Audio Controls.....	461	Chains	377
SiriusXM Satellite Radio		Steering Wheel Mounted Sound		Changing.....	314, 361
Browse in SXM	438	System Controls	461	Compact Spare	374
Favorites.....	437	Storage, Vehicle	92	General Information	369, 374
Replay	437	Store Radio Presets	435	High Speed	370
SmartBeams	61	Stow 'n Go (Fold In Floor) Seats	39	Inflation Pressure	369

Jacking	314, 316, 361	Towing Behind A Motorhome	293	U
Life Of Tires	372	Traction	294	Uconnect
Load Capacity	366	Traction Control	158	Advanced Phone Connectivity
Pressure Monitoring		Trailer Sway Control (TSC)	158	Phone Call Features
System (TPMS)	133, 146, 167	Trailer Towing	284	Theater
Quality Grading	378	Cooling System Tips	292	Things You Should Know About Your
Radial	371	Hitches	286	Uconnect Phone
Replacement	372	Minimum Requirements	289	Uconnect Settings
Rotation	377	Tips	292	Uconnect 4 With 7-Inch Display
Safety	361, 369	Trailer And Tongue Weight	289	Uconnect 4C/4C Nav With 8.4-Inch Display
Sizes	362	Wiring	291	Uconnect Phone
Snow Tires	374	Trailer Towing Guide	286	Answer Or Ignore An Incoming Call –
Spare Tires	314, 374, 375	Trailer Weight	286	Call Currently In Progress
Spinning	371	Transaxle		Answer Or Ignore An Incoming Call –
Trailer Towing	290	Automatic	225	No Call Currently In Progress
Tread Wear Indicators	372	Operation	225	Bluetooth Communication Link
Wheel Nut Torque	383	Transmission	226	Call By Saying A Phonebook Name
To Open Hood	98	Automatic	226, 360	Call Continuation
Tongue Weight/Trailer Weight	289	Maintenance	360	Call Controls
Towing	284	Transporting Pets	213	Call Termination
Disabled Vehicle	336	Tread Wear Indicators	372	Cancel Command
Guide	286	Turn Signals	60, 148, 304	Connect Or Disconnect Link Between
Recreational	293			The Uconnect Phone And
Weight	286			Mobile Phone

Connecting To A Particular

Mobile Phone Or Audio Device	
After Pairing	454
Deleting A Phone Or Audio Device	455
Dial By Saying A Number	456
Disconnecting A Phone Or Audio	
Device	455
Far End Audio Performance	460
Help Command	452
Join Calls	458
Making A Phone Or Audio Device	
A Favorite	455
Making A Second Call While Current	
Call Is In Progress	458
Managing Your Favorites	456
Natural Speech	452
Operation	451
Pair (Link) Uconnect Phone To A	
Mobile Phone	452
Pair A Bluetooth Streaming Audio Device	454
Pair Additional Mobile Phones	453
Phonebook Download	455
Place/Retrieve A Call From Hold	458
Power-Up	460
Recent Calls	457
Redial	458
To Remove A Favorite	456
Toggling Between Calls	458
Touch-Tone Number Entry	457

Transfer Call To And From Mobile

Phone	459
Voice Command	459
Ways To Initiate A Phone Call	456
Uconnect Settings	
Customer Programmable Features	20
Uconnect Voice Command	486
Umbrella Holder	115
Uniform Tire Quality Grades	378
Universal Garage Door Opener (HomeLink) ..	109
Universal Transmitter	109
Unleaded Gasoline	384
Untwisting Procedure, Seat Belt	176
USB	461

V

Vacuum	103
Stow 'n Vac	103
Vanity Mirrors	60
Vehicle Identification Number (VIN)	383
Vehicle Loading	283, 366
Vehicle Modifications/Alterations	10
Vehicle Storage	92
Vehicle User Guide	
In Vehicle Help	11
Navigation	11
Operating Instructions	11
Searching User Guide	11
Viscosity, Engine Oil	347
Voice Recognition System (VR)	486

W

Warning Lights (Instrument	
Cluster Descriptions)	144
Warnings And Cautions	10
Warranty Information	495
Washers, Windshield	345
Washing Vehicle	380
Water	
Driving Through	294
Wheel And Wheel Tire Care	376
Wheel And Wheel Tire Trim	376
Wind Buffeting	97
Window Fogging	93
Windshield Defroster	214
Windshield Washers	65, 345
Fluid	345
Windshield Wiper Blades	351
Wipers Blade Replacement	351
Wipers, Intermittent	65
Wrecker Towing	336







Whether it's providing information about specific product features, taking a tour through your vehicle's heritage, knowing what steps to take following an accident or scheduling your next appointment, we know you'll find the app an important extension of your Chrysler brand vehicle.

Simply download the app, select your make and model and enjoy the ride. To get this app, go directly to the App Store® or Google Play® Store and enter the search keyword "Chrysler" (U.S. residents only).

U. S.



mopar.com/om

DOWNLOAD A FREE ELECTRONIC COPY OF THE MOST UP-TO-DATE
OWNER'S MANUAL, UCONNECT AND WARRANTY BOOKLETS

Canada



owners.mopar.ca

©2019 FCA US LLC. All Rights Reserved. Chrysler is a registered trademark of FCA US LLC or FCA Canada Inc., used under license. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.