

Portable multi-function speaker

BEST SOUND
USER GUIDE

MODEL : OHS26-BST001

* To customers:

Respectable users

- Thank you for your support and trust on purchasing the products of our company.To fully exert the function of the product,we suggest you to read the operating instruction carefully before using it,for the convenience of grasping the connection method and using points.Please take care of the operating instruction after reading it for the purpose of further reference.
- This manual and product parameters are updated and updated from time to time. Subject to change without prior notice, please refer to the actual product.



Please read the instruction manual carefully before using our products and keep them in a safe place for future reference.

Function Description

VOLUME POWER		1.Power switch, total volume adjustment
DC 5V CHARGING		2.The DC 5V power input
AUX		3.Audio input
USB		4.USB input
Micro SD		5.Micro SD input
ECHO		6.Echo adjustment
MIC.VOL		7.Microphone volume adjustment
MIC.IN		8.Microphone input
CH-		9.Previous Song (FM: Previous Station)
SCAN / TWS		10.Play/Pause (FM:Search for radio stations)
CH+		11.Next Song (FM:Next station)
MODE LED.SW		12.Mode selection (short press USB, Micro SD, BT, FM & AUX; long press LED off / on)
CHARGE LIGHT		13.The charging light is on, the full light is off
LED DISPLAY		14.LED display; Remote control receiving window
		15.Mode selection (switch USB, Micro SD, BT, FM&AUX) 16.Standby 17.Play/Pause 18.Equalizer 19.Repeat play 20.Number Selection (0-9) 21. Single press light mode Long press light switch 22. Volume up/Volume down 23.Next/Previous 24.Mute

TWS FUNCTION

1. Turn on two devices of the same model and switch the two devices to TWS mode.The distance between the two devices is less than 50CM.
2. The first time you use the TWS connection, you can select any device as the host and the other as the slave.Press and hold the "Pause /Play" button for 3 seconds, and the USB display flashes to indicate that TWS is connected.
3. Until you hear a"beep" sound, the devices are connected to each other.
4. Turn on the TWS on your device and connect to the **OHS26-BST001**.The next two speakers will automatically connect to each other.
5. Disconnect TWS: Press and hold the "Pause /Play" button for 3 seconds. Once you hear a beep, the TWS function will be disconnected.
6. In the future use, each time the TWS connection is used, the device connected to the first time is used as the host (the slave can disconnect the TWS and cannot connect to the TWS), and the connection to the TWS must be completed in the host.

Important safety instructions

- Non-professionals and service organizations should not attempt to repair or modify the unit. Do not take the cover. Do not touch the internal parts, it is dangerous! Otherwise, it will cause serious malfunction. For help or repair, please contact your dealer for professional assistance.
- Please charge the battery when it is used up; if it is not used for a long time, please charge the machine once every 30 days; to avoid the battery storage capacity is reduced or damage the machine for a long time.

For COMMUNICATION TERMINAL:

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by

may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a Minimum distance of 20cm between the radiator and any part of your body.