

Quick Installation Guide

WiFi 6 AX1800 USB Wireless Adapter

1. Insert the included CD into the CD-ROM, and find the file RTL8832AU. Or you can download appropriate driver from EDUP website.

DVD RW Drive (E:) RTL8832AU

0 bytes free of 51.6 MB

CDFS

2. Plug the wifi adapter into your computer, open the driver folder and double click "Setup".

Install

logo

Setup

setup.iss

Uninstall

Wireless LAN Driver - InstallShield Wizard

Wireless LAN Driver Setup is preparing the InstallShield Wizard, which will guide you through the program setup process. Please wait.

Preparing to Install...

Cancel

3. It may take about 1 minute to complete installation, wait for the

Realtek USB Wireless LAN Driver

Setup Status

The InstallShield Wizard is installing Realtek USB Wireless LAN Driver

C:\Windows\64\USB.exe

Now installing Cisco EAP

Cancel

4. Choose "No, I will restart my computer later" to finish the process.

Realtek USB Wireless LAN Driver

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed Wireless LAN Driver. Before you can use the program, you must restart your computer.

☐ Yes, I want to restart my computer now.

☒ No, I will restart my computer later.

Remove any disks from their drives, and then click Finish to complete setup.

< Back

Finish

Cancel

01. Open the Internet icon  at the lower right corner of the computer.

02. Searching and connecting the Wi-Fi you preferred on the detected Wi-Fi list.

03. Enter the Wi-Fi password to connect.

4399 Secured

4399-5g Secured

✓ Connect automatically

Connect

04. Finally you are connected to the Wi-Fi.

4399-5g Secured

Enter the network security key

.....

Next

Cancel

4399-5g Connected, secured

Properties

Disconnect

This product needs to be installed on a fixed host, and the distance from the antenna to the human body needs to be greater than 20cm



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.