 




EVERYBODY
HIT ROBOT GROUP

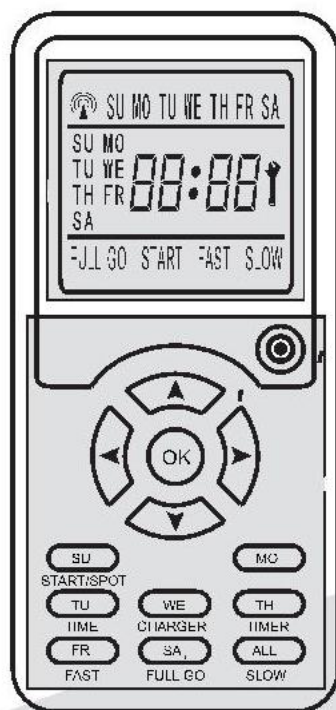

 
Thank you for purchasing the product.

Please read the manual carefully before use.

www.hitrobotgroup.com



A0

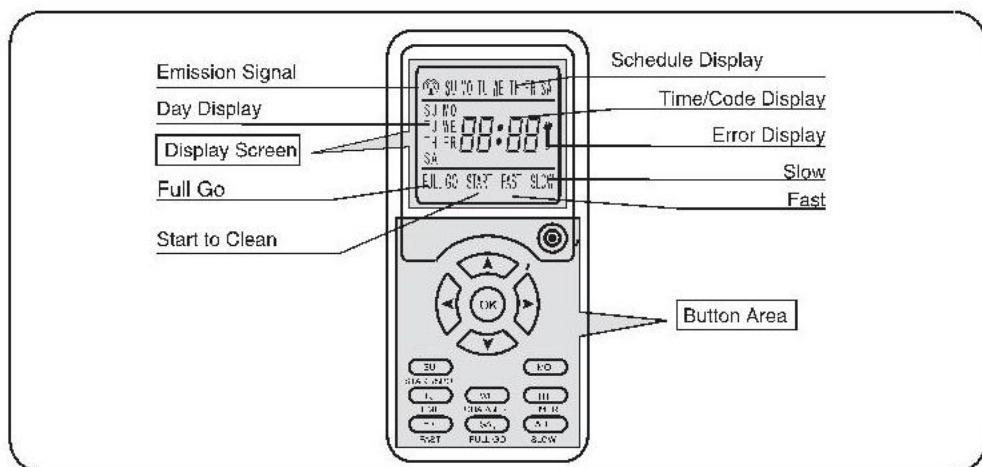


	Power button	MO	Monday
OK	Enter button	TU TIME	Time setting button/Tuesday
▲	Forward button	WE CHARGING	Self-recharging button/Wednesday
▼	Backward button	TH TIMER	Schedule setting button/Thursday
◀	Left button	FR FAST	Fast cleaning button/Friday
▶	Right button	SA FULL GO	Automatic cleaning button/Saturday
SU START/STOP	Start or stop cleaning/Sunday	ALL SLOW	Slow cleaning button/whole week

Note: If the remote control doesn't work, please check the battery power. If you cannot operate the remote control with enough power, please redo code match.

Steps to match code: Firstly check whether the cleaner and remote control has enough power, then operate the cleaner according to the following steps:

 - Turn off the cleaner;
- Hold the button "OK" ;
- Turn on the cleaner;
- After hearing the sound "di di", release the button "OK", the operation of code match is successful.

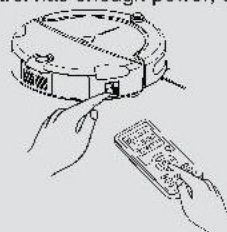

Tips: if you do not hear the sound "di di", it means that the operation of code match is wrong, please do it again.

Warm tips:

- When using remote control to control cleaner, it should be within 7m of the scope of wireless signal, otherwise control may fail.
- When pressing self-recharging button, search may fail due to complicated obstacles or out of power.

Instructions :

Function	Function information
Start/stop	When cleaner in standby mode or in operation, press " ^{SU} START/STOP " button, cleaner enters into automatic cleaning mode; cleaner operates at set speed. Press again to stop.
Day, time setting	1. Turn on cleaner switch. 2. Press remote control " ^{1U} TIME " button; press ► button, hour icon 88 will blink on display screen; press remote control ▲ or ▼ button to choose time. 3. Press remote control ◀ or ► button, minute :88 will blink, press ▲ or ▼ to choose minute. 4. Press remote control ◀ or ► button to enter day setting. 5. Day can be set directly by pressing button " SUN ", " MON ", or " SAT " . 6. After setting, press remote control " OK " button. Remark: pressing Power button can cancel the setting.
Day, time schedule setting	1. Turn on cleaner switch. 2. Press remote control " TH TIVER " button, icon " SU MO TU WE TH FR SA " will display and enter into day schedule setting. 3. Schedule several days or one day for cleaning, directly press needed day button, corresponding day icon will display on the display screen. 4. Press remote control ◀ or ► button, hour appointment 88 will blink; then press ▲ or ▼ button to choose hour. 5. Press remote control ◀ or ► button, minute appointment :88 will blink; then press ▲ or ▼ button to choose minute. 6. After finishing day or hour setting, press " OK " button to preserve the setting and quit. Remark: pressing Power button can cancel the setting.
Error display 	Within remote control signal scope, when cleaner has something wrong, press " ^{SA} FULL CO " button, display screen will display cleaner error code.
Speed selection	Press remote control " ^{FR} LAST " button to choose fast operation, display screen will display icon " FAST " . Press remote control " ^{AL} SLOW " button to choose slow operation, display screen will display icon " SLOW " . Remark: when shut down, fast-slow speed will choose automatic memory.
Shutdown/Cancel/Stop 	1. When cleaner is on and display screen displays function normally, press this button will shut down or stop cleaner. 2. In operation mode, press this button can stop any operation mode. 3. In schedule setting, week and time, if you set mistakenly or want to stop the setting, press this button to cancel the setting and return the original setting.
Enter button	1. After setting current time, press " OK " button to preserve the setting and quit. 2. After setting appointment time, press " OK " button to preserve the setting and quit.
FULL GO	Press remote control " ^{SA} FULL CO " button, display screen will display icon " FULL GO " ; after cleaner battery is full, automatic cleaning mode will repeat.
Self-recharging button	When cleaner is in standby or operation mode, press this button, cleaner will search for charging dock to charge automatically, press this button again to stop self-recharging.
Forward button 	Press Forward button, cleaner clean forwards according to arrow; press Shutdown button to stop cleaning forwards; when encountering obstacles, cleaner will stop cleaning forwards automatically.
Backward button 	Press Backward button, cleaner clean backwards according to arrow; release the button to stop cleaner.
Left button 	Hold Left button, cleaner will rotate counter clockwise; release the button, cleaner will stop rotating and operate forwards; press Shutdown button to stop cleaner; when encountering obstacles, cleaner will stop cleaning forwards automatically.
Right button 	Hold Right button, cleaner will rotate clockwise; release the button, cleaner will stop rotating and operate forwards; press Shutdown button to stop cleaner; when encountering obstacles, cleaner will stop cleaning forwards automatically.

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.