


SMVMBL1

GIMBAL


Product overview

1. Structure

■ Smartphone shown in illustrations is for reference only

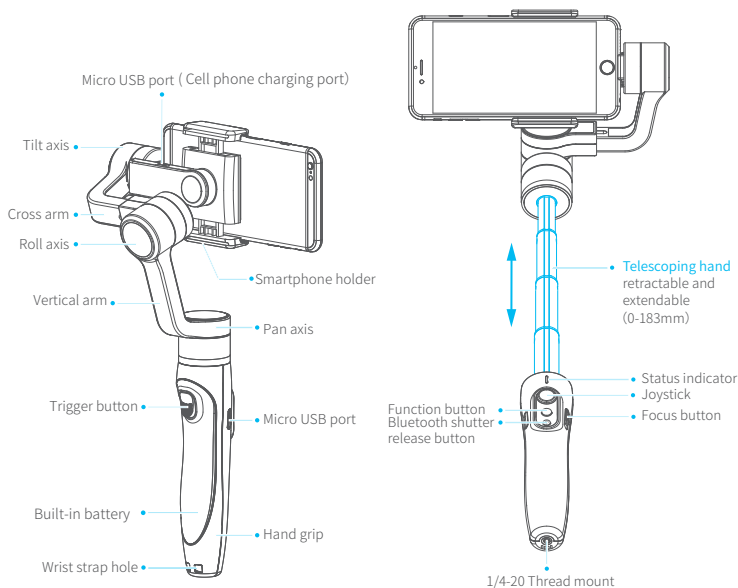

2. Included items

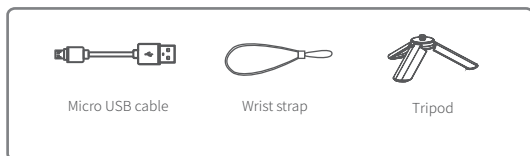


Operation guide

1. Gimbal charging

■ Please fully charge the battery before powering on the gimbal for the first time


Charging with Micro USB cable Indicator is red in charging status, and becomes green when battery full.

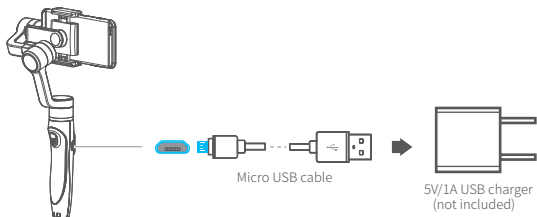

- ⚠ (1) Please install the smartphone before powering on the gimbal.
(2) When not in use, turn off the gimbal and then remove the smartphone.


2. Smartphone charging

Charge the phone via cable and choose the corresponding cable according to charging port.

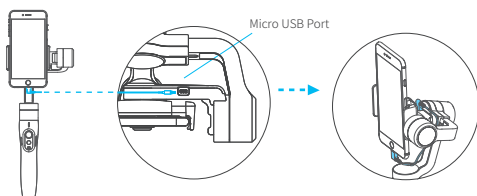


3. Insert smartphone

- It's recommended to remove your smartphone protective case.
■ Smartphone holder width range : 57-84mm.

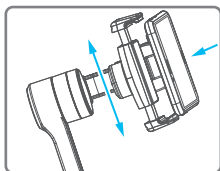

Place smartphone in holder so that the phone is snug against the back of the holder.


- If the smartphone is unbalanced after being mounted, refer to the following steps to make adjustment.

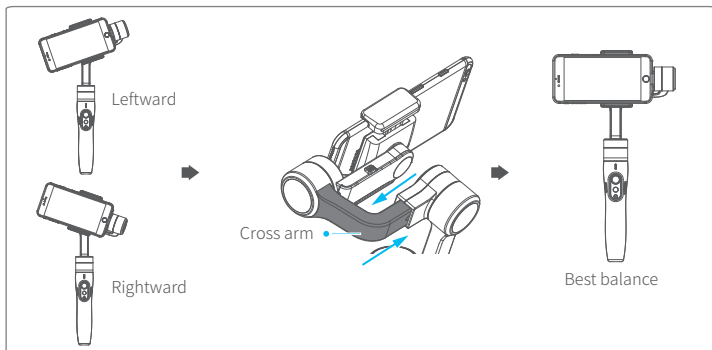


(1) If smartphone tilts to the left, pull cross arm out to the right until phone is horizontal.

(2) If smartphone tilts to the right, push cross arm in to the left until phone is horizontal.


4. Smartphone rotation

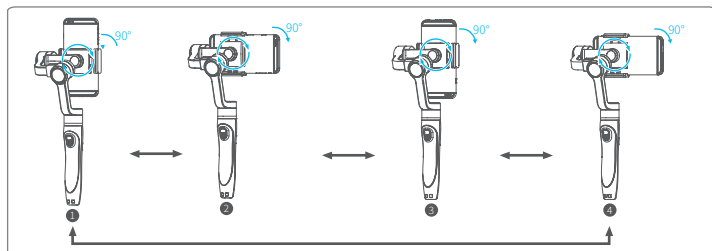

Tip:

 

• Load weight:
100~200g

 


• Load weight:
≤130g

5. Power on / off

- Make sure the smartphone is secure before powering on the gimbal.
- When battery is low, the status indicator will blink red three times every 5 seconds. Please charge gimbal .

Power on: press and hold the function button until the status indicator turns green and gimbal beeps.

Power off: press and hold the function button until the status indicator changes from a flashing red to a solid red light and gimbal beeps.

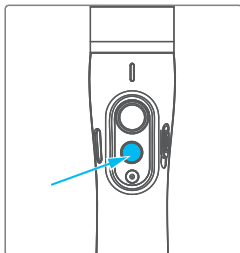

Functions modes

Operation method

Status Indicator Explanation


- The current mode of the gimbal can be identified by the indicator status.

Indicator status	Mode / Status
Blue light flashes once	Pan mode
Blue light flashes twice	Follow mode
Constant Blue light	Lock mode / gimbal initializing / motion control mode
Blue light keeps flashing	Initialization failure/ malfunction
Red light flashes three times	Low power
Red light keeps flashing	Gimbal powering off

Bluetooth shutter release button

By connecting bluetooth or Vicool App, you can operation as follow

Button	Mode / Indicator status
Single click	Photo / Status indicator flashes green once
Press & Hold	Video / Status indicator remains solid green during recording

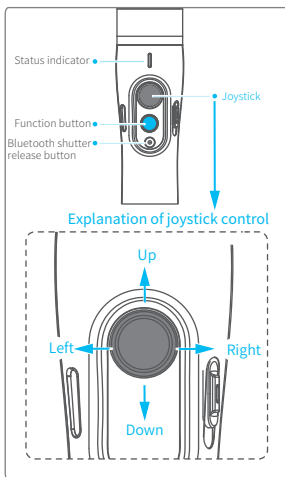

Troubleshooting: if the gimbal fails to connect to the Vicool App, power off the gimbal. Press and hold both the bluetooth shutter release button and the function button to reset the bluetooth connection.