

说明书装订成册, 尺寸：210X143mm

100g铜版纸 四色印刷

aiwa

When the Music Matters

AIWA
Edison, NJ 08817
1-800-592-9541
www.aiwa.us.com

 
© 2026 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license. Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license.

aiwa

When the Music Matters

Remix
Radio Cassette Recorder

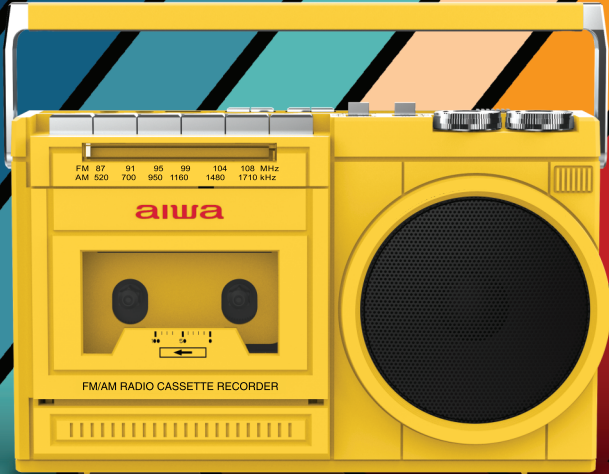

User's Manual

Item: AI7023

IMPORTANT SAFETY PRECAUTIONS

- 1. READ AND FOLLOW ALL INSTRUCTIONS. HEED ALL WARNINGS .
- 2. Do not use device near water.
- 3. Clean only with dry cloth.
- 4. Do not block any ventilation openings.
- 5. Keep external objects away at a minimum distance of 4 inches around the device for sufficient ventilation.
- 6. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 7. No naked flame sources, such as lighted candles, should be placed on or next to the device.
- 8. Do not operate near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- 9. Only use attachments/accessories specified by the manufacturer.
- 10. Unplug this device during lightning storms or when unused for a long period of time.
- 11. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or next to the device.
- 12. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 13. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 14. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) If liquid has been spilled, or objects have fallen into or onto the product.
 - b) If the product has been exposed to rain or water.
 - c) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - d) If the product has been dropped or damaged in any way.
 - e) When the product exhibits a distinct change in performance.
- 15. Disconnect plugs completely from sockets.
- 16. Do not expose batteries to excessive heat.
- 17. Excessive sound pressure from earphones and headphone can cause hearing loss.
- 18. Dispose batteries properly based on local laws and regulations.

TABLE OF CONTENTS

INTRODUCTION	3
WHAT’S INCLUDED	3
SPECIFICATIONS	3
YOUR BOOMBOX	4
POWERING YOUR SPEAKER	5-6
WIRED CONNECTION	7
AUDIO CONTROL	7
BLUETOOTH	8
PLAYING FROM USB	9
LISTENING TO CASSETTE TAPES	10
LISTENING TO THE RADIO	11
RECORDING TO USB	12-13
CONNECTING HEADPHONES	14
TROUBLESHOOTING	15
CARE AND MAINTENANCE	16
FCC STATEMENT	17
WARRANTY	18

INTRODUCTION

Thank you for purchasing your AIWA Street Jam Retro Wireless Boombox. You can use your boombox with most smartphones and Bluetooth devices to stream music or play cassette tapes. To get the best results, please read this manual first before using your boombox.

WHAT’S INCLUDED

- Remix Radio Cassette Recorder
- Power Cable
- User’s Manual

 
SPECIFICATIONS

- Bluetooth Range: Up to 10 Meters
- Radio Frequency Range: 520 - 1710 kHz (AM), 87 - 108 MHz (FM)
- Input Voltage: 120 VAC, 60 Hz
- USB File Types: .MP3
- USB Maximum File Size: 32GB
- AUX-IN & Headphone Jack: 3.5mm/ 1/8”
- Optional Battery Type: Three “D” cell batteries (Not Included)

YOUR BOOMBOX

Front View

- 1. Cassette Pause
- 2. Cassette Stop/Exit
- 3. Cassette/Rewind
- 4. Cassette/Fast forward
- 5. Cassette Play
- 6. Cassette Record
- 7. Function Switch
- 8. Band Switch
- 9. Tuning Adjustment Knob
- 10. Volume Adjustment Knob
- 11. Headphone jack
- 12. AUX IN
- 13. USB Port
- 14. BT/Recording indicator
- 15. Recording/Delete Button
- 16. BT/USB/music pause button
- 17. Previous Track
- 18. Next Track
- 19. Handle
- 20. FM antenna
- 21. Display
- 22. Cassette door
- 23. Speaker

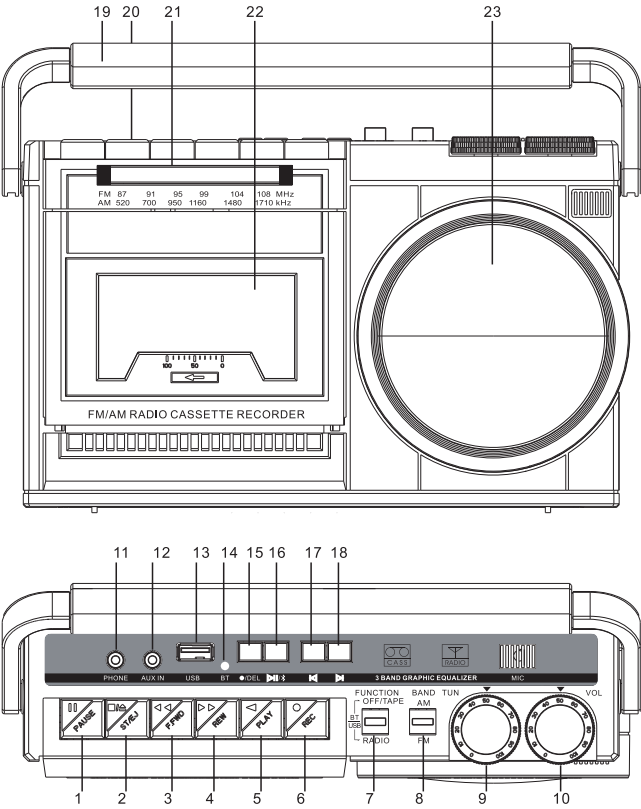

POWERING YOUR SPEAKER

Inserting Batteries

If you want to use your speaker wirelessly, insert three D cell Alkaline batteries (not included) into the battery compartment at the back of your speaker. To insert, first push the battery compartment cover downward to remove it. Then, insert the three D cell Alkaline batteries with the correct polarity (+,-) as displayed in the battery compartment.


BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

Using the AC Cable


Alternatively, you can power your speaker using the included AC Power cable. Insert one end of the AC Power cable into the Power Input on your device, then plug the other end into a suitable power outlet.

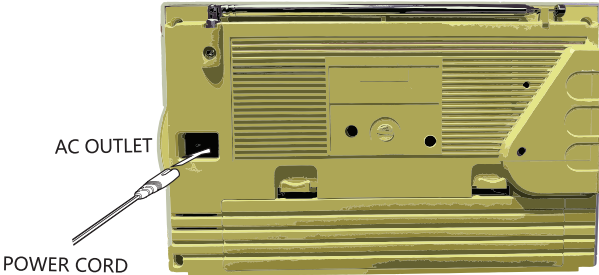

Powering ON/OFF

The speaker will power on when the Function Knob is set to FM, AM, Bluetooth/USB modes. While a Cassette tape is not inserted or being played, Tape/OFF powers off the speaker.

If the device is operating on inserted batteries, set the Function Switch to Tape to conserve battery power.

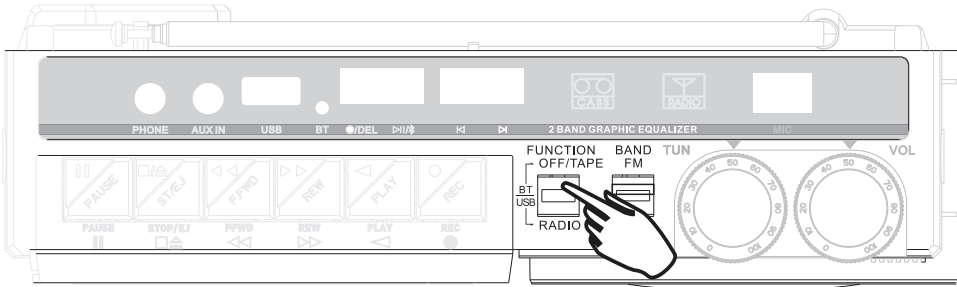

WIRED CONNECTION

The Audio Input Jack can be connected to the Line or Headphone output of a suitable music player, TV, etc.

Connecting to an External Playback Device

- 1. Plug one end of a 3.5mm Audio Jack cable (not supplied) into the Audio Input Jack.
- 2. Connect the other end of the cable to the audio output of the external device.
- 3. Set the Mode Switch to the AUX position to enable playing audio from the connected device.

NOTE: Certain devices may require volume adjustment from both the Boombox and connected device.

AUDIO CONTROL

In most modes, the following audio functions are available:

Volume
-Adjust the volume with the Volume Adjustment knob.

Bass
-Adjust the bass with the Bass Control knob.

BLUETOOTH

Connecting Bluetooth Device for the First Time

- 1. Set the Mode Switch to the BT/USB position.
- 2. Press the Mode (▶||/⌘) Button repeatedly until the boombox is set to Bluetooth
- 3. Activate the Bluetooth function on your external device.
- 4. Connect to the device listed as “ AIWA REMIX ” on your external Bluetooth device.

NOTE: If your Bluetooth device prompts for a pairing code, enter “0000”.

5. A voice prompt will say “Bluetooth pairing” while pairing. Pairing is successful when the voice prompt says “Bluetooth connected”.



Disconnect from Bluetooth

To disconnect from Bluetooth, turn Bluetooth OFF on your external device or set the Mode Switch to another position. Alternatively, you can press and hold the Play/Pause Button. A voice prompt will say “Bluetooth pairing” after the Bluetooth connection is successfully disconnected.

NOTE: External devices that have already paired once are connected automatically when powered ON and Bluetooth is enabled.

Bluetooth Controls

Playback of tracks, volume, and special functions can be controlled from both your external device and the boombox. The available functions depend on your external device and the software used.

Volume Adjustment Knob	Decrease or increase the volume. Make sure that the volume on the external device is set loud enough for an adequate input signal.
▶	Start or pause playback.
⏮ / ⏭	Press and hold the Previous Track Button to go to the previous song in the track. Press and hold the Next Track Button to go to the next song in the track.