

PLAYING FROM USB

Inserting a USB Stick

- Plug the USB stick into the USB port.
- Set the Mode Knob to the BT/USB position.
- Press the Mode Button to set to USB mode.

NOTE: USB devices cannot be charged through the USB port.

Starting/Pausing/Stopping Playback

- Press the Record/Play/Pause Button to start and stop the currently playing track.
- Change modes to stop playback completely.

Track Selection/Rewind/Fast-forward

- Press the Previous Track Button to return to the previous track. Press the Next Track Button to skip to the next track.
- Press and hold the Previous Track Button to rewind. Press and hold the Next Track Button to fast-forward.

Looping

- Press the Cycle/Delete Button to set the loop mode. Loop mode includes: Off, Single Loop, and All Loop.

Selecting MP3 or Recording Files

- When swapping between MP3 and recording files on a USB drive, follow the steps below.
- Stop playback.
 - To change between MP3 and recording files, press and hold the Mode/File Button.
 - To delete a currently playing file, press and hold the Cycle/Delete Button.

NOTE: Not all storage media are compatible with the speaker. Depending on compatibility, certain functions may be limited or disabled.

NOTE: The Mode/File Recording Button can be used to switch between BT and USB modes if a USB is plugged in.

LISTENING TO CASSETTE TAPES

Most standard cassette tapes can be played.

Set the Mode Knob to the TAPE position.

NOTE: The TAPE position is also used as the OFF position when no tape is being played.

Inserting/Ejecting Cassette Tapes

- Press the Cassette Stop/Eject Button to open the cassette compartment. Insert a cassette with the tape side down into the guide rails inside the compartment. The side that faces forward will be played.
- Close the compartment.
- To eject the cassette, push the Cassette Stop/Eject Button. If playback is active, stop playback before ejecting to avoid damaging the cassette.

Playing/Stopping/Pausing the Cassette

- Press the Cassette Play Button to play the cassette.
 - Press the Cassette Stop/Eject Button to stop playback.
 - Press the Cassette Pause Button to pause playback.
- NOTE:** When the tape reaches the end, playback automatically ends.

Rewind and Fast-forward

- Press the Cassette Rewind or Cassette Fast Forward Buttons to rewind or fast-forward the tape.
- Press the Cassette Stop/Eject Button to stop rewinding and fast-forwarding. Press the button if the end of the tape has been reached.

IMPORTANT: Do not change directly between fast-forward and rewind. Make sure to stop the tape before changing between rewind and fast-forward.

Recording to the Cassette

- You can record from multiple sources onto a cassette. Set the Mode Knob to your desired position.
- Set to BT/USB to record from a source of Bluetooth or USB.
 - Set to Tape to record from the built-in microphone.
 - Set to Radio to record from the radio.
 - Plug in a compatible external playback device to record.

Press the Cassette Record Button to start recording to the inserted cassette. To stop recording completely, press the Cassette Stop/Eject Button.

LISTENING TO THE RADIO

Aligning the Antenna

There is a antenna on top of the device for radio reception.
-Carefully remove the movable end of the antenna from the back of the device and extend it out completely. Carefully turn and swivel the antenna until there is reception.

Using the Radio

-Set the Mode Knob to FM or AM (medium wave).

Tuning

-Turn the Tuning Dial to tune to the desired frequency.

RECORDING TO USB (CONT.)

Recording from the Radio

- Set the Mode Knob to FM or AM (medium wave).
- Select the desired radio station using the Tune Dial.
- Plug a USB stick into the USB port.
- Start playing from the radio and adjust the antenna for the best quality.
- To start recording, press and hold the Record Button.
- To stop recording, press the Record Button.

RECORDING TO USB (CONT.)

Recording from the Radio

- Set the Mode Knob to FM or AM (medium wave).
- Select the desired radio station using the Tune Dial.
- Plug a USB stick into the USB port.
- Start playing from the radio and adjust the antenna for the best quality.
- To start recording, press and hold the Record Button.
- To stop recording, press the Record Button.

Recording from Bluetooth

- Plug a USB stick into the USB port.
- Set the Mode knob to the BT/USB position.
- Pair and connect with your desired mobile device.
- To start recording, press and hold the Record Button.
- Play audio from your Bluetooth-connected device.
- To stop recording, press the Record Button.

CONNECTING HEADPHONES

- Insert compatible headphones into the Headphone Jack.
- When headphones are connected, the speakers are disabled.
- Use the Volume Knob to control the audio level.



Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.

TROUBLESHOOTING

Problem	Possible Cause	Remedy
The device cannot be switched on.	A) The batteries may be dead. B) The AC power cable may not be connected properly. C) The Mode Switch may be in the TAPE/OFF position.	A) If the device is operated using batteries, check that the batteries are inserted correctly. B) Ensure the AC power cable is properly connected. C) Check the position of all switches.
The device switches off when it is in use.	The batteries may be dead.	Operate the device using the AC power cable or replace the batteries.
No or poor radio reception.	The station signal is weak.	A) Adjust the frequency of the stations. B) Move the boombox to a different location or change the direction of the antenna to improve the reception, if necessary.
No Sound	A) The Volume is set too low. B) If a device is connected via AUX IN or Bluetooth: The volume on the external device is too low. C) The batteries could be depleted. D) Wrong source selected.	A) Increase the volume as required B) Increase the volume on the external device. C) Operate the device with the AC power cable or change the batteries. D) Check if the correct source is selected on the Mode Switch. Check if AUX is plugged in over-riding BT/USB/SD. Check if you need to press MODE to switch between BT,USB, and SD sources if a USB or SD is plugged in.

CARE AND MAINTENANCE

- 1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
- 2. To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- 3. Do not tamper with the internal components of the unit.
- 4. Clean your unit with a dry cloth. Solvents or detergents should never be used.
- 5. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
- 6. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
- 7.If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your device.
- CAUTION:** Never allow any water or other liquids to get inside the unit while cleaning.
- 8.Never tug or yank on charging cables while they are connected to your boombox. Connect and disconnect these cables as carefully as possible.
- 9. Please recycle or dispose of your boombox properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your boombox for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restrctcion.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (800) 592-9541 or visit our website at www.aiwa.us.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai