

aiwa

Exos Heritage Home Speaker



FM/AM Radio

2 x 15W

RMS



Digital Clock



CD Player



SAFETY PRECAUTIONS

1. READ AND FOLLOW ALL INSTRUCTIONS. HEED ALL WARNINGS.
2. Do not use device near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or applied force that may bend the plugs, prongs, wires or device entry points.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this device during lightning storms or when unused for a long period of time.
10. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or next to the device.
11. Do not overload wall outlet. Only use power source as indicated.
12. Use replacement parts as specified by the manufacturer.
13. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
14. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
15. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into or onto the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance.
17. Disconnect plugs completely from sockets.
18. Do not expose batteries to excessive heat.
19. Excessive sound pressure from earphones and headphone can cause hearing loss.
20. Keep external objects away at a minimum distance of 4 inches around the device for sufficient ventilation.
21. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
22. No naked flame sources, such as lighted candles, should be placed on or next to the device.
23. Dispose batteries properly based on local laws and regulations.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated, dangerous voltage within the product or enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SAFETY PRECAUTIONS CONT.

FOLLOW THE ADVICE BELOW FOR SAFE OPERATIONS

ON PROTECTION AGAINST LASER ENERGY EXPOSURE:

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object falls into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not place any object that is not a suitable disc inside the CD compartment. The laser diode will stay ON while the CD door is kept open. Do not keep the CD compartment door open.
- If the device is unused for a long period of time, make sure that all power sources are disconnected from the device. Remove all batteries from the battery compartment.
- This device employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.
- This device should not be adjusted or repaired by anyone except qualified service personnel.

ON PLACEMENT

- Do not use the device in places which are extremely hot, cold, dusty or humid.
- Place the device on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a warm and damp room, water droplets or condensation may form inside of the device.
- When there is condensation inside of the device, it may not function normally. Let it standby for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the device before use.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM

 


This product contains a low power laser device.

WHAT'S INCLUDED

- AI7201 Exos Heritage Home Speaker
- AC Adapter (DC 12V $\equiv$ 3.5A $\diamond$ C $\diamond$)
- 2xAAA batteries (for remote control)
- Remote Control
- User's Manual


YOUR REMOTE

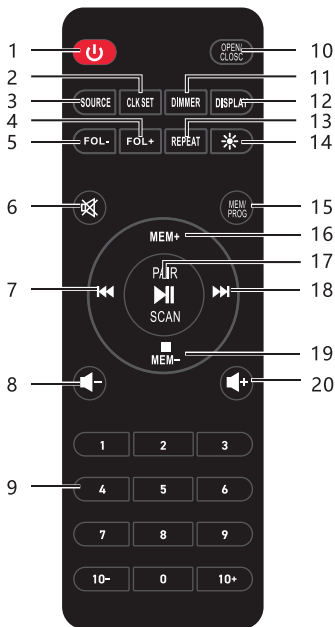

1. Power Button
2. Clock Set Button
3. Source Button
4. Next Folder Button
5. Previous Folder Button
6. Mute Button
7. Previous Track Button
8. Volume - Button
9. Number Buttons
10. CD Open/Close Button
11. Brightness Button
12. Display Button
13. Loop Track Button
14. Color Lights Button
15. Program Button
16. Menu Up Button
17. Pair/Play/Scan Button
18. Next Track Button
19. Stop/Menu Down Button
20. Volume + Button

Inserting Batteries

 1. Your remote control takes 2 AAA batteries (included).
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+, -).
4. Close the battery compartment.

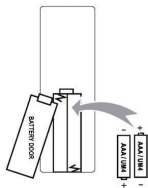


BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.


Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

YOUR SPEAKER

 Front View

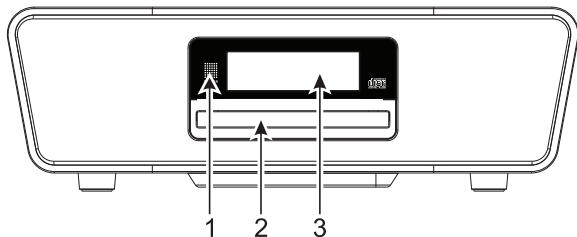

Rear View

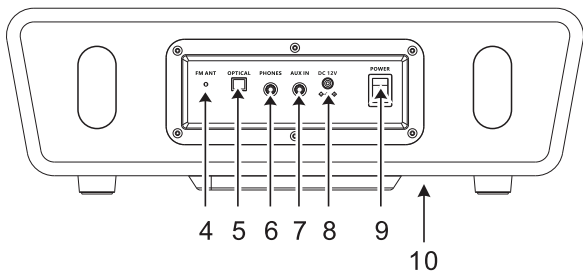 


1. Remote Control Window
2. CD Compartment
3. Display Screen
4. FM Antenna
5. OPTICAL IN Jack
6. Headphone Jack
7. AUX IN Jack
8. DC INPUT Jack
9. Power Switch
10. Lights

POWERING

AC POWER OPERATION

1. Insert the DC plug adapter into the DC INPUT Jack at the back of your speaker.
2. Plug the AC adapter plug into a standard 120V AC outlet in your home.
3. Press the Power Switch to the ON position to power up the speaker. The speaker will turn on standby mode.

 Note: Unplug when not in use for extended periods.

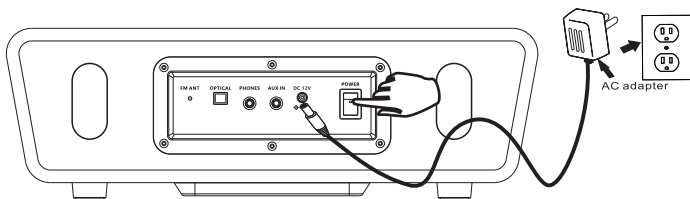


SETTING THE TIME

While the speaker is on standby mode, you can set the time on your display screen.

TO SET THE HOUR:

1. Press and hold the Clock Set button on the remote until the hour digits start to blink on the display screen.
2. Repeatedly press the ◀◀ button or ▶▶ button on your remote to set the hour. Press and hold the buttons for fast reverse/forward setting.

 
Note: Be aware of setting a PM hour or an AM hour, the PM indicator on the left of the display screen will light during a PM hour and turn off during an AM hour.

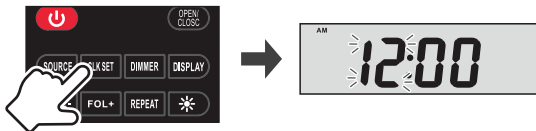

TO SET THE MINUTE:

1. Press the Clock Set button to confirm the hour and the minute digits will start to blink.
2. Repeatedly press the ◀◀ button or ▶▶ button to set the minute. Press and hold the buttons for fast reverse/forward setting.
3. Press the Clock Set button to confirm and complete the setting. The display will stop blinking.

 NOTE: The speaker will automatically save and exit the time set mode if you do not press the Clock Set button within 10 seconds.

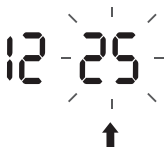

USING YOUR REMOTE

1. Press the Power button to power the device on or off.
2. Press and hold the Clock Set button in standby mode to set the time.
3. Press the Source button to switch between Bluetooth, CD, FM, and AUX IN modes.
4. Press the Next Folder button to go to the next folder on a CD.
5. Press the Previous Folder button to go to the previous folder on a CD.
6. Press the Mute button to mute sound/music.
7. Press the Previous Track button (⏮) to go to the previous track, change the time on standby mode, or go to the next station on FM radio mode.
In FM radio mode press and hold the Previous Track button to automatically search for an available station.
8. Press the Volume - button to reduce the volume.
Press and hold to reduce volume quickly.
9. Use the Number Buttons to directly jump to a FM preset station, FM frequency, or CD track number.
10. In CD mode, press the CD Open/Close button to display the current CD info and open/close the tray.
In other modes, press the CD Open/Close button to open/close the tray.
11. Press the Brightness button to adjust the display screen brightness.
12. Press the Display button to turn the display on or off.
13. Press the Loop Track Button to repeat a track.
14. Press the Color Lights button to adjust the light mode.
Press and hold to turn ON/OFF color lights.
15. Press the Program button to set the FM radio or CD programming.
16. Press the Menu Up button to go to the next preset station on FM radio mode.

USING YOUR REMOTE CONT.

17. Press the Pair/Play/Scan button (►||) to play/pause music.

In Bluetooth mode, press and hold the Pair/Play/Scan button to disconnect the current paired devices, enter pairing mode if not already connected to a device, or press to connect to the previously connected device.

In Radio Mode, press and hold the Pair/Play/Scan button to automatically search for and save available radio stations.

18. Press the Next Track button (►►) to skip track, change the time on standby mode, or go to the next station in FM radio mode.

In FM mode press and hold to automatically search for an available station

19. Press the Stop/Menu Down button to stop the track.

In CD mode press the Stop/Menu Down button to end a CD program.

In FM mode press the Stop/Menu Down button to go to the previous preset station.

20. Press the Volume + button to raise the volume.

Press and hold to increase volume quickly.

CD FUNCTION

USING THE SPEAKER TO PLAY CDs:

1. Press the Power button to power on the speaker.
2. If the speaker is not in CD mode, press the Source button on your remote repeatedly until CD mode is selected. The display screen will show “- -” briefly. If no CD has been loaded in the CD compartment, the display screen message will change to show “no” to indicate that there is no disc.
3. Press the CD Open/Close button on the remote to open.
4. Carefully load a CD disc with its label side upward into the CD compartment then press the CD Open/Close button on the remote to close.
5. The player will start reading the contents of the disc. The total number of tracks on the CD will appear on the display screen after a few seconds.

USING THE REMOTE ON CD MODE:

Press the ►|| button to play/pause.

Press the Volume – button or Volume + to lower or raise the volume.

You can go to a previous track by pressing the ◀◀ button or go to the next track with the ▶▶ button. The display screen will indicate the current track number.

To locate a particular section within a track, press and hold the ◀◀/▶▶ buttons until the section is found.

To stop track, press the Stop/Menu Down button.

To repeat the current track, press the Repeat button once. The track will continue to play until the repeat function is turned off.

To repeat all tracks, press the Repeat button twice. All the tracks on the disc will be played repeatedly.

To cancel repeat function, press the REPEAT button until REPEAT indicator turns off from the display screen.

Use the Number buttons to jump to the inputted song number.

CD FUNCTION CONT.

SETTING PROGRAMS

This function allows tracks to be played in a programmed sequence.

TO SET A PROGRAM:

1. In CD stop mode, press the Program button. The program indicator ("PROG") will illuminate and Program Number "P01" will show on the display screen.
2. Press the **⏮** or **⏭** button to select the desired track. The corresponding track number will blink on the display screen to prompt for input.
3. Press the Program button to confirm the selection. The Program Number will advance to "P02".
4. Repeat steps 2 & 3 to program up to a maximum of 20 tracks. (some MP3 discs can be programmed with up to 99 tracks.)
5. When a maximum of 20 tracks have been programmed, the display screen will show "FUL" to indicate the program is at full capacity.
6. When you have completed programming, press the **▶||** button to start playing. The program ("PROG") and Play/Pause indicators will briefly illuminate.
7. To cancel programmed play, press the Stop/Menu Down button twice. The program indicator ("PROG") will shut off.



BLUETOOTH FUNCTION

The Bluetooth feature enables you to stream and play digital music from your Bluetooth enabled device to your speaker.

1. With your speaker powered on, press the Source button repeatedly to select AUX IN mode. The Bluetooth indicator  will start to flash on the display screen. The speaker will go into auto connection mode and search for a previously paired device that is active and in range (30 feet/10 meters).
2. Go to the Bluetooth settings menu of your Bluetooth enabled device, and make sure Bluetooth is turned on. Select "Aiwa AI7201" from the list of available devices (If required, enter the pass code "0000" to connect).
3. Once a connection is made, you will hear a tone, and the indicator light  will stop flashing and remain solid.
4. You can now play music from your Bluetooth enabled device wirelessly to your speaker.

USING THE REMOTE ON BLUETOOTH MODE:

Press the  button to play or pause music.

Press the  button to skip to next song.

Press the  button to skip to previous song.

Adjust the volume using the Volume - and Volume + buttons.

To pair with a different Bluetooth device, press and hold the  button, the Bluetooth indicator  will flash. The speaker will go into pairing/discoverable mode. Repeat steps #2 to #3 above to make a new link.

NOTES:

--If your Bluetooth enabled device does not support A2DP, it will not play the music through the AI7201 system even after it is paired and connected successfully.

--If you are pairing and connecting your personal computer to the AI7201 using Bluetooth, you may need to set the AI7201 as your computer's default sound device.

AUX IN FUNCTION

You can play other music sources (iPods, MP3 players or other digital audio players) through the speakers of the speaker by connecting the AUX IN Jack to your external player's audio out jack or headphone jack.

 
1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN Jack and the other end of the cable to the headphone jack of your digital audio player.
2. Press the Source button repeatedly until AUX IN mode is accessed. The "AUX" indicator will light up on the display screen.
3. Turn on and start playing the external device you plugged into the AUX IN Jack.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and your speaker after use. Unplug the audio cable from AUX IN Jack.

NOTES:

--If you connect the speaker to the line-out jack of your external device, you only need to adjust the volume of your speaker. If you connect to the headphone jack of your external device, you may need to adjust both the volume controls of your external device and the speaker to obtain a desirable listening level.


--Remember to turn off the speaker when you have finished listening. Don't forget to switch off the power of your external audio device as well.

AUX Cable Not Included

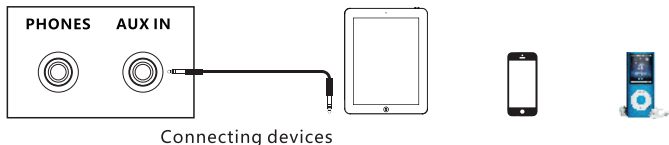

OPTICAL AUDIO FUNCTION

 1. Plug one end of an optical cable (not included) into the OPTICAL IN Jack located at the back of the speaker and the other end of the cable to the optical out jack of your digital audio player.
2. Press the Power button to turn the speaker on
3. Press the Source button repeatedly to select Optical Input mode, the optical indicator will light up on the display screen.
4. Turn on and start playing the external device that is plugged into the OPTICAL IN Jack.
5. Carefully adjust both the volume controls of your speaker, by using your speaker remote, and the external device until you reach a comfortable listening level.

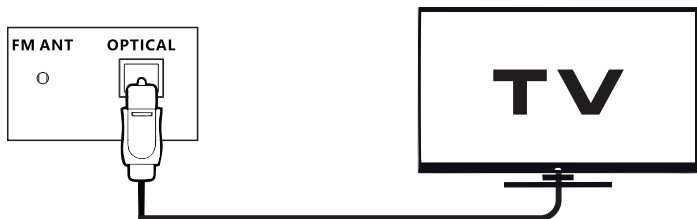

FM RADIO FUNCTION

1. Press the Power button to power on your speaker.
2. Press the Source button repeatedly until FM mode is accessed. The "FM" indicator on the display screen will light up.

USING THE REMOTE CONTROL ON FM RADIO MODE:

Press and hold the ►|| button to search for and save available stations.

Press the Menu Up button or the Stop/Menu Down button to search through available FM radio stations.

Press and hold the Next Track or the Previous Track button to automatically scan for an available station and play.

Adjust the volume to your desired level using the Volume + and Volume - buttons.

SETTING YOUR RADIO PRESETS:

This device allows you to preset up to 30 FM stations for easy recall at any time.

1. Turn on the speaker, and press the Source button repeatedly until FM radio mode is activated.
2. Select your desired radio station using the ◀◀/▶▶ buttons.
3. Press the Program button until "P01" shows on the display screen.
4. Press the ◀◀/▶▶ buttons to select a preset number (P01-P30).
5. Press the Program button again to confirm the preset.
6. Repeat steps 2 through 4 to preset up to 30 stations.

RECALL A PRESET STATION:

To recall one of the preset stations already programmed, use the Number buttons.

 
NOTE: You can overwrite a present station by storing another station number in its place.

CONNECT YOUR HEADPHONES

Insert the plug of your headphones (not included) into the Headphone Jack located on the rear panel. After successful connection, the speakers will disconnect and the sound will channel through the headphones.

IMPORTANT:

- Avoid extended play at very high volume as it may impair your hearing.
- If you experience ringing in your ears, lower the volume or shut off the speaker.
- Keep the volume at a reasonable level.

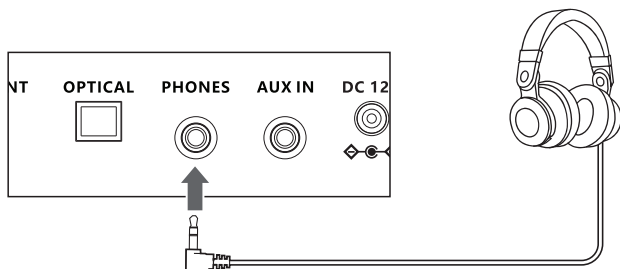

TROUBLESHOOTING GUIDE

Issues	Possible Causes	Troubleshooting
Not Working	Power Plug improperly connected	Ensure the power cord is properly connected
	Power Switch is Off	Set the Power Switch to the ON position
Remote Not Working	Remote is not pointed towards the receiver window	Aim the remote towards the speaker
	Remote batteries depleted	Replace remote batteries
	Too far away	Move closer to the speaker
Cannot Play CD	Disc inserted incorrectly	Label side up, insert the disc again
	Incompatible disc	Try different compatible disc
	CD compartment open	Close the CD compartment
No Sound	Minimum volume	Increase Volume
	Muted	Unmute the device
No image on TV	Optical Cable not connected properly	Connect the Optical Cable
	TV not set to video mode	Set the TV to video mode
Static Sound	Dirty disc or laser lens	Clean the disc or laser lens
	Scratched or curled disc	Replace the disc and play
No response. (Frozen)		Turn off the power for one minute and turn it on

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
3. Do not tamper with the internal components of the unit.
4. Clean your unit with a dry cloth. Solvents or detergents should never be used.
5. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
6. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
7. If interruptions or stops occur in the music during CD play, or if the CD fails to play at all, the disc's bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a soft cleaning cloth.



8. If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your device.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

SPECIFICATIONS

Radio Frequency Range: FM 87.5 - 108MHz

Bluetooth: V5.3

Audio Output Power: 15Wx2 (RMS)

Power Supply: Input AC 100V-240Vac, 50/60Hz

AC Adapter: Output DC 12VDC , 3.5A 

*Note: specs may change due to factory model or system upgrades

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (800) 592-9541 or visit our website at www.aiwa.us.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.



AIWA

Edison, NJ 08817
www.aiwa.us.com

© 2026 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.
Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners."