

Victoria's Secret Clip-on Mini Speaker 1 User Manual

BC




THIS IS NOT A TOY

ONLY USE UL CERTIFIED WALL ADAPTERS AND THE USB CORD
INCLUDED WITH THIS PRODUCT.

Model NO. T11

Victoria's Secret Clip-on Mini Speaker 2 User Manual

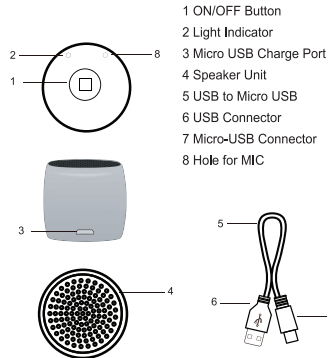

- 1 ON/OFF Button
- 2 Light Indicator
- 3 Micro USB Charge Port
- 4 Speaker Unit
- 5 USB to Micro USB
- 6 USB Connector
- 7 Micro-USB Connector
- 8 Hole for MIC

Victoria's Secret Clip-on Mini Speaker 3 Specs

Style No.	T11
Size	1.33 in.Diameter x 1.12 in.Approx.
Weight	33g
Connect	Wireless
USB Charge Cord	20in.Approx.
Bluetooth Version	V 5.0
Frequency	20Hz~20KHz
USB Input:	5Vdc,500mA
For battery:	3.7Vdc,250mA
Power Source	USB
Battery Type	UL Certified EN 602025 li-ion polymer battery
Capacity	250mAh
Playing Time	2hrs
Charging Time	3hrs
Signal-to-Noise	75dB
Bluetooth Distance	32 Feet
Power On/Off	Hold Down the Power Button

Victoria's Secret Clip-on Mini Speaker 4 Charging

- ① Insert the **USB port** into a **UL Certified USB Wall adapter or PC**. ***Using a non UL certified wall adapter IS NOT recommended.**
- ② Plug Micro-USB cable into the Micro-USB Charging Port located on the bottom of the Speaker.
- ③ It is recommended that the speaker is fully charged before its first use/pairing.
- ④ A red light will illuminate, indicating the device is charging.
- ⑤ A full charge takes up 2 hours.
- ⑥ When the red light turns off, the speaker is fully charged. The speaker will operate at peak performance for approximately 2 hours after a full charge. The speaker's volume will steadily decline after 2 hours of continuous playtime. A two toned sound will play when battery life is low.

Victoria's Secret Clip-on Mini Speaker 5 Operating Instructions

Power On: Hold down the power button until you hear a two toned sound. You will then see a flashing blue light. This indicates the speaker is looking to pair with a Bluetooth compatible device.

Pairing: Under your phone's Bluetooth settings, pair with the device named "T11". When pairing is successful, the blue light will become solid and you will hear another two toned sound.

IMPORTANT Iphone Users: When paired, press the "i" information button, go to device type, and select speaker.

Playing Music: Choose a song on your device media player and enjoy. The light indicator will turn to flashing blue while playing music.

Volume: Use the controls on your phone to raise and lower the volume.

Play and Pause: Press the play and pause button on your phone.

Power Off: Hold down the power button until you hear a three toned sound. The light indicator will no longer illuminate.

Victoria's Secret Clip-on Mini Speaker 6 Notifications

- **Phone Call:** If you are receiving a phone call while the music is playing, the blue light will be flashing and the music will stop. When the call has ended, the music will resume. When you make a call, the music will stop.
- **Note:** You can speak through the speaker
- **Text Message:** When you receive a text message while the music is playing, the music will continue to play.
- **Notifications:** When you receive a notifications while the music is playing, the music will continue to play.

Victoria's Secret Clip-on Mini Speaker 7 Troubleshooting

Make sure the speaker is charged. If the speaker does not pair with your phone, power off the speaker and power it back on. If the issue persists, turn off your device and restart your phone. Check these further steps if you cannot resolve the issue:

- ① Make sure Bluetooth is enabled on your phone.
- ② Check that the speaker is not connected to another device.
- ③ Make sure you are within 32 feet of the speaker with no barriers (walls, other large electronics) between the device and your phone.

Victoria's Secret Clip-on Mini Speaker 8
Important Safety Instructions

IF USED IMPROPERLY, RISK OF ELECTRIC SHOCK
COULD RESULT IN SERIOUS INJURY OR DEATH.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Please pay careful attention to all warnings.
- 4. Follow all instructions.
- 5. Only use the cord supplied by the manufacturer.
- 6. Using another Cord is not recommended.
- 7. Unplug this device when unused for long periods of time.
- 8. Do not charge, or operate this device near water.

Victoria's Secret Clip-on Mini Speaker 9
WARNINGS/PRECAUTIONS

When using electronic products, basic precautions should
always be followed:

- DANGER: To prevent fire or shock hazards, do not expose to water,rain, or moisture.
- DANGER:A wet or contaminated micro-USB connector may cause excessive heat or melting and may lead to fire damage or personal injury. Always charge your speaker with a clean, dry micro-USB connector that is included with the product.
- CAUTION: Charge the Bluetooth Speaker by using only the original USB cable included with the speaker. Using another USB cable may damage the device.
- DO NOT use alcohol or any type of abrasives to clean the speaker. You may use a soft dry cloth.
- DO NOT attempt to disassemble the speaker. This may lead to damaging the speaker permanently or cause serious injury.

Victoria's Secret Clip-on Mini Speaker 10
WARNINGS/PRECAUTIONS - CONTINUED

- DO NOT expose the speaker to contact with sharp objects as this will cause scratching and damage.
- DO NOT stick anything inside the speaker as this may damage internal components and cause serious injury.
- DO NOT carry this unit by its cord or use the cord as a handle.
- DO NOT expose or charge the device to temperatures greater than 98°F (37°C) Lithium-ion batteries contain flammable electrolytes that may vent, ignite, and produce sparks when subjected to high temperature.
- DO NOT store the Bluetooth Speaker in any vehicle.
- DO NOT listen to the speaker while operating a vehicle. This may impair your ability to drive.
- Avoid severe physical shocks (ex. dropping).
- Never allow children to play with the speaker. Small parts may be a choking hazard.

Victoria's Secret Clip-on Mini Speaker 11
WARNINGS/PRECAUTIONS - CONTINUED

- WARNING: If you do not intend to use the device for a certain period of time, the power cable should be unplugged from the unit to prevent fire, damage, or corrosion. Store the speaker in a cool dry place.
- DANGER!: If the speaker is cracked or damaged, do not attempt to charge. This may cause electric shock or electrocution.
- DISPOSE OF THE DEVICE PROPERLY at a recycling center.
- CAUTION: Risk of fire and burns.Do NOT open,crush,heat above manufacturer's specified maximum temperature)or incinerate.Follow manufacturer's instructions.
- DO NOT charge using an extension cord.

Victoria's Secret Clip-on Mini Speaker 12

MADE IN CHINA / FAIT EN CHINE / HECHO EN CHINA
DISTRIBUTED BY VICTORIA'S SECRET PINK
REYNOLDSBURG, OHIO, 43068, USA

FCC ID: 2AHXQ3 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FACTORY ADDRESS: IXIN GLOBAL TRADE DONG TIAN PLAZA,
SUITE 1301, 19 HAIAN ROAD, GUANGZHOU CHINA 510627



Victoria's Secret Clip-on Mini Speaker 13

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.