 


HFD-W29 Multi-function White Noise Machine

User Manual

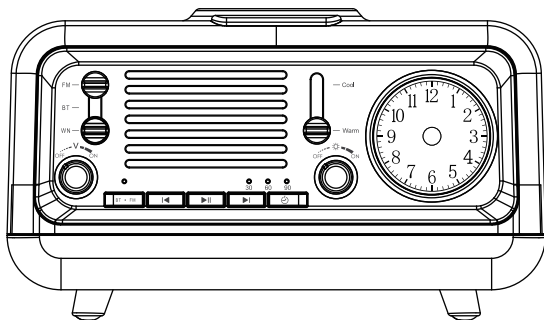

Important

Attention!!!

Please use Original Power Adapter ONLY. Over-voltage may shorten machine life to cause malfunction.

 
 
TIPS: The clock works and lasts for more than 10 days if its battery powered ONLY, please pay

 
TECHNICAL SPECIFICATIONS

1. Speaker Driver: $\Phi 52\text{mm}$, 4 Ω 7W
2. SNR: $\geq 83\text{dB}$
3. FM Frequency : 76MHz-108.0MHz
4. Wireless charging: 15W with magnetic attraction
5. Battery: Built-in polymer battery 3.7V/250mAH/clock power supply
6. Input: DC 9V 2A
7. USB-A: Output DC5V/3A
8. TYPE-C: Fast charging output: 9V/2A
9. Product Size: 200*94.4*116mm
10. Product Weight: 726g

FEATURES

1. Multi-function: White noise, Bluetooth, FM radio, Alarm Clock, Magnetic wireless charging (15W)
2. Build-in 30 Soothing Sounds
3. 5 Alarm sounds
4. Timer Option: 30,60, 90 minutes and non-stop
5. Warm yellow and warm white color night lights
6. Snooze

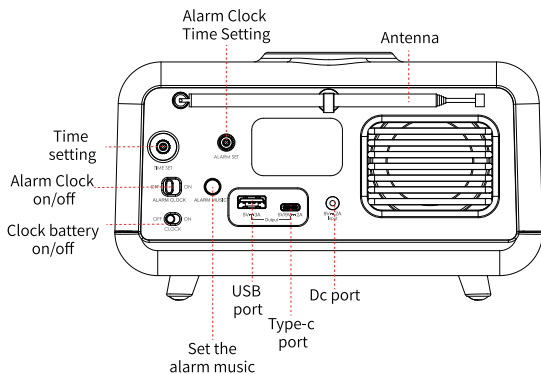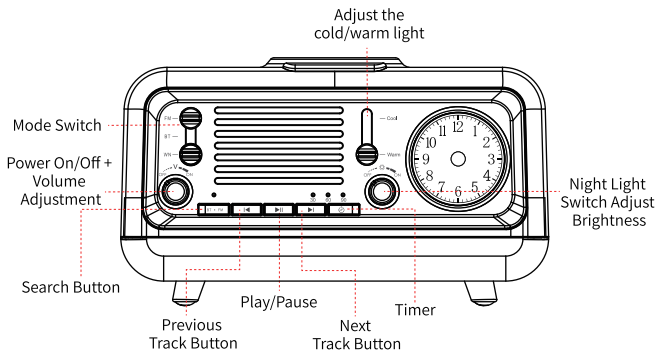

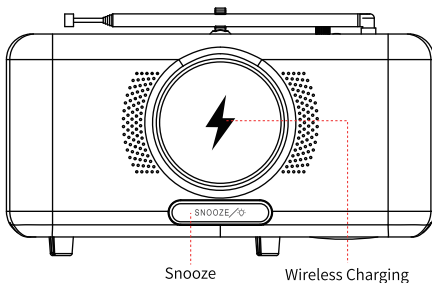

1. Power On/Off + Volume Adjustment



Power On: Rotate the Power Button + Volume Composite Key clockwise to turn on.

Power Off: Rotate the Power Button + Volume Composite Key counterclockwise to turn off.

FM —

BT —

WN —

2. Mode Switch

Slide the switch to White noise, Bluetooth, or FM mode.

3. Play/Pause ▶||

During playback, short press the Play/Pause Button to toggle between play and pause.

4. Search Button BT • FM

In Bluetooth mode, long press to forcibly disconnect the current connection and enter Bluetooth search.

In FM mode, long press to automatically search for radio stations

5. White Noise Function

Press the Previous Track Button  or Next Track Button  to previous/next sound.

You can choose from different sounds:

5 white noise sounds, 5 fan sounds, 12 natural sounds, 8 baby sounds. Total 30 Soothing sounds

6. Night Light Function

1)  Night Light On/Off + Brightness

Adjustment: Rotate the light knob clockwise to turn on the light/increase brightness, and rotate counterclockwise to turn off the light/reduce brightness.

— Cool

2) Color Temperature Adjustment:

— Warm

Slide the Light Color Temperature Toggle Switch to change color temperature.

7. Bluetooth Function

Slide the mode switch to the Bluetooth mode position, when the yellow indicator light flashes slowly, pairing begins, the yellow indicator light remains on after a successful connection.

Bluetooth name:HFD-W29

If you exit the Bluetooth mode, the indicator light goes off.

Long press and hold **BT • FM** Search Button to disconnect the current connection, clear the pairing record, enter a new pairing state, and wait for a new connection as the yellow search indicator light flashes slowly

NOTE: Any reminder sounds on the mobile phone will not ring in the Bluetooth speaker (For example: incoming call sounds, text message

sounds, voice message sounds, chat software message sounds, etc)

8.FM Function

Slide the mode switch to FM mode. Keep the yellow search indicator light on and enter FM playback.

Long press the  Search Button to enter the FM automatic search. During the search process, the yellow search indicator light flashes rapidly.

Automatically save, during the saving process, the yellow search indicator light remains on, and then when the search continues, the indicator light flashes rapidly again. It will be automatically saved after all searches are completed.

In the saved radio station, press the Previous Track Button  or  Next Track Button to select the channel.

9.Timer Function

Press  timer button to choose the timer as: 30/ 60/90 minutes and non-stop. No indicators is on for non-stop timer start.

When the timer ends, audio will fade out and the night light will turn off gradually.

NOTE:

When used independently Bluetooth/ FM/ White Noise/ Night Lights all have timer function.

If you switch from one mode to another, the timer function will turn off

10.Time setting

Adjust the current time by rotating the time knob on the  back of the machine



Clock battery switch: Switch to ON to turn

on the battery and power the clock, causing the clock dial to move. When the battery is disconnected, the clock dial does not move

11. Alarm Clock Setting

1) Turn on the  Alarm Clock switch, and then adjust the alarm time by rotating the  knob on the back of the machine.

2) Alarm Sound and Alarm Volume Setting:

Press the  to choose to alarm sound, the final selected ringtone will be the alarm sound. A total of 5 sounds can be selected in a loop. During the alarm, you can also adjust the Volume Button  to change the alarm sound volume. The current volume value will be saved to replace the original setting, which will be used as the alarm sound volume for the next alarm.

3) Alarm Snooze Function:

When the alarm clock rings, press the  Snooze Button to enter snooze mode. The alarm will sound again after 9 minutes. The

snooze unlimited times. (The indicator light will breathe during snooze mode, but it will be off during the alarm. The indicator light will only breathe during snooze mode.)

Note: If you do not want to snooze, press and hold the "Snooze Key" to end the alarm for the day. Or if the alarm continues for 30 minutes without being turned off, it will automatically stop for the day.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a

circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example-use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

名称	W29中性说明书20260825加了FCC	厂商确认	
规格	125*90mm		
颜色	单色双面印刷		
工艺	翻页		
材质	80G书纸		
数量	PCS(详情见合同)		
备注	黑色框线为刀模，请勿印刷，刀模仅供参考，以实际开模打样确认为准，裁切要工整。	备注	
		签名	
		日期 (最新日期)	2026-08-25