

White Noise Machine

User Manual



SAFETY PRECAUTIONS:

To prevent any fire or electrical hazards, do not remove or replace parts by yourself. If the product needs, please contact with professional maintenance personnel or designated maintenance center.

1. Do not put the product in rain, water or damp place to keep it dry.
2. Do not splash liquid on or near the product.
3. Do not press too hard, when pressing the button.
4. If cleaning is required, use only a dry, soft cloth or minimally damp cloth without any corrosive solvent or cleaning agent.

 
 
 
TECHNICAL SPECIFICATIONS:

1. Speaker Driver: 33mm 4Ohms 3W
2. THD+N: $\leq 1\%$ (1W,1KHz)
3. SNR: $\geq 78\text{dB}$
4. RMS: 3W
5. Input: DC 5V
6. Frequency Response: 60 Hz ~ 20K Hz
7. Product Size: $\Phi 93 \times H44\text{mm}$
8. Product Weight: 167 g

FEATURES:

1. Classic Circular Design
2. Build-in 21 Soothing Sounds
3. 360° Rotating Switch For Volume Adjustment
4. Build-in Rechargeable Battery for True Portable
5. Colorful Night Light
6. Easy to hang anywhere
7. 30, 60, 90 minutes Sleep Timer
8. Child Lock Function
9. Memory Function

DESCRIPTION:

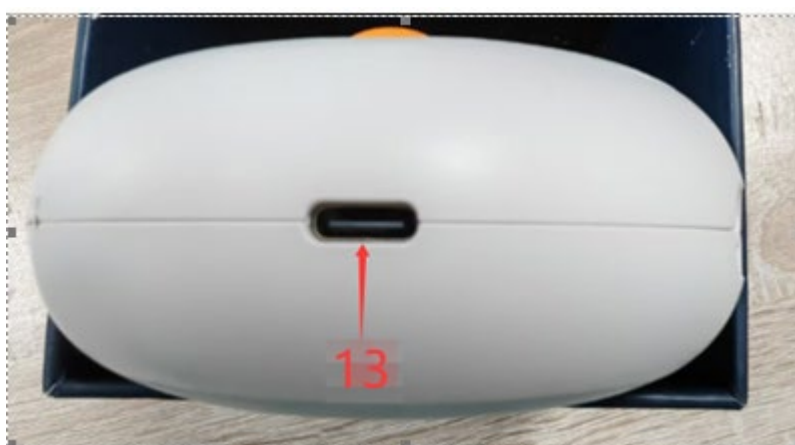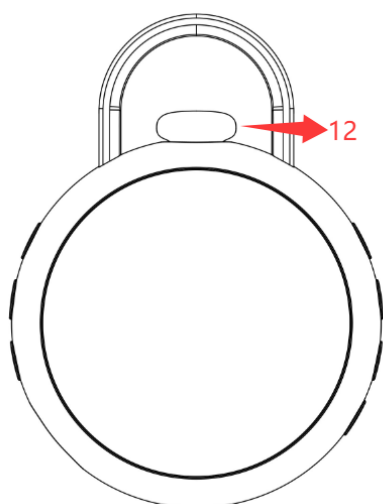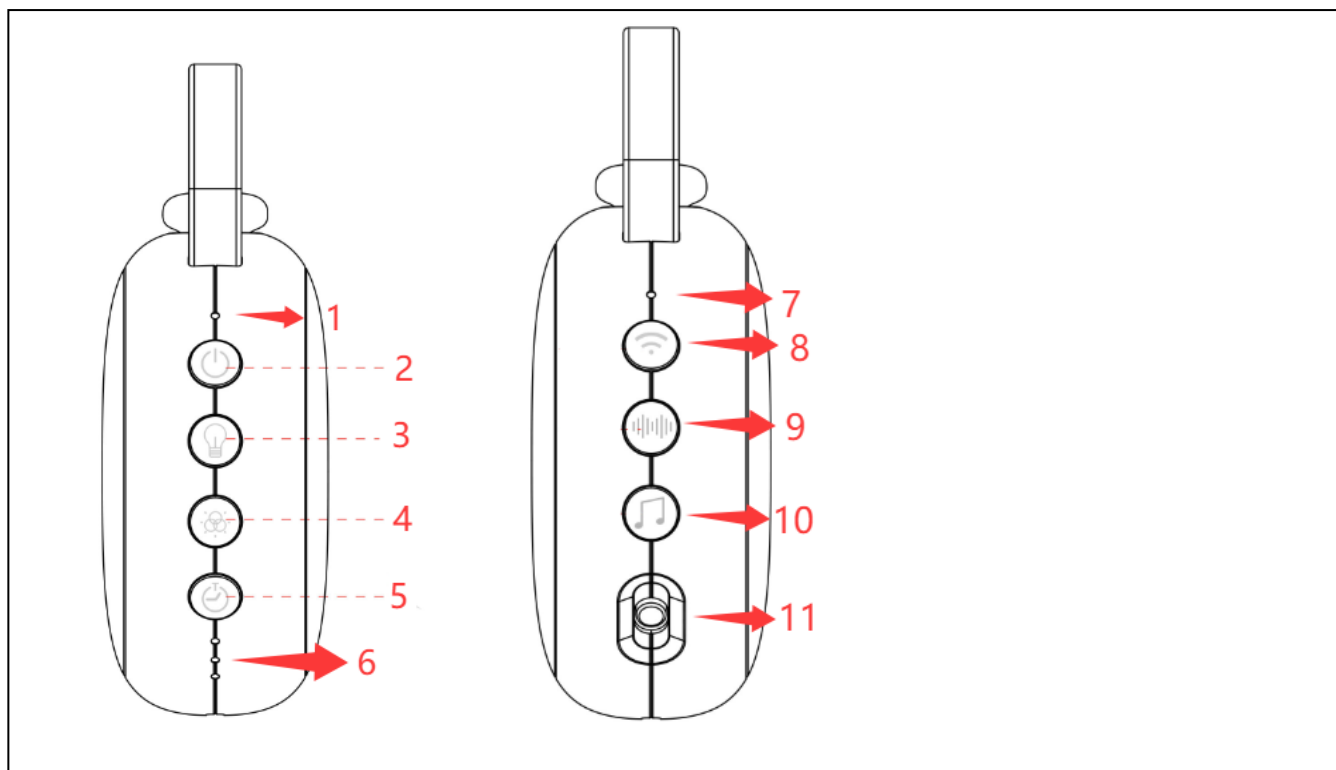

1.) Power Indicator

After turn on the machine, the indicator is no light.

NOTES: The indicator will show solid red while charging. After fully charged, it will show solid green. And it will flash red in low battery.

2.) Power Switch

Press and hold this button to turn on/ off. Default mode is white noise machine when the machine is turned on.

NOTES: After starting up, the machine remembers all the settings before the last shutdown.

3.) Night Light Switch

Press this button to turn on/ off the Night Light. Press and hold this button to select brightness of night light. This will start a cycle between brightest and darkest. When you' ve reached the desired brightness, just release the button.

Note: When the machine is off, night light also can be turned on.

4.) Color Light Adjust

Press to select color from red, orange, yellow, green, cyan, blue, violet and white. Press and hold to display 7 mixed color light gradually.

5.) Timer Button

Press this button to choose the timer as: 30/ 60/ 90 minutes and non-stop. No indicators is on for non-stop timer start.

NOTES: Press and hold the Timer Button for 3 seconds, your sound, volume and timer settings will go back to the default.

6.) Timer Indicator

After select a sleep timer ranging from 30/ 60/ 90 minutes to enter sleep mode. The timer indicator will light up accordingly. If you want to leave your device on all night, please press the timer button until there is no timer indicator light on.

7.) Wireless Indicator

This Indicator will flash blue quickly while you press the wireless button.

8.) Wireless Button

(1) Use this button to pair your mobile phone and sound machine.

(2) Ensure bluetooth is active on your device. And power on sound machine.

(3) When you press this Wireless Button, the Wireless Indicator will flash blue quickly.

(4) Complete pairing on your device via the bluetooth settings. When the device is paired, the Wireless Indicator will turn solid blue.

NOTES: If pairing is unsuccessful after 10 minutes, this product will auto power off to save power.

9.) White Noise Button

Press to choose from built-in **3** different kinds of white noise and fan sounds, a circular tone can be heard after one loop.

10.) Nature Sounds Button

Press to choose from built-in **15** different sounds: Forest Bird, Cricket, Wind, Ocean Waves, Stream, Drizzle, Thunder&Rain, kneading the plastic bag, Campfire, Train, Lullaby, Fetal Sound, Little Star, Shush, Meditation. A circular tone can be heard after one loop.

11.) Child Lock Switch

A safety feature to prevent children from operating all the functions.

NOTES: The indicator will show solid red while charging. After fully charged, it will show solid green. And it will flash red in low battery.

12.) 360° Rotating Switch for Volume Adjustment

Rotate upwards to increase the volume. a "ding" prompt sound can be heard at maximum. Rotate downwards to decrease the volume.

13.) TYPE-C Charging Port

For use with 5V/ 1A Power Adapter

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to

The following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.