 


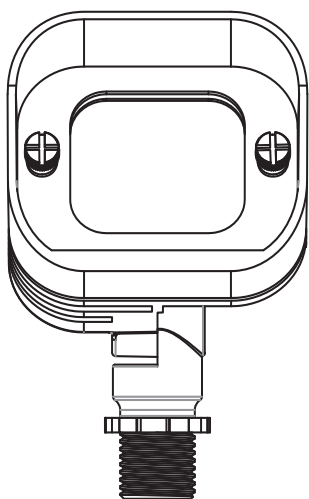

INSTALLATION INSTRUCTIONS

LOW VOLTAGE LANDSCAPE LIGHTING

INSTALLATION INSTRUCTIONS

IMPORTANT: PLEASE READ BEFORE INSTALLATION

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Make sure that the power is turned OFF before installing or servicing this luminaire.
2. **WARNING:** risk of electrical shock. Install all luminaires 10 feet (3.05M) or more from pool, spa or fountain.
3. This luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Wiring connections must be made with UL listed wire connectors that are suitable for outdoor use.
5. Position the low voltage wire and wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.
6. The main low voltage cable is intended for shallow burial - less than 6 inches (152 mm).

IMPORTANT SAFETY INSTRUCTIONS

**INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS
LIGHTED LAMP IS HOT!**

WARNING – TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS.

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate the luminaire fitting with a missing or damaged shield.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

IMPORTANT FCC INSTRUCTIONS AND WARNINGS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement:

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

 
PACKAGE CONTENTS

- A. (1) Fixture Body
- B. (1) Allen Wrench
- C. (1) Frosted Lens
- D. (1) Diffused Lens

PARTS REQUIRED (SOLD SEPARATELY)


- A. (1) Mounting Accessory

PRODUCT DIMENSIONS

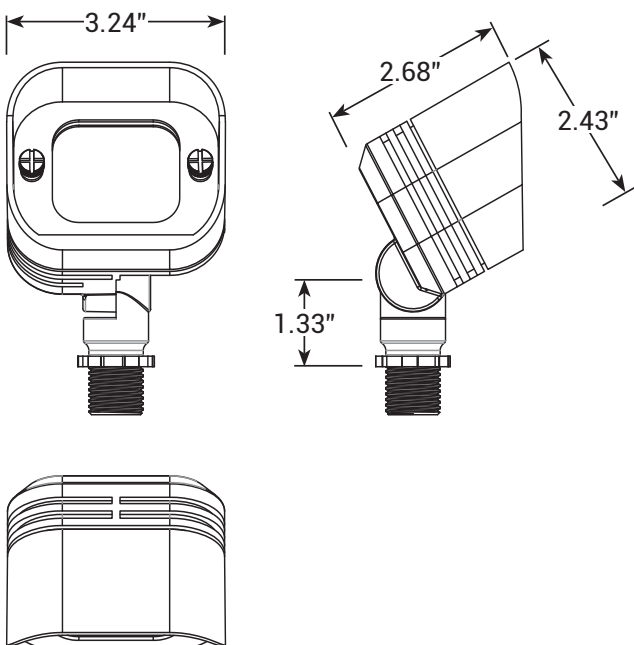

INSTALLATION INSTRUCTIONS

 
1 INSTALL STAKE

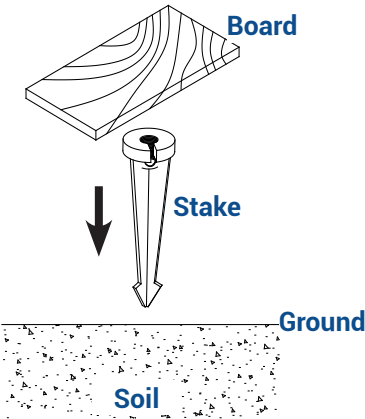

Determine the desired location for mounting the stake. Hammer the stake into the ground until flange of stake is flush to grade. To avoid damage to the stake, place a board on top of the stake while hammering.


Note: If the ground is hard and the stake is difficult to install, make a crosscut in the ground using a flat shovel.

 2 INSTALL FIXTURE BODY TO STAKE

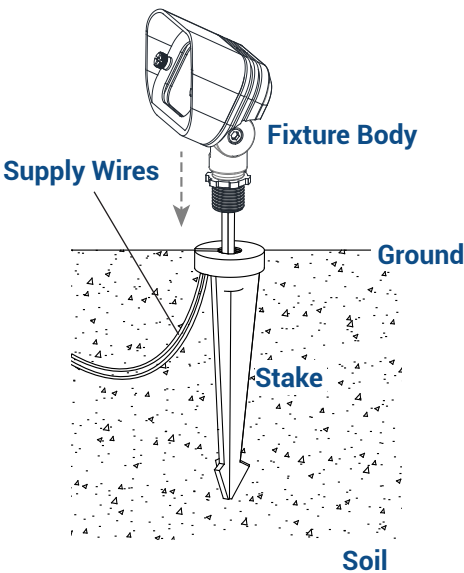


Pass supply wires through the center hole of the stake and thread the stem onto the stake. Hand tighten until snug. Clear away an area in the ground and lay supply wires into wireway slots.

 3 WIRE CONNECTIONS

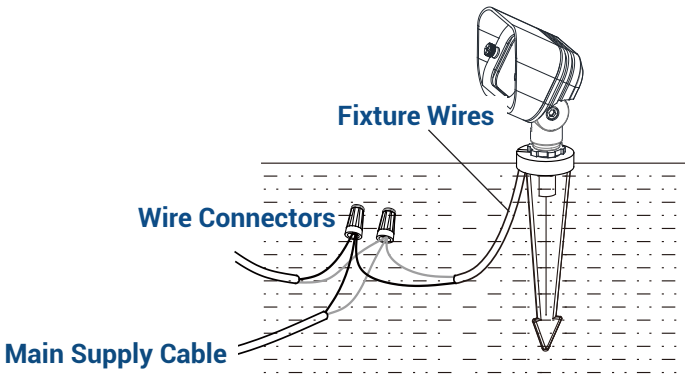

Strip two leads from fixture wires. Using two UL listed wire connectors (not provided), connect leads from fixture wires to main supply cable leads.

 4 ADJUST DIRECTIONS

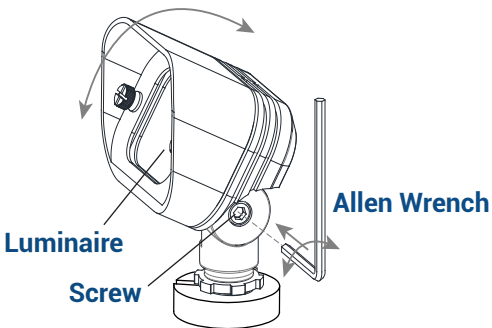

By using the Allen wrench, unlock the screw at the joint to adjust the luminaire directions. Always tighten the screw while the desired direction is achieved.

 
INSTALLATION INSTRUCTIONS

HOW TO REPLACE LENS

There are three lenses provided with product. A clear lens has been installed on the product as a default lens, which can be replaced with a frosted lens or diffused lens by using the following steps.




Frosted Lens

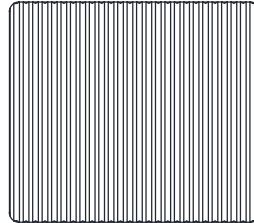

Diffused Lens

 5 REMOVE GLARE GUARD AND GASKET WITH LENS

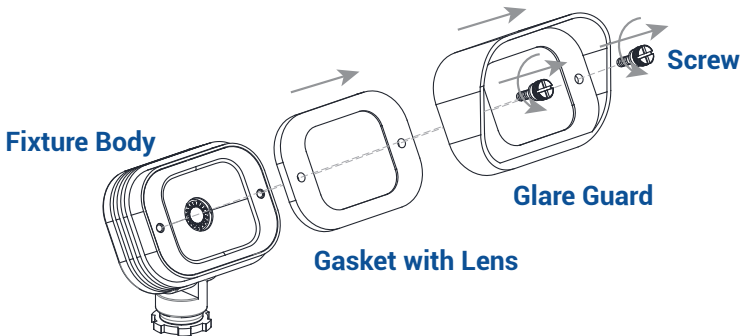


Unlock the screws to remove the glare guard and gasket with lens from the fixture body.

6 REMOVE CLEAR LENS




Remove the clear lens out of the gasket.

 7 INSTALL FROSTED LENS OR DIFFUSED LENS

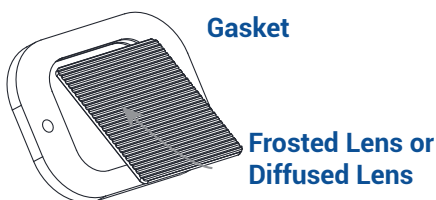

Insert the desired frosted lens or diffused lens into the gasket.

 
8 INSTALL GASKET WITH LENS AND GLARE GUARD

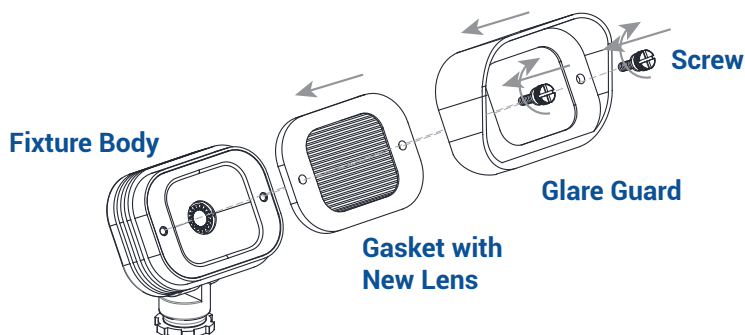

Place the gasket with new lens, the glare guard back onto the fixture body and secure with previously removed screws. Hand tighten until snug.

INSTALLATION INSTRUCTIONS

 REMOTE CONTROLLER INSTRUCTIONS

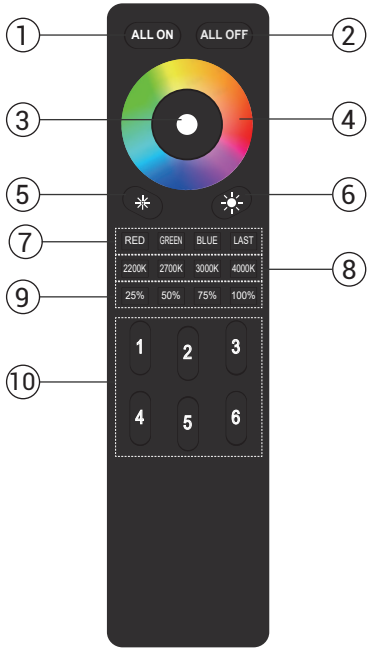

No.	Button Name	Function Description
1	ALL ON	Turns on all lights which are controlled by this remote that are within range.
2	ALL OFF	Turns off all lights which are controlled by this remote that are within range.
3	Indicator	Illuminates red when any button is pressed to indicate signal transmission.
4		RGB color wheel. Touch the desired color to change the light fixture within the selected zone and within range to that color.
5,6	 	Decrease or increase the light fixture brightness on the selected zone and within range by pressing the corresponding button.


No.	Button Name	Function Description
7	RED, GREEN, BLUE, LAST	Quick color selector button: RED: Adjusts the light to RED. GREEN: Adjusts the light to GREEN. BLUE: Adjusts the light to BLUE. LAST: The most recent color that was selected on the color wheel.
8	2200K, 2700K, 3000K, 4000K	Preset color temperature (CCT) button: Adjusts the light to a specific color temperature (CCT): 2200K, 2700K, 3000K and 4000K.
9	25%, 50%, 75%, 100%	Preset brightness button: Adjusts the light brightness: 25%, 50%, 75% and 100%.
10	1,2,3,4,5,6	Short press to select desired zone. Long press to turn zone on or off.

1 INSTALL AAA BATTERIES



Open the battery cover, install two AAA 1.5V batteries into the battery compartment. Pay attention to the "+" / "-" polarities of the battery when installing. Always reinstall the battery cover after installing AAA 1.5V batteries.

 2 PAIR CODES

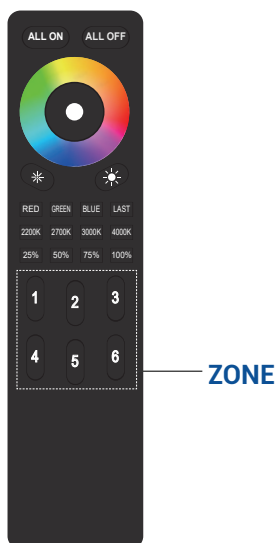

All products default to a factory setting. The lights must be paired by the remote controller before using them.

1. Install light(s).
2. Power the light(s) on. The light(s) will blink between warm and cool light for 30 seconds indicating pairing mode.
3. While the light(s) are in pairing mode, press the desired zone number on the remote once to pair the light fixture(s) with that zone. Cool white light (4000K) will flash three times indicating that the fixture is paired successfully with the zone. The light(s) will turn to warm white light (2200K).

4. Using the same process you can pair additional fixtures to the same or different zones.

Note:

1. Please ensure light(s) are within range of the remote controller.

INSTALLATION INSTRUCTIONS

2 PAIR CODES (CONTINUED)

2. If zone pairing fails, power the light(s) OFF and ON, then repeat the above steps.
3. If pairing operation is not completed within 30 seconds, the lights will return to their default static cool white CCT (4000K). Once in this state, whenever the light(s) are powered OFF and back ON, the light(s) will re-initiate pairing mode for 30 seconds. This process will continue until pairing is successful.
4. The RF bulb(s) or fixture(s) can be paired with a maximum of 4 remote controllers. Power the light(s) OFF and ON and within 30 seconds the bulbs and fixtures can be paired with another remote controller by pressing the desired zone number. The fixture will flash cool white light (4000K) once after successful pairing. The bulb(s) or fixture(s) can be controlled by any of the paired remote controllers.
5. If more than four remote controllers are paired to the lights successfully, the first remote controller will be unpaired automatically. Only the last four remote controllers are functional.

3 ADJUST BRIGHTNESS

 


1. Select the desired lights by pressing the zone to which they have been assigned.
2. Press the brightness increase button to increase the light brightness, or press the brightness decrease button to decrease the light brightness.

Note:

1. Press the  or  button once and the brightness will adjust one level.
2. Long press the  or  button, and the brightness will gradually increase or decrease until the button is released.

4 PRESET COLOR ADJUSTMENT

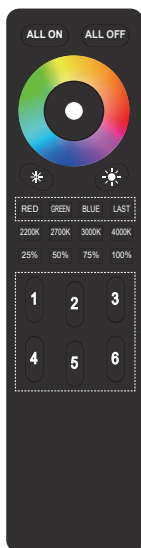


Preset Color Button

ZONE

1. Select the lights by pressing the zone they are in.
2. Press the preset color button to adjust the lights to a specific color.
 - RED: Adjusts the light to RED.
 - GREEN: Adjusts the light to GREEN.
 - BLUE: Adjusts the light to BLUE.
 - LAST: Get the most recent color that was selected on the color wheel.

 5 PRESET COLOR TEMPERATURE ADJUSTMENT

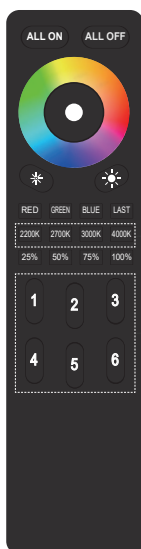

CCT Button

 
ZONE

The preset color temperatures of the CCT button are 2200K, 2700K, 3000K and 4000K.

1. Select the lights by pressing the zone they are in.
2. Press the CCT button to adjust the lights: 2200K-2700K-3000K-4000K.

INSTALLATION INSTRUCTIONS

6 PRESET BRIGHTNESS ADJUSTMENT

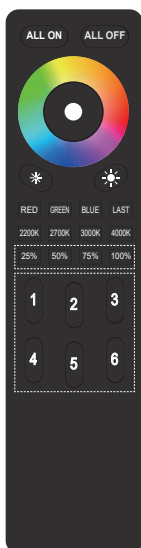


Preset Brightness Button

ZONE

The preset brightness buttons are 25%, 50%, 75% and 100%.

1. Select the lights by pressing the zone they are in.
2. Press the preset brightness button to adjust the lights brightness: 25%-50%-75%-100%.

 7 ADJUST COLOR

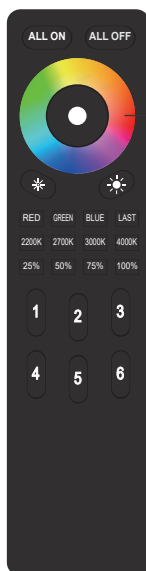


RGB Palette

Use the RGB Palette wheel to select colored light modes.

8 CONTROL BY GROUP

 All ON




ZONE
(Group)

1. **To control lights by group,** Select the lights by pressing the zone they are in. And then press respective function buttons to adjust the lights.

9 UNPAIR LIGHTS

 All ON



ZONE

If you need to re-pair the light(s) that have already been paired to a different zone, they must be unpaired first.

1. **To unpair lights by group,** turn off the light(s) that are required to be unpaired and then back on. Select the light(s) by pressing the zone they are in. Press the corresponding zone button 6 times.
2. **To unpair all lights,** turn off all lights and then turn on all lights. Press the all "ON" button 6 times.
3. After pressing six times, the corresponding lights will flash three times and then turn off, indicating that unpairing is complete. Now the lights will be restored to the factory settings.
4. If you need re-pair the light(s) in any zone, power off and power on the light(s), and repeat the processes of step 2 "PAIR LIGHTS TO REMOTE CONTROL".

Note:

1. When the lights are ready for unpairing, you must only press zone button 1 to 6 in the zone area or "ON" button. Otherwise, unpairing will fail.
2. If unpairing fails, the process needs to be re-initiated.
3. To reset the pairing, first remove power from the fixture for 3 seconds, then add power to the fixture. Reset the pairing by pressing the fixtures associated zone # button or "ALL ON" button 6 times. To re-pair the fixture, first remove power from the fixture for 3 seconds, then apply power to the fixture. Last select the desired zone # when fixture is in pairing mode.

INSTALLATION INSTRUCTIONS

