

FINX Tag

USER MANUAL

Require system
iOS® 14.5 and iPhone® 6s above
Android 9 above



FX-6,FX-1, FX-2, FX-3, FX-4, FX-5, FX-7, FX-8, FX-9, HD-P16-6



Main Functions

Locate your item

Apple's Find My network and Google Find Hub service provide an easy, secure way to locate compatible personal items on a map using the Find My app on your Apple or Android devices. This device supports both Apple Find My network and Google Find Hub, Pairing requires an Apple or Android phone or tablet, with iOS 14.5 or Android 9 and above, but these two services cannot be used simultaneously. Activating one will automatically disable the other.

Technical Specifications

Model: FX-6

Dimension: 32 mm x 32 mm x 8.2 mm

Battery: CR2032

Material: ABS

IOS

Button & Sound Description

1. Battery on

When the battery is installed, there will be a beep sound, start pairing broadcast, and timeout and shut down after 3 minutes.



2. Power on

Press the button once (a beep will sound).

3. Power off

Press and hold the button for 5 seconds (two short beeps will sound).

4. Resetting

In the power-on state, press six times quickly, and there will be a long beep for 1 second.

5. Play Sound

Press "Play Sound" in the App (a beep will sound)

6. Remove Item from Find My App

Successful removal with a long beep for 1 second.

Quick instructions

1.1 Power On / Off

Power on: Press the button once (a beep will sound).

Power off: Press and hold the button for 5 seconds (two short beeps will sound).

1.2 Check For Updates

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

2.1 Add Your FINX Tag

Start The App, Open Find My app on your supported iPhone. Turn on the bluetooth and network of your phone.

2.2 Connect Your FINX Tag

Press the switch on/off button once to power on your FINX Tag, then "Add Other Item". Once your FINX Tag is located, tap "connect", Enter a name and choose an emoji for your FINX Tag and tap "Continue". Find My will ask for confirmation to your Apple ID, Tap "Agree" and "Finish", then your FINX Tag will be set up and ready to be used.

3.1 Find FINX Tag When It's Nearby

Open **Find My app** and select the "Items" tab or open the Find Items app on your Apple Watch. Tap your item from the list. Tap "Play Sound" to make your FINX Tag beep. Tap "Stop Sound" to stop the beeps once you find it.

3.2 Find FINX Tag Location

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap your FINX Tag from the list. Your FINX Tag location will appear on the Map with a time stamp of when the item was located. To navigate to the FINX Tag's location, tap "Directions" to open Apple Maps.

4.1 Notifications

Enable "Notify When Left Behind".

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your item from the list. Under "Notifications", enable the "Notify When Left Behind" toggle. You will receive a notification when you leave your FINX Tag behind and it's no longer in range of your device.

4.2 Enable "Notify When Found"

Under "Notifications", enable the "Notify When Found toggle.

When your FINX Tag is seen by another Find My network device, you will receive a notification of its location. Note : "Notify When Found" can only be activated

when your FINX Tag is out of range.

5.1 When Your FINX Tag Is Lost / Enabling "Lost Mode".

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap on your item from the list. Under "Lost Mode" tap "Enable". A screen detailing Lost Mode will pop up, tap "Continue". Enter your phone number or email address and tap "Next" You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode" Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

Note: When "Lost Mode" is enabled, your FINX Tag is locked and cannot be paired to a new device.

6.1 Resetting FINX Tag

In the power-on state, press six times quickly, and there will be a long beep for 1 second.

6.2 Factory Reset Your FINX Tag

After successfully removing the FINX Tag from Find My app. Press the FINX Tag's switch on/off button six times quickly, and there will be a long beep for 1 second. The FINX Tag is now reset and ready to be paired to a new Apple ID/iOS device.

7.1 Unwanted tracking

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified, Find My will send a notification to your Apple devices. This feature is available on iOS or iPadOS 14.5 or later. This features were created specifically to discourage people from trying to track you without your knowledge.

iOS Compatibility

To use Google Find Hub app on your Android phone or tablet to locate FINX Tag, the device must be running Android 9 or later with Google Play Services installed. The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android

Product Overview

FINX Tag is a smart tracker device that uses Google Find Hub service, paired with the "Google Find Hub" app on Android devices, to quickly and securely locate your personal items on Google Maps. All location information remains private, and even Google cannot access it.

Before You Start

- FINX Tag only supports the "Google Find Hub" app. Please make sure to download and install this app from the "Play Store" before use.
- The device is compatible only with Android devices running **Android 9 or higher**.
- FINX Tag does not support Huawei devices.
- Once FINX Tag is paired with a device, it will be locked and cannot be paired with another device.

Button and Sound Instructions

Power On: Press the button once (a beep will sound).

Power Off: Press and hold the button for 5 seconds (two short beeps will sound).



Reset:

1: Open the "Google Find Hub" app, select your FINX Tag, tap the Settings button, then tap "Remove from Find My Device" and confirm.

2: After removing it, press the FINX Tag button 6 times rapidly, and when you hear a long beep, the device will be reset.

Note: Please power on the FINX Tag and remove the device from the "Google Find Hub" app before resetting.

Fast Pair Instrcuton

Add FINX Tag

1. Make sure your phone's Bluetooth and network are turned on.

2. Press the button once to turn on FINX Tag (a beep will sound).

3. Bring FINX Tag close to your Android device and wait for the pop-up to show FINX Tag. (Remark: If no pop-up appears, please restart your phone and try again).

4. Tap "Connect", read and accept the prompts to complete the pairing.

5. In the "Google Find Hub" app, select "FINX Tag" to customize the device name and Category.

FINX Tag will automatically power off after 3 minutes of standby.

Find Nearby

In the "Google Find Hub" app, select your FINX Tag and tap "Play Sound" to locate your device. Once found, tap Stop Sound to silence the device.

Find Far Away

In the "Google Find Hub" app, select your FINX Tag, tap the device to view its location.

To navigate to the location, tap "Get Directions" to open map navigation.

Enable Lost Mode

In the "Google Find Hub" app, select your FINX Tag and tap "Mark as Lost". Add your contact information and you will get a notified if the Find My Device network locates it.

FINX Tag Location Sharing

In the "Google Find Hub" app, select your FINX Tag, then tap "Share Device".

Connect to another phone

After completing the reset process, then connect to another Android phone.

Manual Set Up Instruction (If you miss the pop-up)

1. Open Settings.

2. To "Google".

3. Click on "All Services".

4. In the "Connected Devices & Sharing" menu, select "Devices".

5. Enable "Scan for Nearby Devices".

6. FINX Tag will appear in the list of available nearby devices.

7. Click on it and follow the on-screen instructions to complete the connection.

Battery

FINX Tag contains a button battery. The battery may need to be replaced during the life of the product. Replace only with batteries of the same type (CR2032) and rating, observing correct polarity.


Battery replacement:

1. Disassemble the product into two parts through the gap between the upper cover and the lower cover.

2. Remove the battery.

3. Insert the CR2032 battery into the device with the positive (+) side facing up.

4. Connect the upper cover and the lower cover, and press tightly.

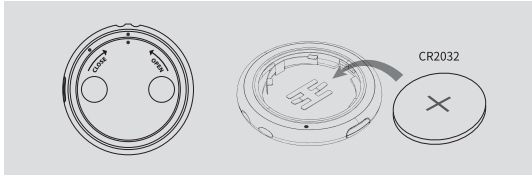

*After replacing the battery, you can use it without reconnection.

2-Year Limited Warranty Service

Effective from the date of purchase, If the product encounters quality issues during normal use, please contact us below and write us email with a description of the issue. Our team will verify the information and help you to solve the issue (excluding damage caused by misuse). To ensure efficient processing, we recommend keeping the original purchase proof (order number). During the warranty period, we are committed to providing you with a quick solution, so you can use our product with peace of mind!

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

⚠ WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery
- DEATH** or serious injury can occur if ingested.
- A **swallowed** button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- Seek **immediate medical attention** if a battery is suspected to be **swallowed** or inserted inside any part of the body.



a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."

b) The statement "Even used batteries may cause severe injury or death."

c) The statement "Call a local poison control center for treatment information."

d) A statement indicating the compatible battery type (e.g., LR44, CR2032).

e) A statement indicating the nominal battery voltage.

f) The statement "Non-rechargeable batteries are not to be recharged."

g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

h) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)".

i) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."

j) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."

k) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."