

Test model: BT307



Connected watch ZGPPWAB307PR001 USER MANUAL



Questions?
Need some help?
This manual will help you
enjoy your new product



If you still have questions,
call our help line:

0 811 380 340



Or visit us at :

www.polaroid-mc.com

Connected watch

ZGPPWAB307PR001 / SEC 71.06.18



EN USER INSTRUCTIONS
FR NOTICE D'UTILISATION
ES MANUAL DE INSTRUCCIONES
IT ISTRUZIONI PER L'USO
NL GEBRUIKSAANWIJZING
DE GEBRAUCHSANWEISUNG
DA BRUGSANVISNING
SW BRUKSANVISNING

Thank you for choose this Blue Tooth smart watch for sport & health. You will understand the use of the watch, and enjoy its perfect functionality and simple method of operation.

This watch is designed to pair with smart phones. It can sync phonebook with smart phone and supply many useful functions, so you can use your smart phone easily when working or relaxing. Functions as below: Bluetooth phone function, Bluetooth message push(short message, WeChat, QQ, etc, should install APK on your Android smart mobile), Bluetooth Music Player, step counter, Calories, long-distance capture, sleep monitor, anti-theft, etc...

Please install **"Smile Notification"** application or **"Mediatek SmartDevice"** application into your Android smartphone. Then your watch can read message from your smartphone.

"Smile Notification" and **"Mediatek SmartDevice"** can be downloaded in Google PlayStore.

Mediatek Smart Device



Smile Notification



Please to find below a link to video explanation about how the watch operate.

<https://youtu.be/2Uig63u0mnM>



We reserve the rights to make some modifications or advance notices about the product in this manual.

Safety Precautions

Read these safety instructions before using your device and store them for possible future reference.

- The device is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.
- Children should be monitored to ensure that they do not play with the device.

- The device should always be readily accessible.
- The device should not be exposed to dripping or splashing water.
- No objects filled with liquids such as vases shall be placed on the device.
- Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- Open flame sources, such as candles, should not be placed on top of the device.
- The device is intended for use only in a temperate climate.
- At full volume, prolonged listening to the portable audio device may damage the user's hearing and cause hearing troubles (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis).

- So we recommend not to listen to the portable audio device at high audio volume and no more than one hour per day at medium audio volume.
- The battery can't be replaced by the user, but only by the maker of this product, the after sales department or a qualified person.

SWITCH OFF IN RESTRICTED AREAS

Switch the device off where the use of the device is not allowed or where there is a risk of causing interference or danger, for example on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

ROAD SAFETY COMES FIRST

Check the current laws and regulations regarding the use of this device in the areas where you drive.

- Do not handle the device when driving.
- Concentrate fully on the driving
- Leave the road and park up before making or receiving a call, if the driving conditions allow.
- Radio signals could affect some of the car's electronic systems such as the audio stereo and alarm systems.

INTERFERENCE

All wireless devices are susceptible to interference which may affect their performance.

AUTHORISED PERSONNEL

Only qualified people are authorized to install or repair this product

ACCESSORIES

Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products.

KEEP THE EQUIPMENT DRY

This equipment is not water proof. Keep it dry.

CHILDREN

Keep your headset in a safe place, out of the reach of young children. The headset contains small parts that may present a choking hazard.

Specifications :

Rated voltage : DC 5V $\approx$ 200mA

Max consumption : 1W

Battery Li-ion 230mAh

Radio frequency : 2,4GHz

Wearing and Operation



If the watch dysfunction press the reset button in the small hole on the back of this watch

Please wear this Bluetooth Smart watch in the correct direction when wearing the watch, ON/OFF key should be at right, and 3 touch keys should be at bellow.

- Power key, Long press for ON/OFF and short press for EXIT from menu to clock. And short press at clock display to light on or off the display;
- Left touch key, menu/confirm key. Enter the menu from clock, or “confirm” in menu operation.
- Middle touch key, dial enter/page up key. Enter dial interface from clock, or page up in menu operation, or volume up/down in music and telephone.

- Right touch key, return/hang up key. No use in clock, and return in menu operation.

Otherwise, slide on the touch panel can do:

- Slide left or right: menu page up/down.
- Tap on the screen: Enter the menu.
- Slide downward: Exit the menu.

2 Bluetooth Connect, Disconnect or Reconnect

Connect way1: Watch initiate a Bluetooth connection pairing information.

Connect way2: Smart phone initiate a Bluetooth connection pairing information.

After connected, the watch will send a request to your device for reading your phonebook and call history (Involving personal privacy, some smart phones do not open this feature), please agree it, otherwise the function of synchronizing the phone book and call history will not work normally.

When the distance between the watch and the smart phone is farther than 10M (nothing obstruct such as a wall, etc), they will disconnect automatically. If near enough again in 5mins, connected automatically. Otherwise, manual reconnection is necessary.

The Bluetooth Smart watch will ring when connect or disconnect.

3 Functions

- **Blue tooth** search devices, connect/disconnect.
- **Dial** dial number in dial interface or choose number from call history.
* Don't cover the hole of MIC or Speaker when calling.
- **Short message** sync short messages from smart phone.
- **Phone book** sync phone numbers from smart phone.
- **Call history** sync call history from smart phone, include "missed calls", "dialed calls", "received calls", "all calls", each 30 items.
- **BT Notification** can read QQ, WeChat messages.

- **BT music** play music on smart phone by BT.

The audio player on should be run at first for some smart phones. Tap middle touch key or logos “+” or “-” of volume will enter the volume control interface, and this interface will auto-return after no operation, manual return is no need.

- **Tools** calendar, alarm, calculator, stop watch.
- **Long-distance capture** control smart phone to take photos by Bluetooth. Smart phone should enter camera mode at first, and display is not off. Some smart phones are not support.
- **Step Counter(Pedometer)**

Step Counter is designed specifically for those concerned about the health. Throw your chest and rise your head, and arms should swing when walk, a more accurate record will be get.

The window on up-left displays step number, up-right displays distance, and the rectangle “key” for tapping is “ON/OFF”. Below it is calories counter and time counter. There is “options” of step counter on the up-right corner, parameters and records can be set or checked by tapping in. The step counter runs background as the default.

The first several steps of the user will not show immediately on the windows to avoid false account. Display will start after steps are stable. But those first several steps will also be countered.

The step number displayed auto-return to “0” each day. Stop and restart the counter, step number increase. Clear to “0” by “reset” Through the Options menu selection.

 
- **Sleep monitor** record time of deep sleep and light sleep to know your quality of sleep.
 - **Anti-theft** watch will alarm when it is taken away certain distance from smart phone.
 - **Power save mode**
 - **Setting** clock, tone mode, volume, language, display, check the battery level, and Bluetooth settings or restore the factory settings.
- 4 The watch can be charged by a standard USB interface plug through

computer or charger.



Here is instruction of how to connect bluetooth:

1, Please install APP "Mediatek SmartDevice" into your smartphone. But no need to open the APP.

2, Please open your phone's setting menu, and turn on Bluetooth


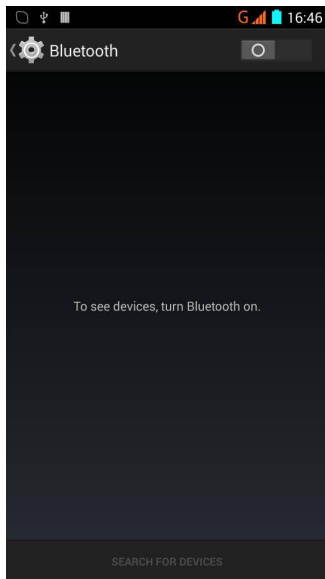


  3, Click on your mobile phone's Bluetooth name to make your smart phone is visible to all nearby Bluetooth devices.

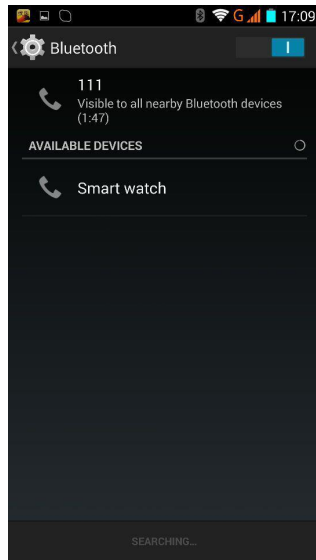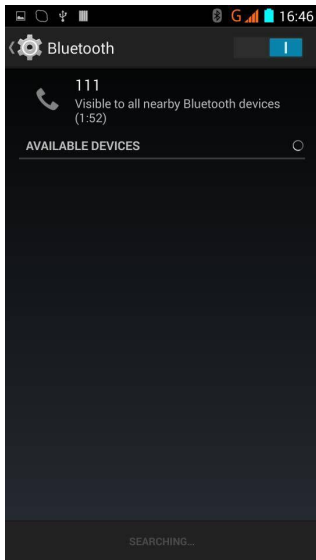


4, Open the Bluetooth icon on the smart watch, looking for equipment, when find smartphone, click to pair.

  
5, When your mobile phone and smart watches both show Bluetooth pairing request, please click Yes and pair to match.

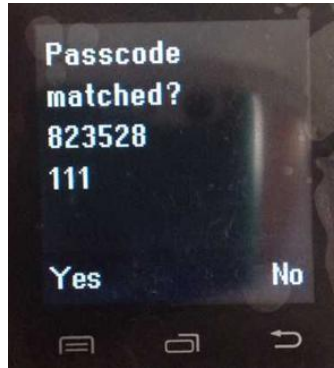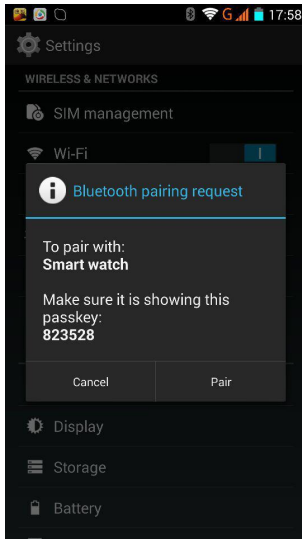

 6, After pairing with success, you will see following message: smartphone want to access your contact list and history, please click on the yes.

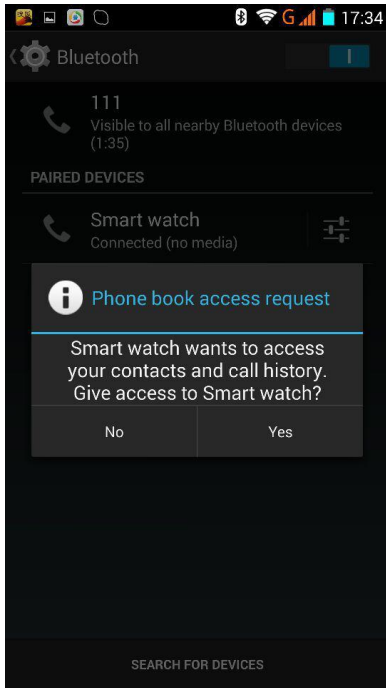


7, Bluetooth connection success.

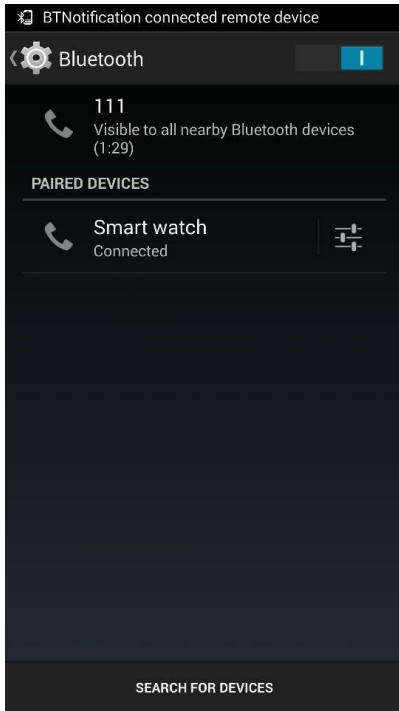 


Mediatek SmartDevice APP introduction:

 When you enter into APP, you will see like this. All the settings are pre-setted well, so you do not need to set anything here.

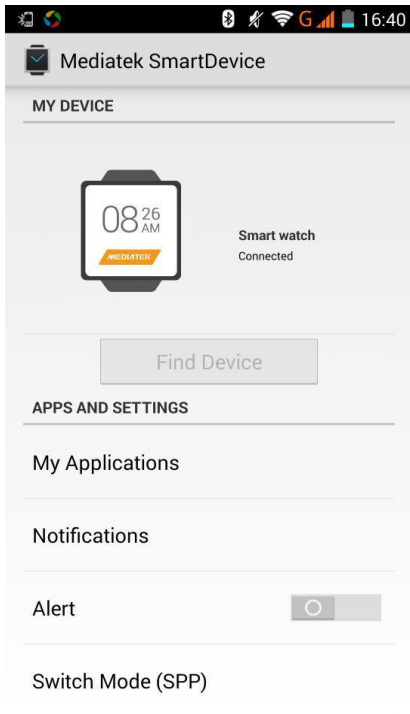

 Enter into Notifications menu, you can choose which notifications you will receive.

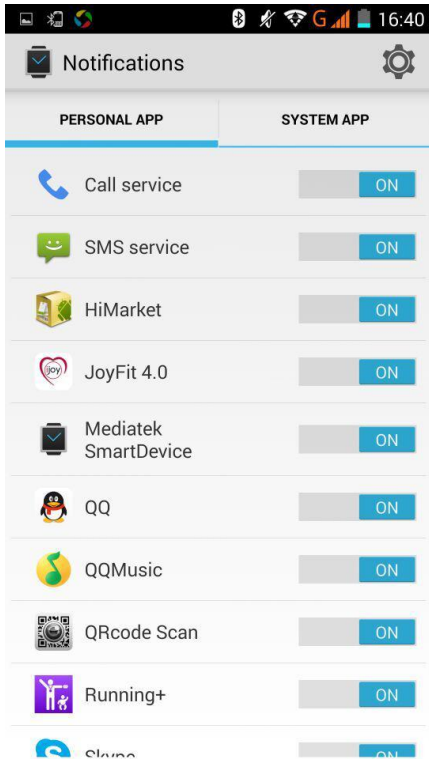

Other setting menu is not suitable for this watch.

If the APP shows: smart watch is disconnected, pls do following steps:

- 1) turn off the APP
- 2) enter into smart phone setting menu, and enter into bluetooth menu
- 3) turn off bluetooth, and then turn on bluetooth again
- 4) connect the watch again

* Pls do not search and re-connect in APP menu.

Declaration of conformity UE

Dag Technologie®, hereby declares that this equipment conforms to the essential requirements and other relevant provisions of Directive 2014/53/UE. The declaration of Conformity can be viewed at the following address :

http://www.mms-support.net/OTA/ECD_DAG_ZGPPWAB307PR001.pdf



To avoid possible hearing damage, do not listen at high audio volume for long periods of time

PROVIDED GUARANTEE

OPERATING MANAGEMENT:

Your product is guaranteed 2 year

To request support, contact the customer service at 0811 380 340

You will then be asked the defective part and the original invoice stating the product regulation.

We may ask you for photos of your appliance.

FAILURE TO PACKING:

If it appeared, after unpacking the product or device, a vice preventing the use of the product in its expected configuration, contact the customer service within 72 hours worked.

DISCLAIMER OF WARRANTY

DISCLAIMER OF WARRANTY RELATED TO THE ORIGIN OF DAMAGES

The guarantee does not apply in case of accidental physical damage, it does not cover such damage and failures that resulted:

- improper installation (of a bad installation) or a misuse or poor maintenance of the product.
- improper use of the material or not complying with the instructions in the user manual.
- lightning, flood, fire, power surge, shock, poor ventilation, a fall, discoloration due to the action of light, burning, humidity, excessive heating without humidifier, or irregular ground or insects.
- repairs made and / or working on the hardware and / or opening of it by an unauthorized person by the manufacturer.
- maintenance, repair or replacement of parts due to normal usury or failure to maintain.
- modification of the construction and original features of the guaranteed product.
- corrosion, oxidation, a bad connection or an external power supply problem.

EXCLUSION OF WARRANTIES RELATING TO THE NATURE OF DAMAGES (INDIRECTS DAMAGES)

 
The guarantee covers only the right to repair or replace the guaranteed product.

Consequently, the indirect damage resulting from the failure or damage not covered by warranty, including:

- Commissioning costs, adjusting, cleaning;
- Damage of any kind resulting from the unavailability of the product guaranteed during the period between deterioration and failure and repair or replacement of the product guaranteed.

OTHER EXCLUSIONS

- Damage and faults under specific exclusions in the warranty manufacturer guaranteed product, as mentioned in the product instructions for use;
- The aesthetic damage;
- The products guarantee that the customer is not able to return or those who returned without their accessories.

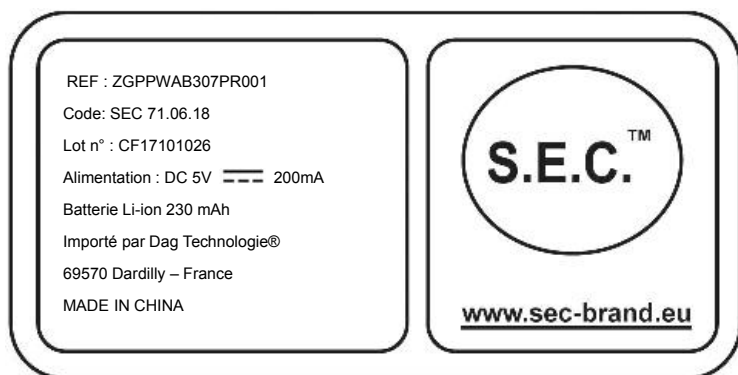

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

THE DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE PRODUCTS ON THE PART OF FINAL USERS IN THE EUROPEAN UNION

This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a “recycling point” specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.